 




PERLESMITH

# Installation Instruction

V3.0

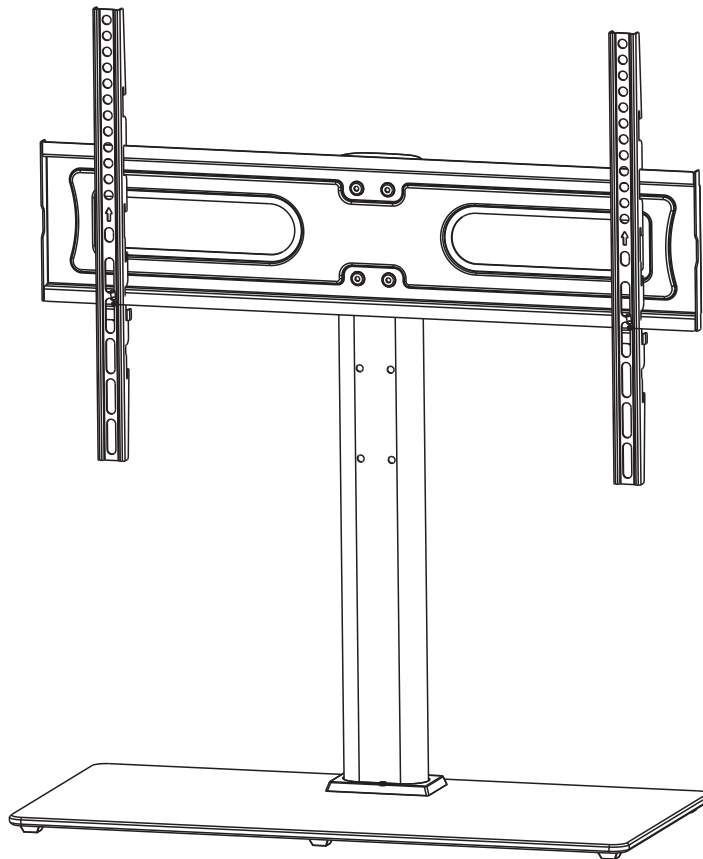

**PSTVS11**



Thank you for choosing our product! We strive to provide the best quality and services for our customers. Would you kindly share your experience on Amazon if you are satisfied? Should you have any issues, please don't hesitate to contact us.

 
 
 





Telephone: 800-5566-806 Mon-Fri 10am - 6pm (PST) (USA) (CAN)

Email: [supportus@perlesmith.com](mailto:supportus@perlesmith.com) (US/CA/DE/UK/FR/IT/ES/JP/AU)


## UNPACKING INSTRUCTIONS AND IMPORTANT SAFETY INFORMATION

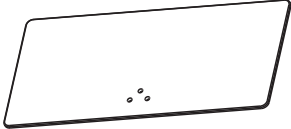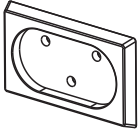- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Not all parts and hardware included will be used. If you require replacement parts, contact customer service at [supportus@perlesmith.com](mailto:supportus@perlesmith.com)
- Carefully read all instructions before attempting installation.
- If you do not understand the instructions or have any concerns or questions, please contact customer service at [supportus@perlesmith.com](mailto:supportus@perlesmith.com)
- This product may contain moving parts. Use with caution.
- Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaim any liability for injury or damage arising from incorrect assembly. incorrect mounting, or incorrect use of this product.


# Step 1 Connecting the Support Pillar to Tempered Glass

  (01) Tempered Glass		1	(02) Support Pillar		1
(03) Plastic Cover		1	(B) M6x25 Bolt		3
(C) Plastic Washer		3	(D) Steel Washer		3
(F) Foot Pads		6	(J) Wrench		1

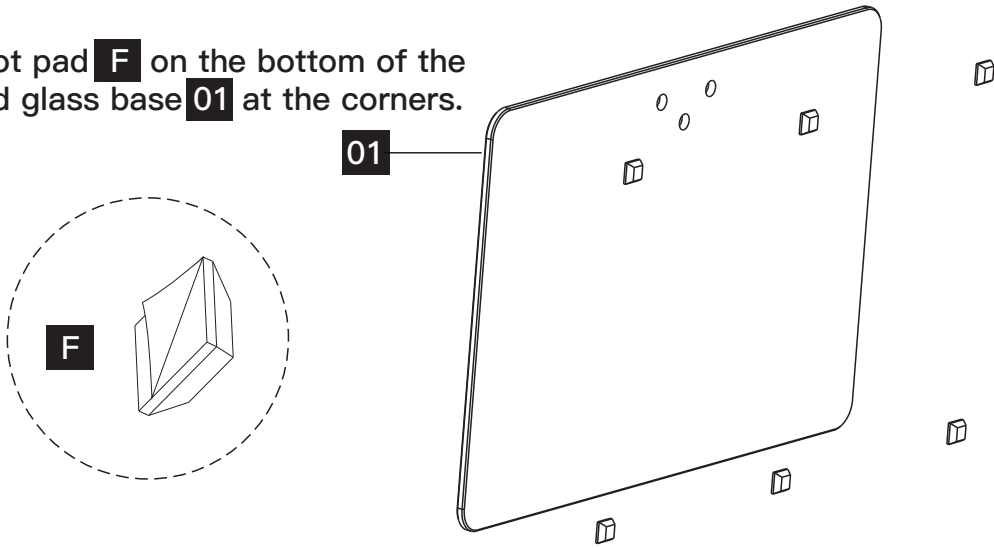

 

 
Place foot pad **F** on the bottom of the tempered glass base **01** at the corners.

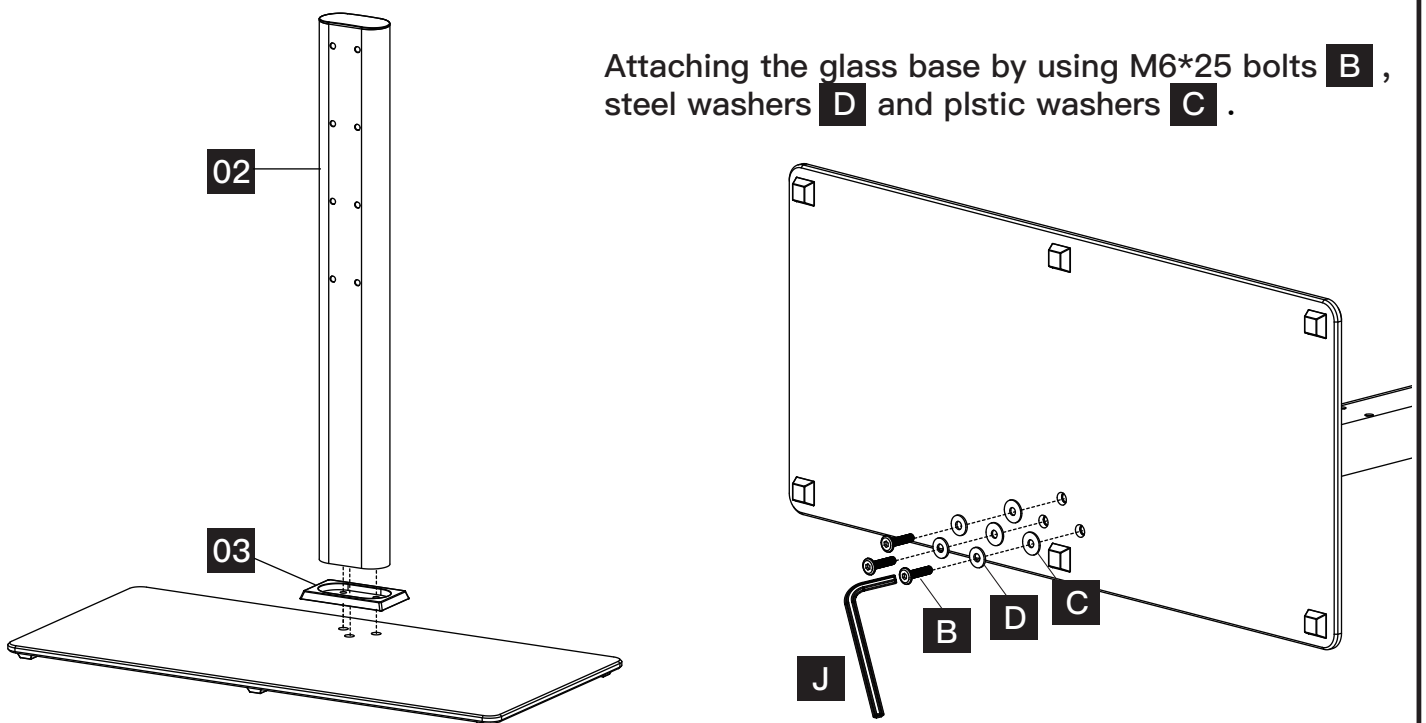

 
Attaching the glass base by using M6\*25 bolts **B**, steel washers **D** and plastic washers **C**.




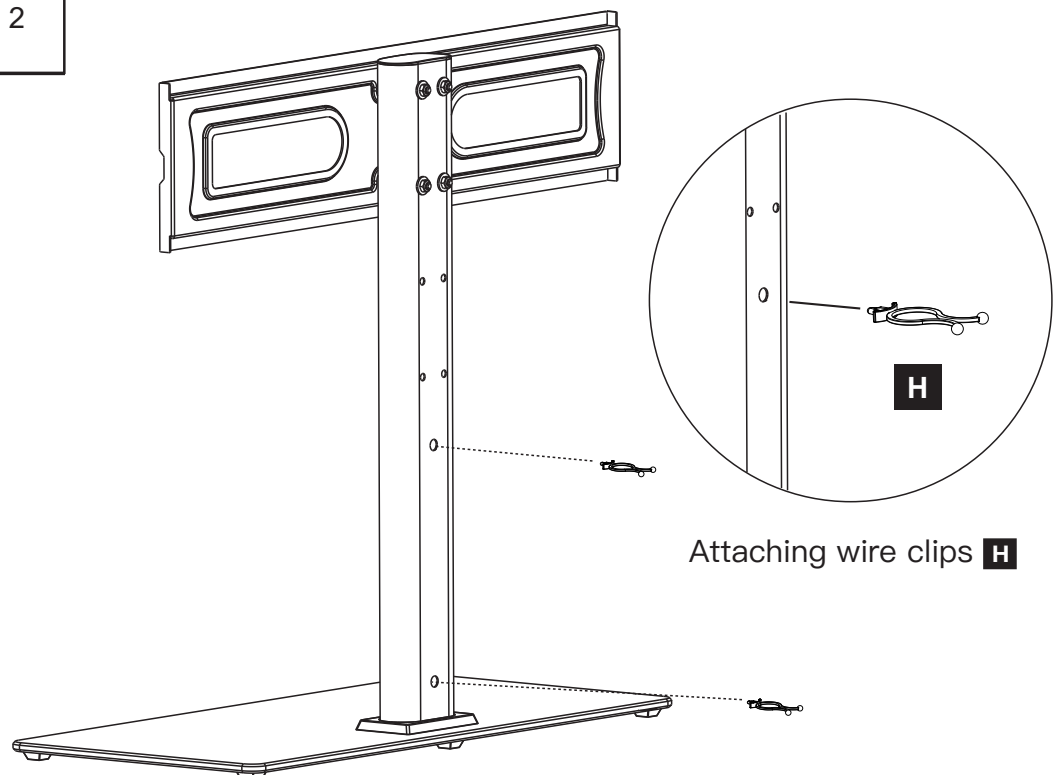 
## Step 2 Connecting the TV Plate to Support Pillar

(04) TV Plate		1	(A) M6 Nut		4
(D) Steel Washer		4	(E) M6x50 Bolt		4
(J) Wrench		1			



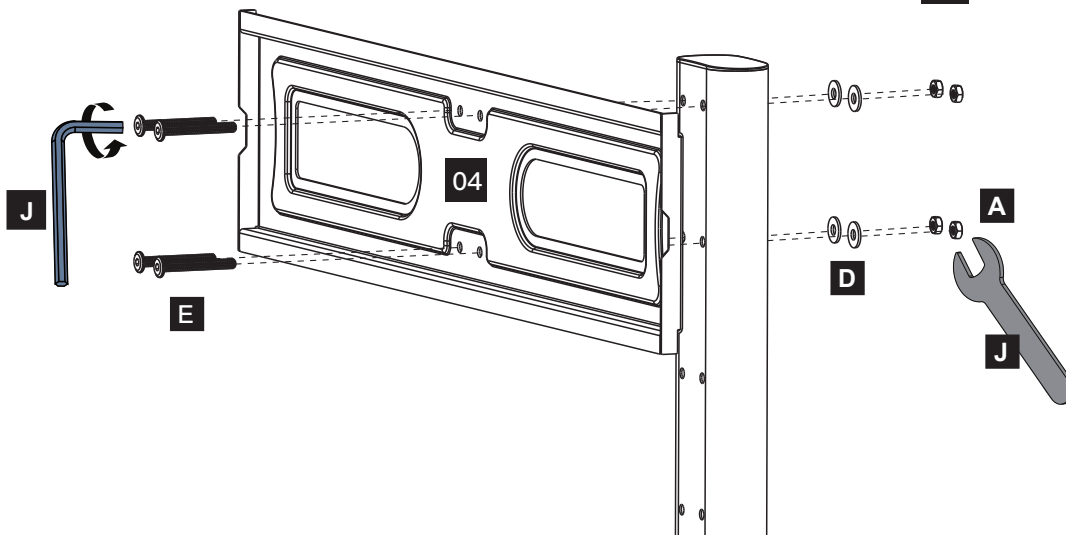 








Connecting TV plate to support pillar by using M6\*50 bolts **E** and supporting with steel washer **D** and M6 nut **A**.




(H) Wire Clip		2
---------------	---	---



## Step 3 Mounting the TV Bracket to a TV

 (05) TV Bracket		2	(I) D8		4
(TV1)	  M6x16 Bolt M6x35 Bolt	8	(TV2) M8x25 Bolt		4
(TV3) M8x50 Bolt		4	(TV4) M8x65 Bolt		4
(TV5) Washer		4	(TV6) 2.5mm Spacer		8
(TV7) 5mm Spacer		8	(TV8) 10mm Spacer		8

### Measure VESA and Check TV screws

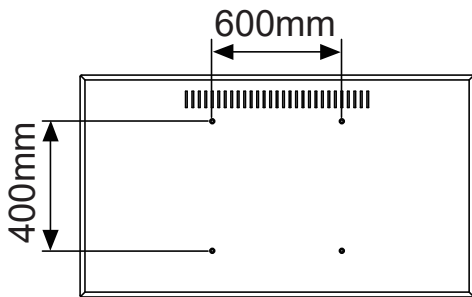


Measure the distance between the holes located at the back of your TV (these measures may form the shape of a square, or a rectangle) and check that these taken measures are within the VESA (\*) range for this wall mount. (\*) VESA: International standard established by the TV manufacturers used to determine if LCD/LED TVs are compatible with wall mounts.


100 mm  $\approx$  4 in      200 mm  $\approx$  7 7/8 in  
300 mm  $\approx$  11 3/4 in    400 mm  $\approx$  15 3/4 in

#### Check TV screws


 
Hand thread screws into the threaded inserts on the back of your TV to determine which screw diameter ( M6, or M8) to use.

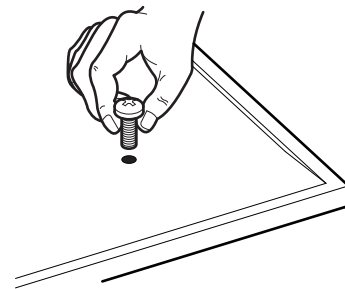

 
When attaching brackets to the flat screen, be careful not to over tighten screws and be sure that screws do not bottom out in the mounting holes.

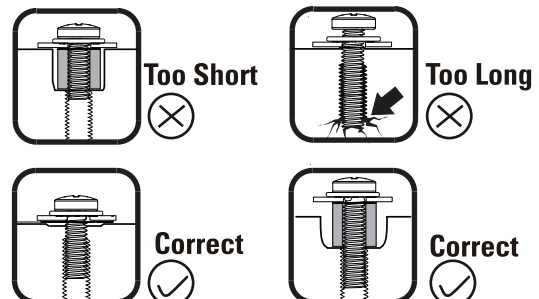



## Option A (For Flat Back TV)

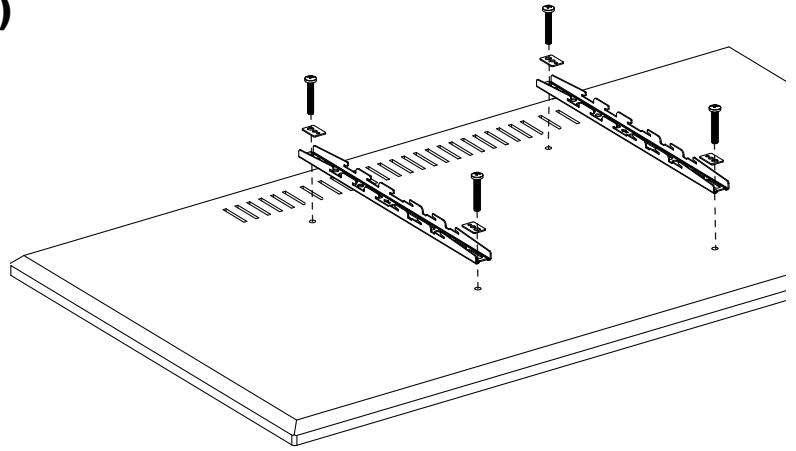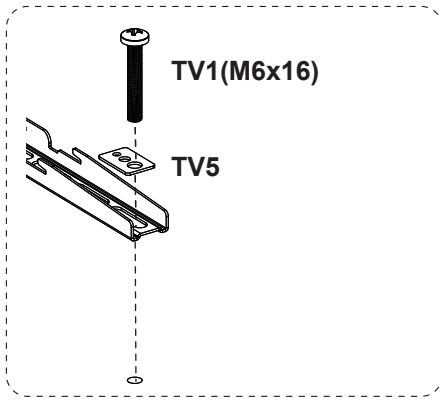  

## Option B


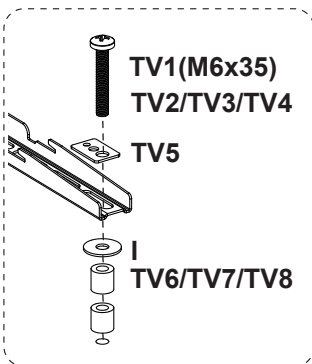 


  The spacers must be used with washers (I), to stop it falling down.

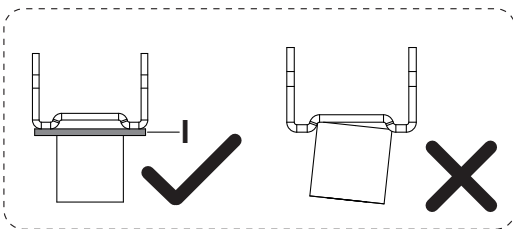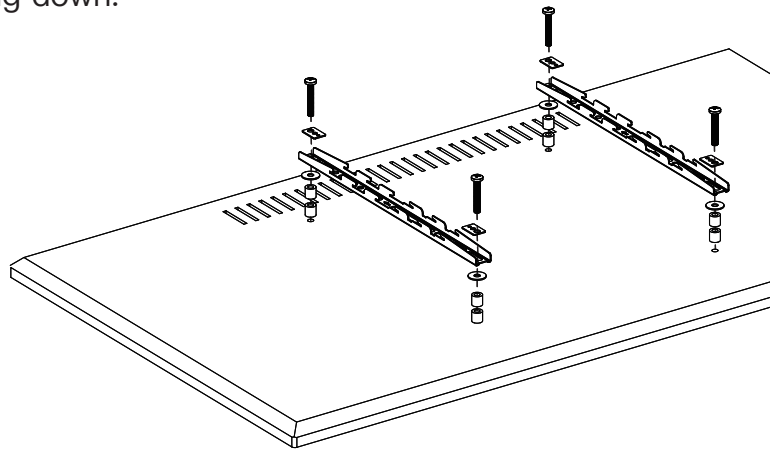


## Option C (For Round Back TV)

  If the length of the screws is too long, the spacers can be used in multi-layer. If the installation fails after trying various methods, please contact customer service at [supportus@perlesmith.com](mailto:supportus@perlesmith.com).

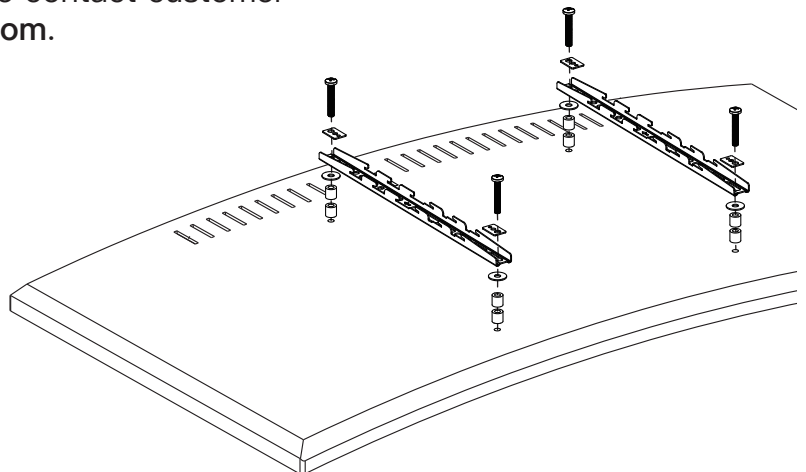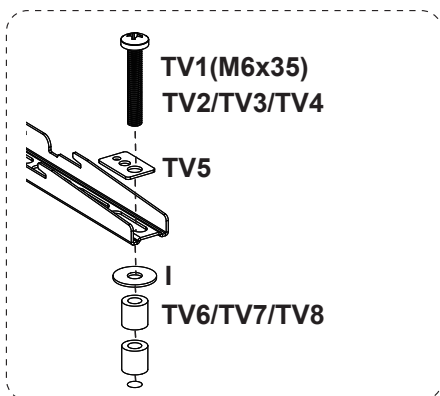




## Option D (For TV with A “Bump”)

 Spacers may be necessary for 2 holes ONLY.

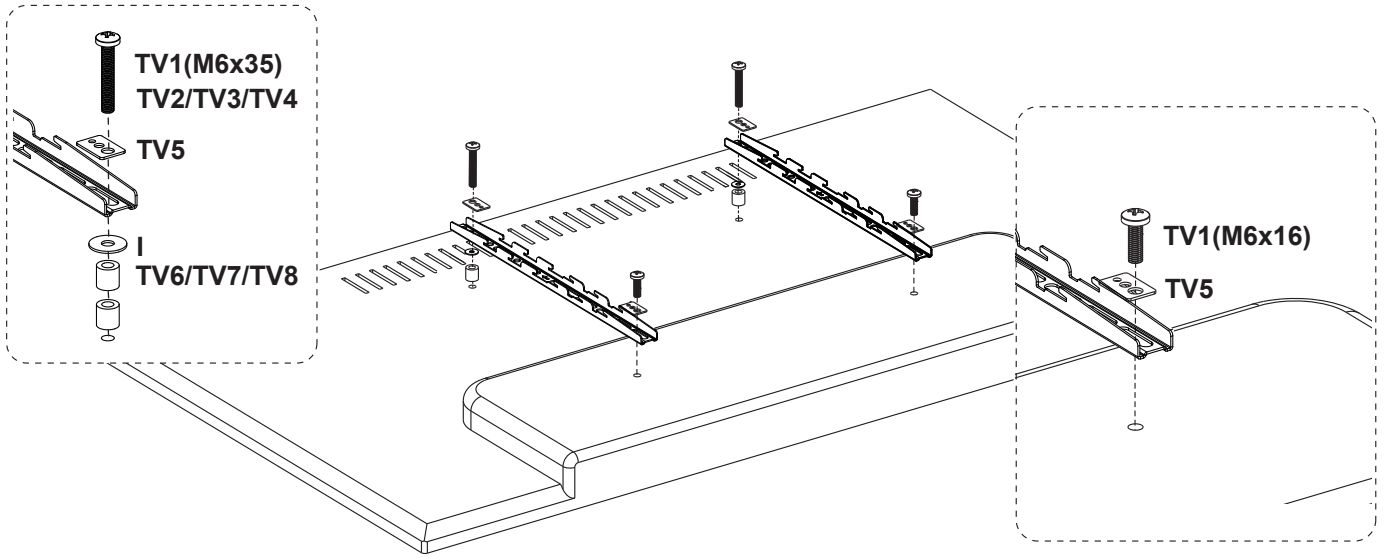



## Option E

   Spacers maybe necessary when brackets interfere with cables or USB.

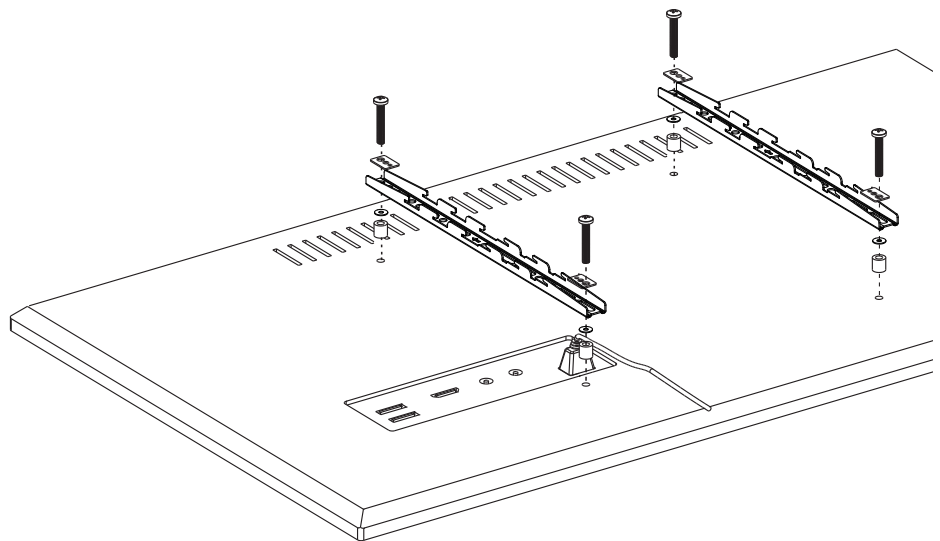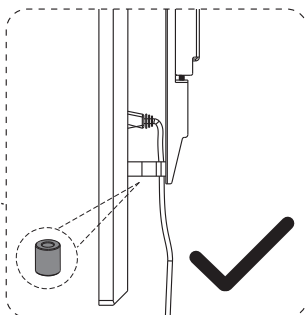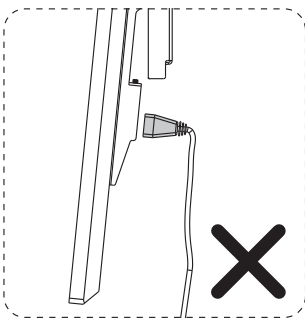

# Step 4 Attaching TV to the TV Plate and Managing the Wires

  TV brackets are three-height-adjustable. You can choose the proper height.

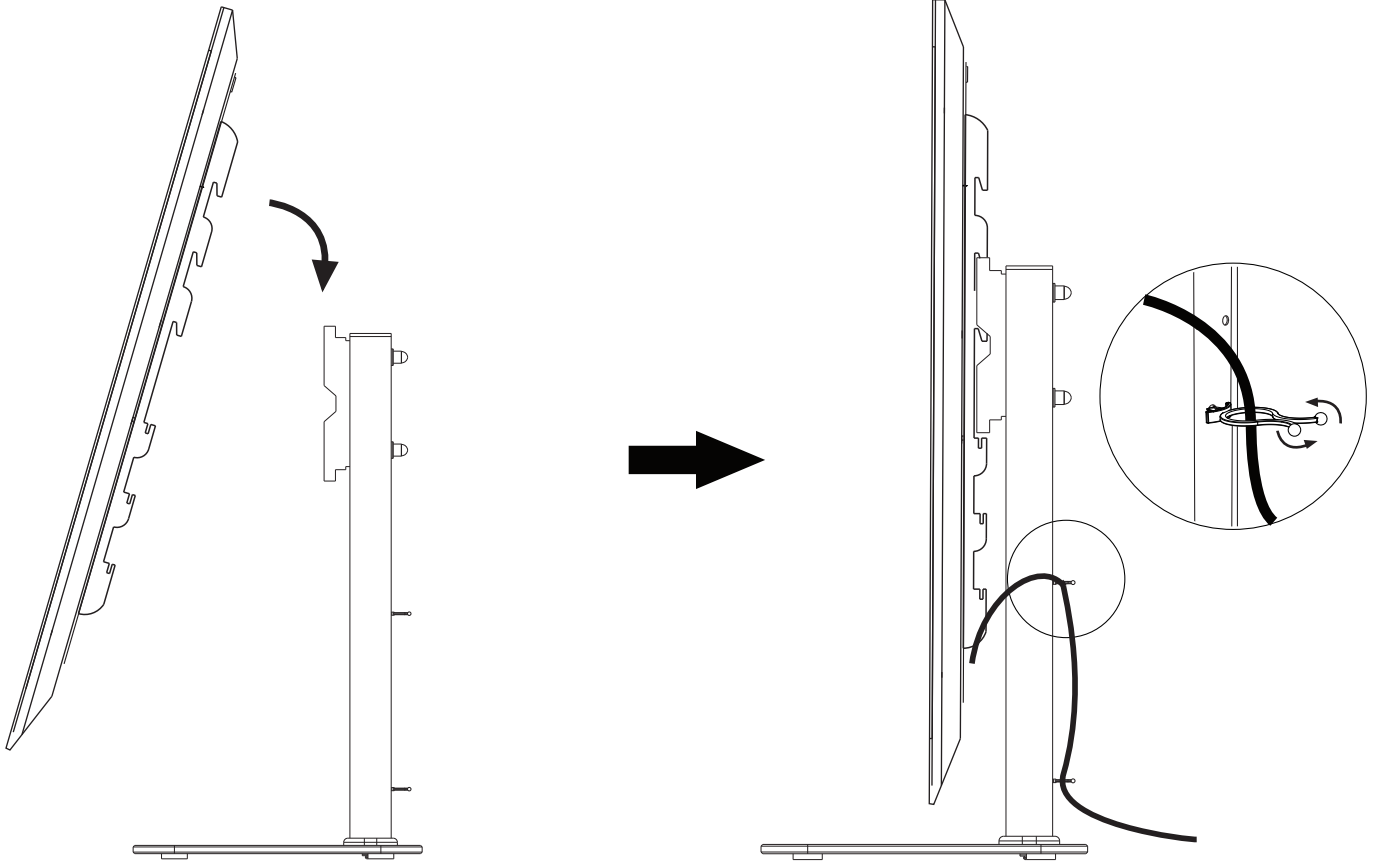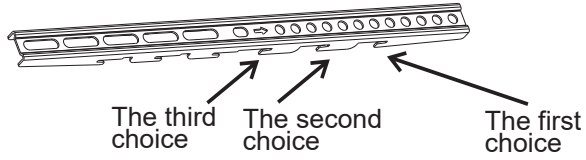


(G) Safety Lock



2

**"Be gentle"**

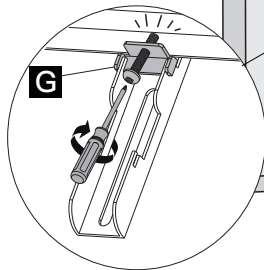 

Insert the safety lock in the bottom of the bracket and then tighten the screws.

