 




ASSEMBLY INSTRUCTIONS

CABO1800

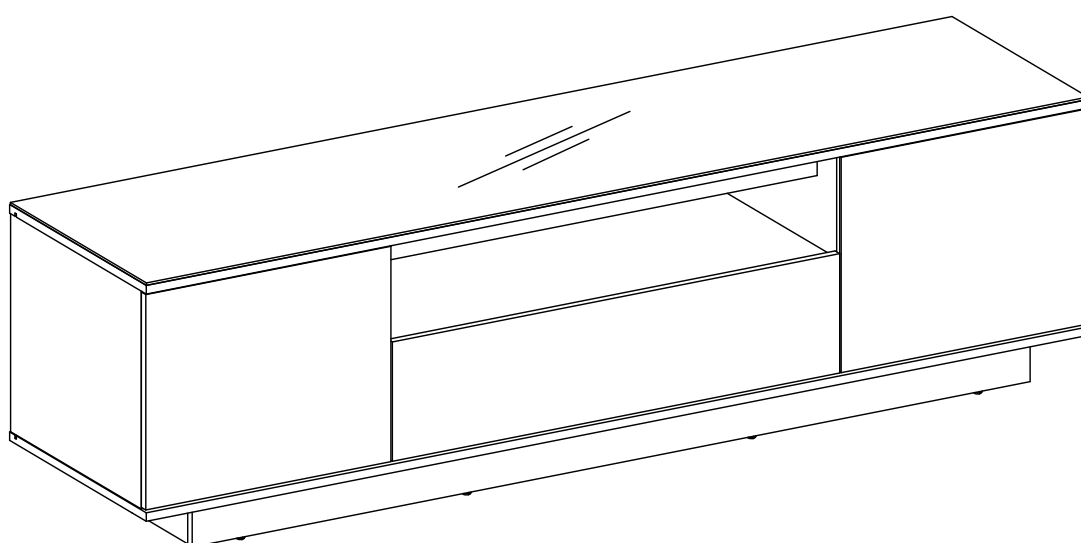

THANK YOU FOR CHOOSING AVSFURNITURE

We're proud to help you create a space that works for your lifestyle and looks great too. This furniture has been carefully designed and built using quality materials and modern manufacturing, so you can enjoy it for years to come.

Follow the instructions in this guide to get the best from your new furniture and finish your living space in style. Please retain this manual for future reference.

Before beginning, please ensure all parts are included and undamaged. If you require support, please don't hesitate to contact your store or AV Supply Group: info@avsupply.co.nz // 09 274 9172.

PRODUCT USE & CARE

 
This product is designed and tested specifically for use with TV's and TV/AV accessories, for the maximum stated weight.

- **Recommended use:** Do not exceed the stated weight limit or use the product for any other purposes other than those for which it is intended.
- **Ongoing care/Maintenance:** Regularly clean your cabinet with a dry microfibre or lint-free cloth to keep it looking its best. Do not use abrasive products or chemicals. You may use glass cleaner for any glass surfaces.
- **Assembly:** Assemble the furniture on a flat and smooth surface (such as clean carpet or a blanket) to avoid scratching the surface(s). Do not use power tools to assemble.
- **Natural flexing:** This product is constructed from engineered timber/wood materials. Over time, some minor bending or flexing may naturally occur - especially with heavier and/or unevenly distributed loads, and/or with changes in humidity. This is a normal characteristic of the material.
- **Load distribution matters:** To maximise safety & product performance - always distribute weight as evenly as possible. For example, ensure accessories are distributed evenly throughout the cabinet and not placed all on one side or in the middle. Ensure the TV has a wide support base.

WARNINGS

- Children have **died** from **furniture tipping over**.
- Always secure your television with an anchor device.
- Never allow children to stand on, climb, or hang from this furniture.
- This item contains **small items** that could be a **choking hazard** if swallowed. Keep away from children!

⚠ **WARNING**

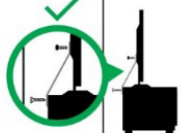

Children have died from furniture tipover.

- ALWAYS secure your television with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

WARRANTY INFORMATION








Your AVS Furniture comes with a 12-month warranty from the date of purchase against manufacturing defects in materials and workmanship. Please note the warranty does not cover (not an extensive list):

- **Incorrect Assembly:** Damage caused by not following the assembly instructions properly. Use of incorrect tools or missing/incorrect fasteners.
- **Improper Use:** Using the furniture for something it wasn't designed for (e.g., standing or climbing on it). Exceeding recommended weight limits.
- **Modifications or Alterations:** Any changes to the original design, including drilling holes, cutting, painting, or staining the furniture.
- **Commercial Use:** Using furniture in a commercial, rental, or public space.
- **Environmental Damage:** Exposure to excessive moisture, direct sunlight, heat sources (heaters, fireplaces), or outdoor conditions. Mould or mildew caused by improper storage or use.
- **Improper Care:** Using harsh chemicals, abrasive cleaners, or failing to follow the care instructions provided.
- **Accidental Damage or Misuse:** Scratches, dents, stains, or chips from normal wear and tear, accidents, pets, or children. Moving or transporting the furniture without proper protection.
- **Third-Party Repairs or Parts:** Repairs or replacements carried out by unauthorised service providers or use of non-original parts.
- **Normal Wear & Tear:** Natural fading, minor cosmetic blemishes, and material changes over time, which occur with regular use.
- **Incorrect Installation:** If furniture is incorrectly installed e.g. trying to mount the furniture to a wall.





DISCLAIMER

AV Supply Group (AVSG) intends to make this manual accurate and complete. However, AVSG makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. AVS makes no representation of warranty, expressed or implied, regarding the information contained herein. AVS assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

       CABO1800

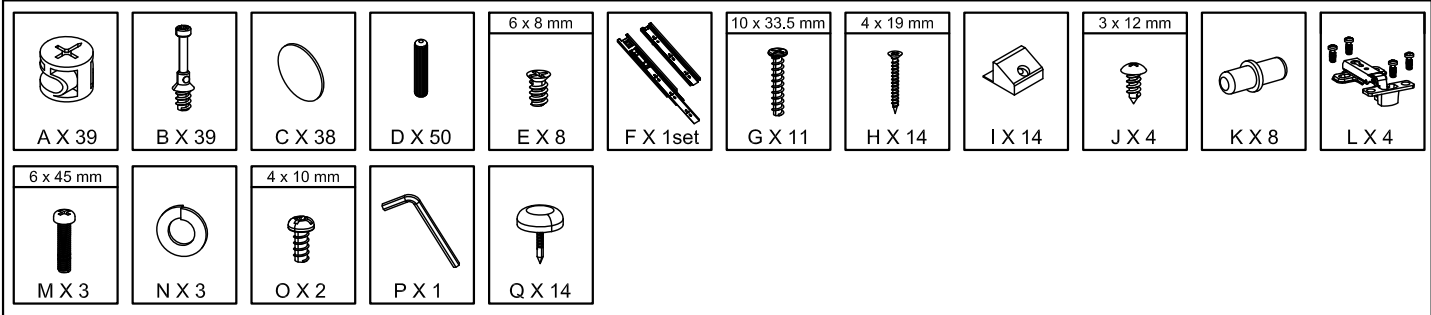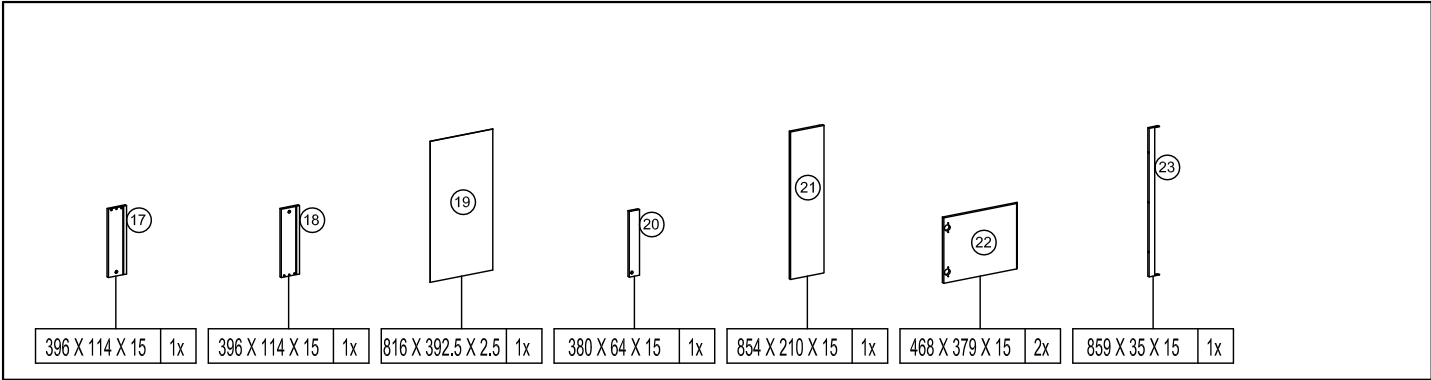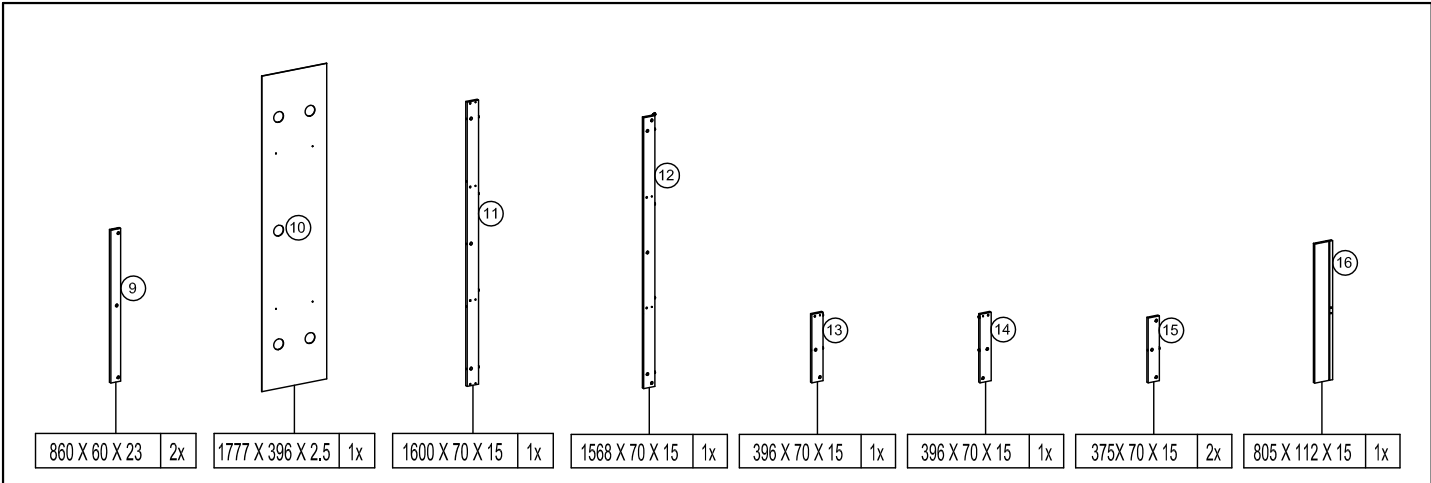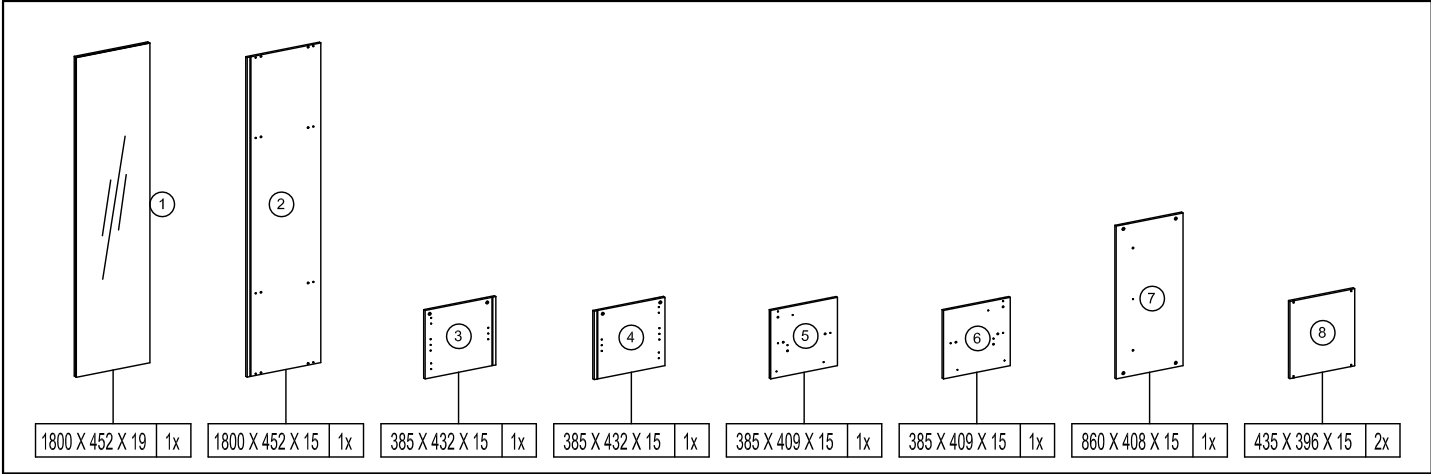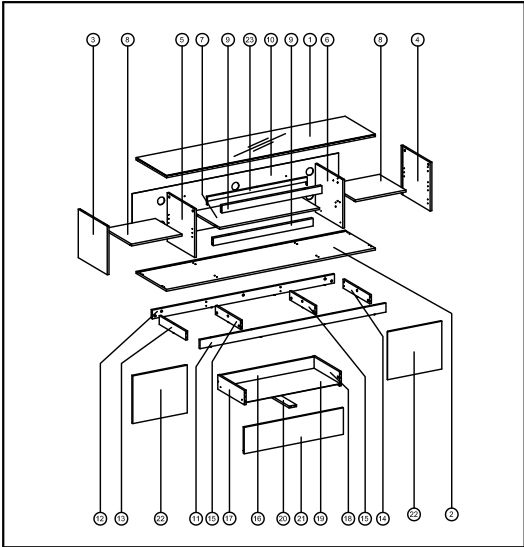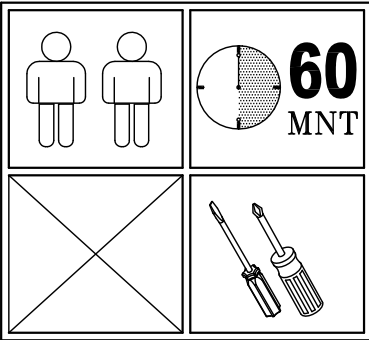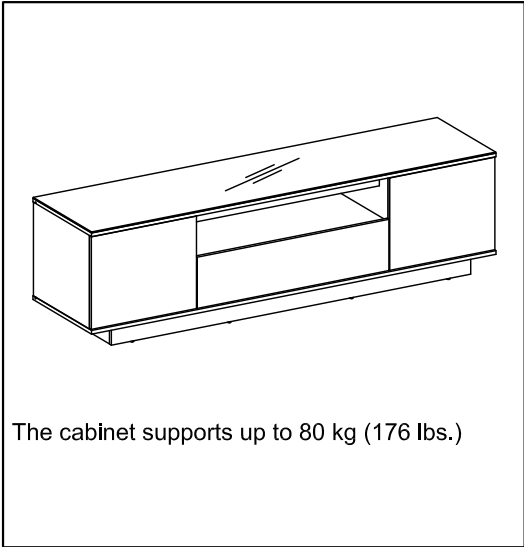


CABO1800

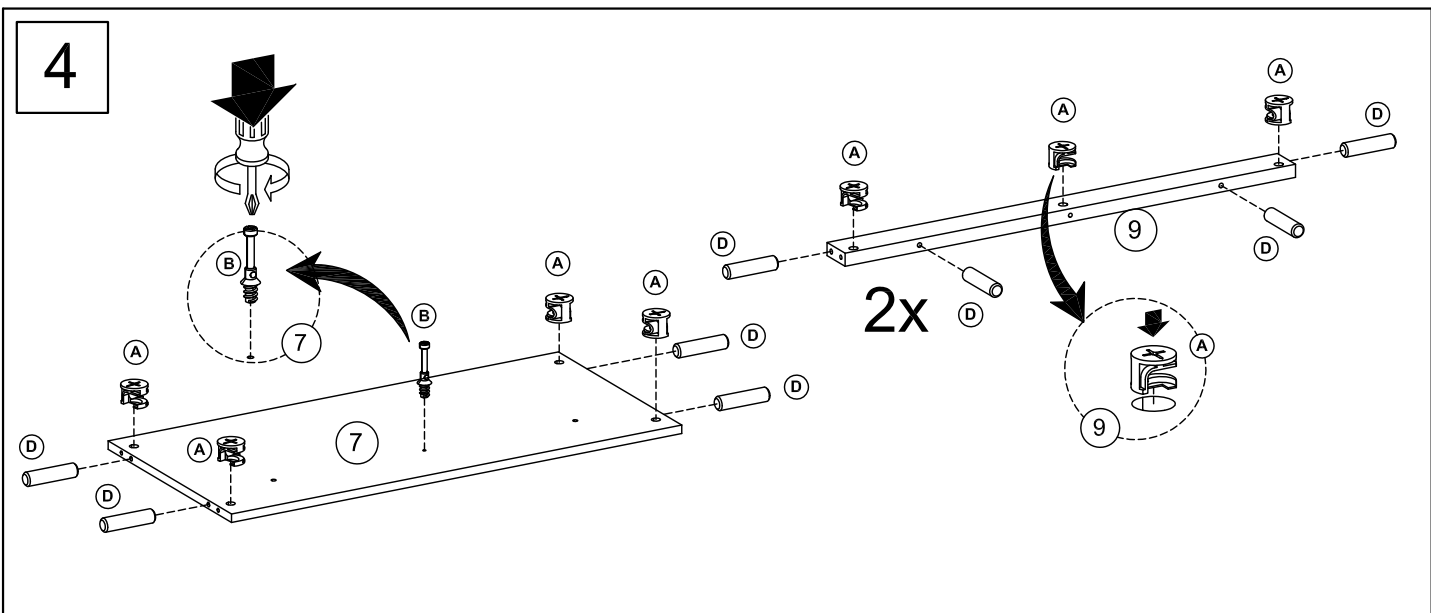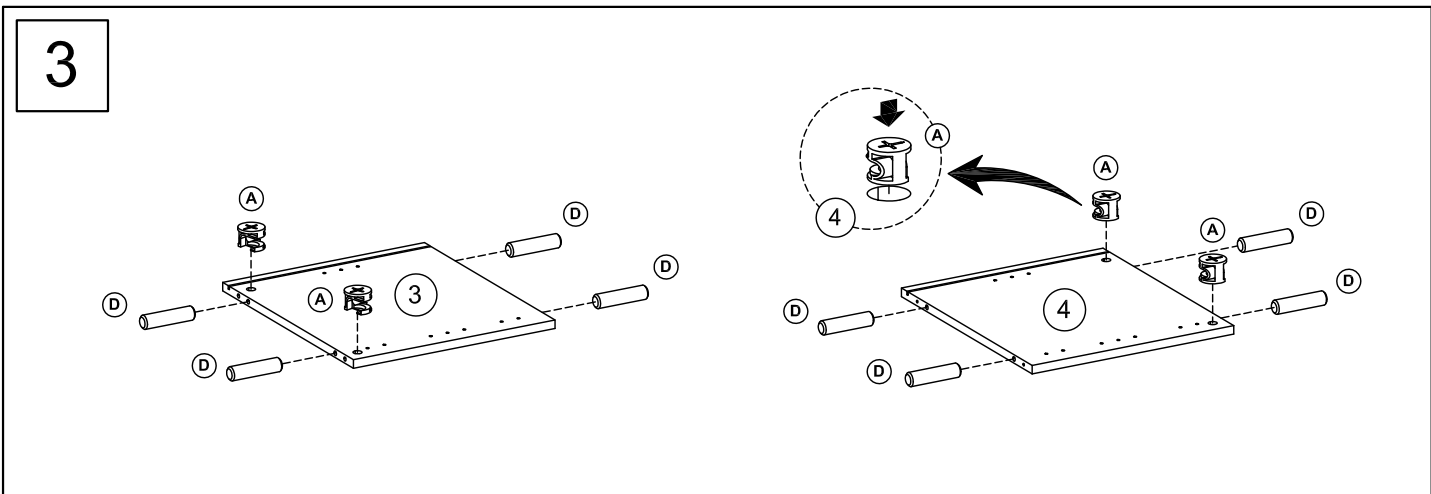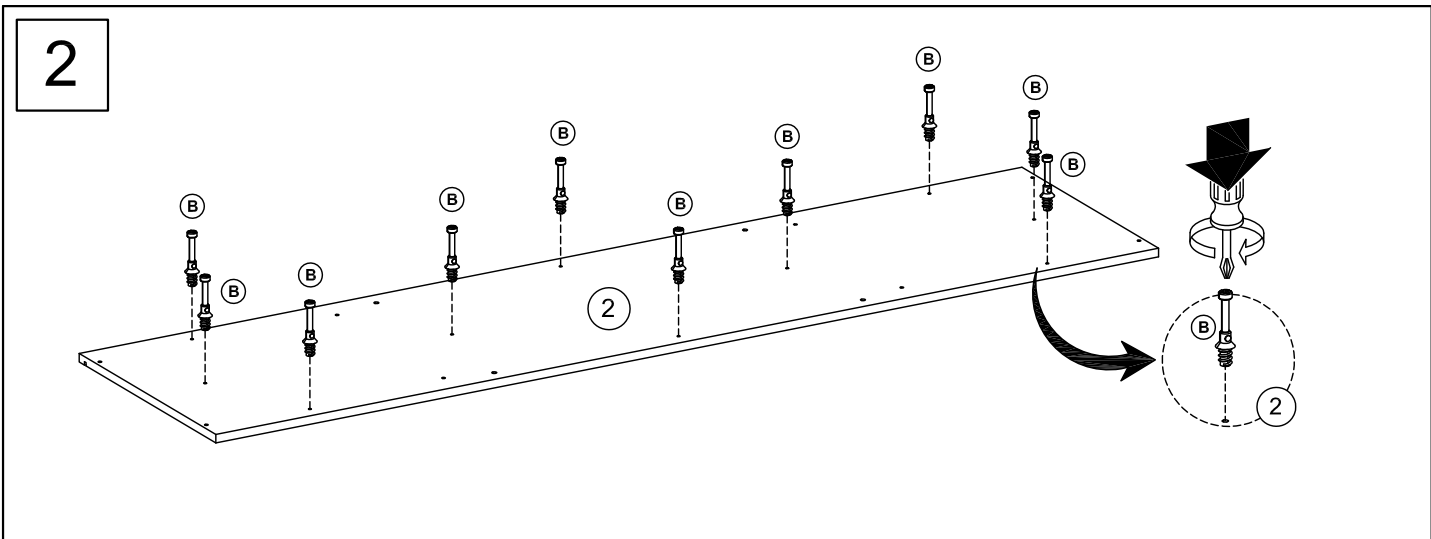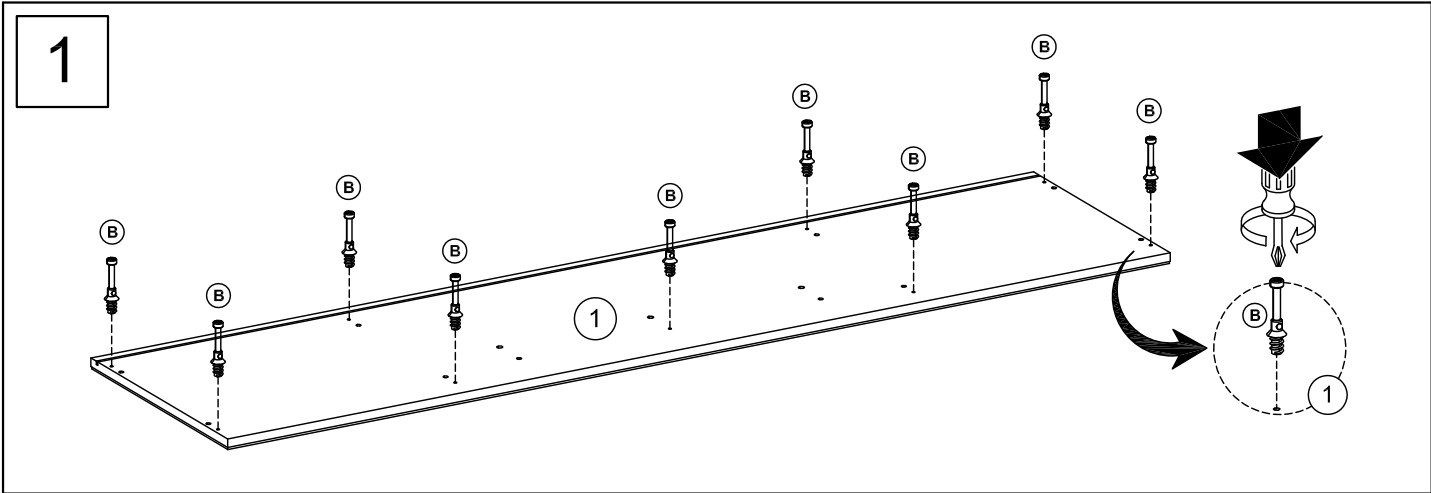    


CABO1800

 
5

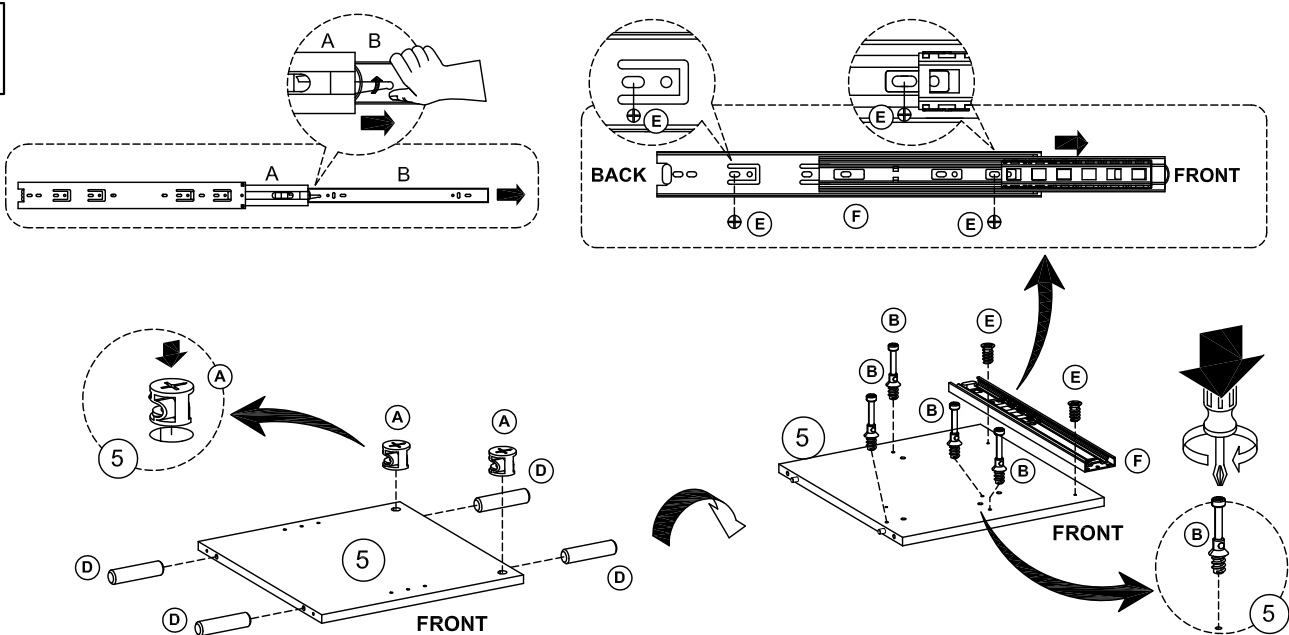

6

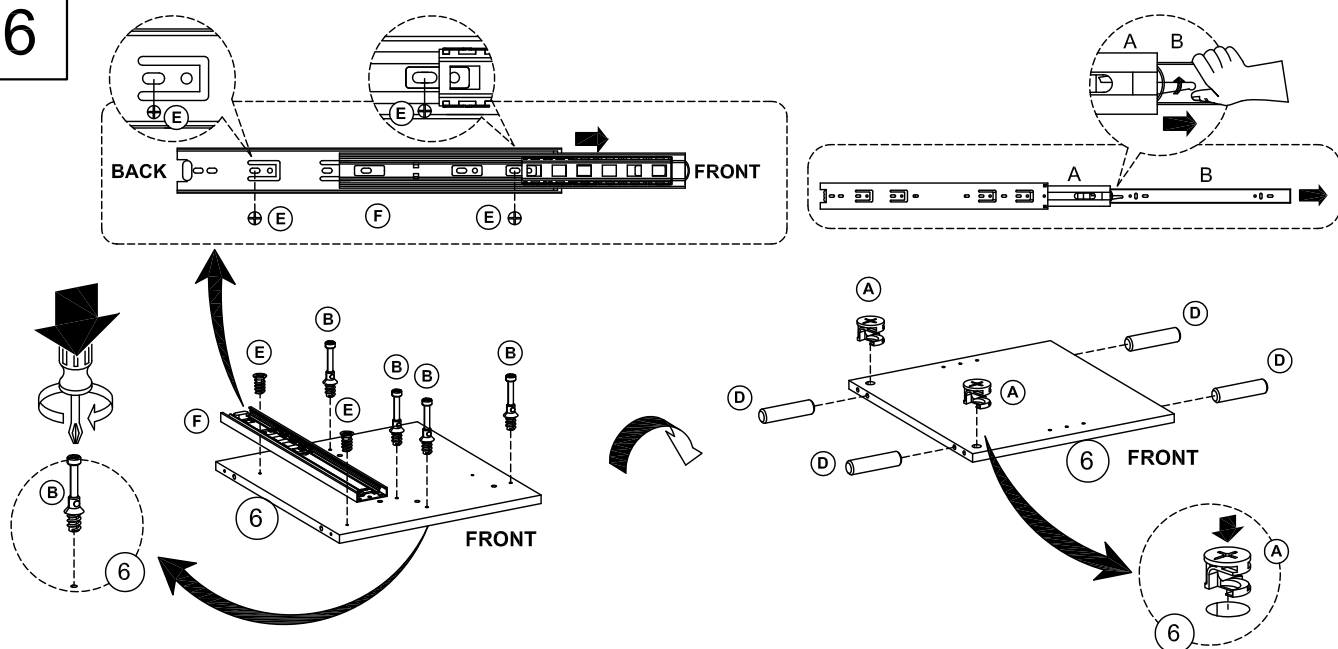 


7

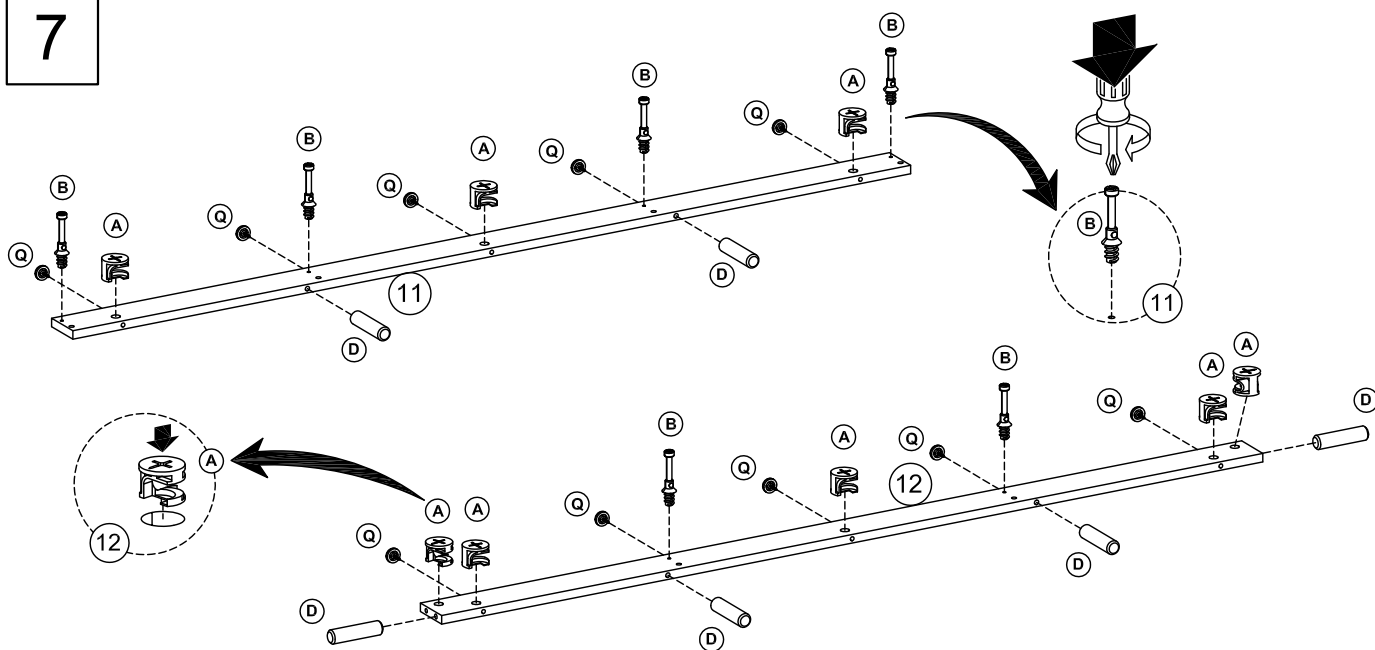 


CABO1800

 
8

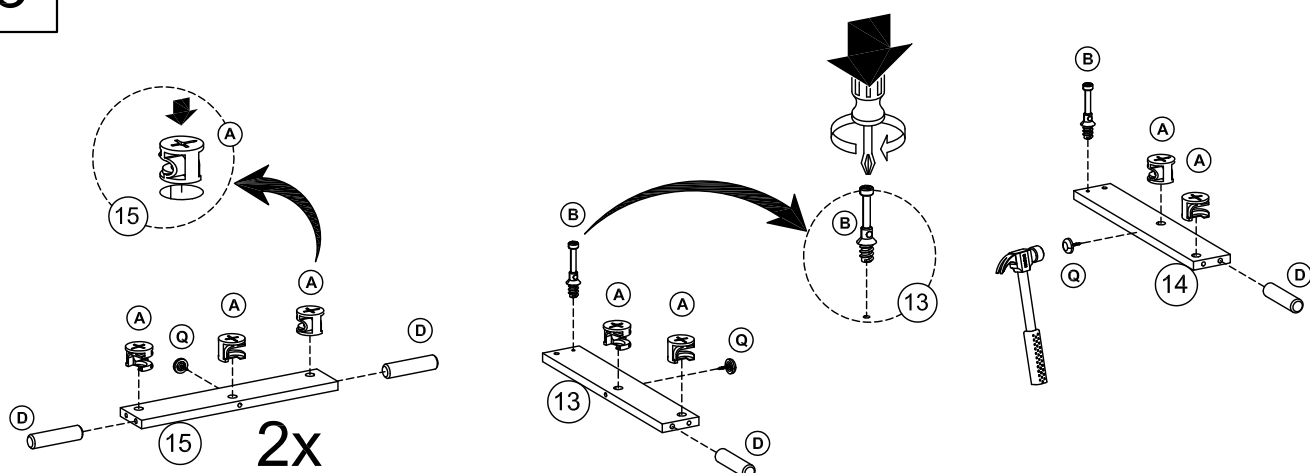

9

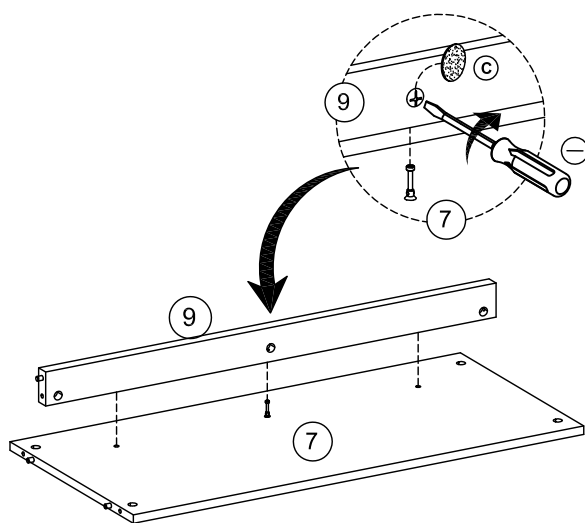 


10

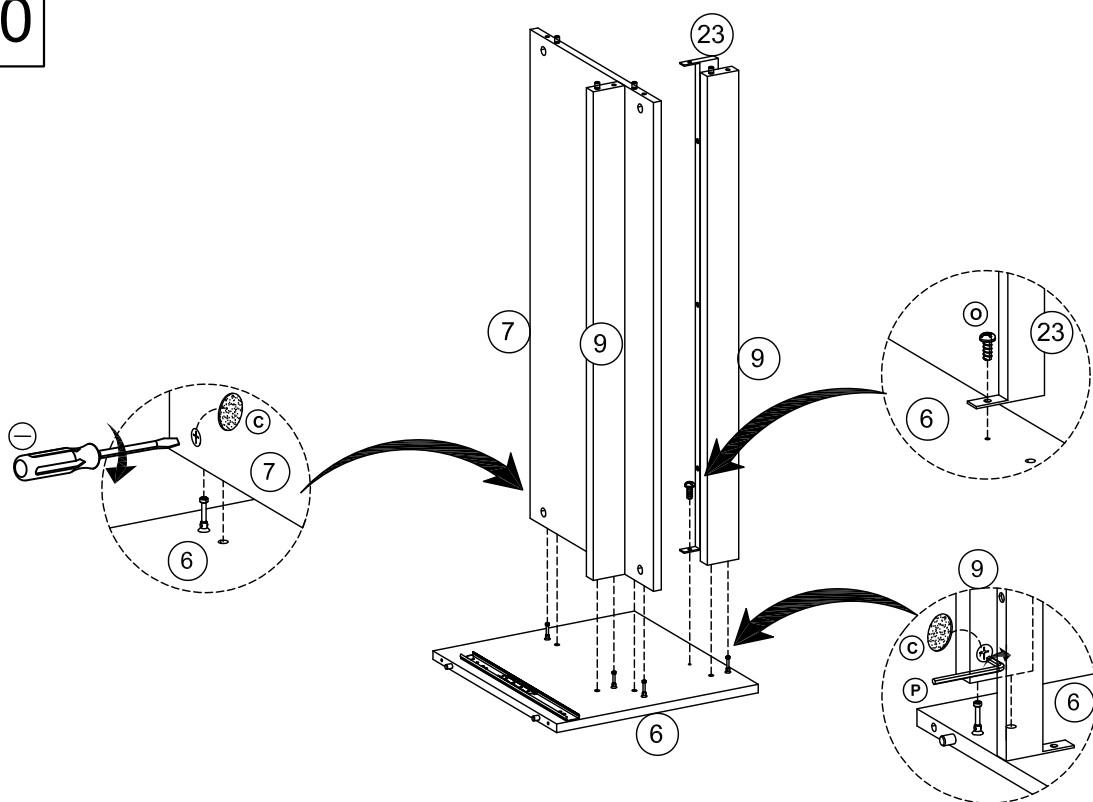 


CABO1800

 
11

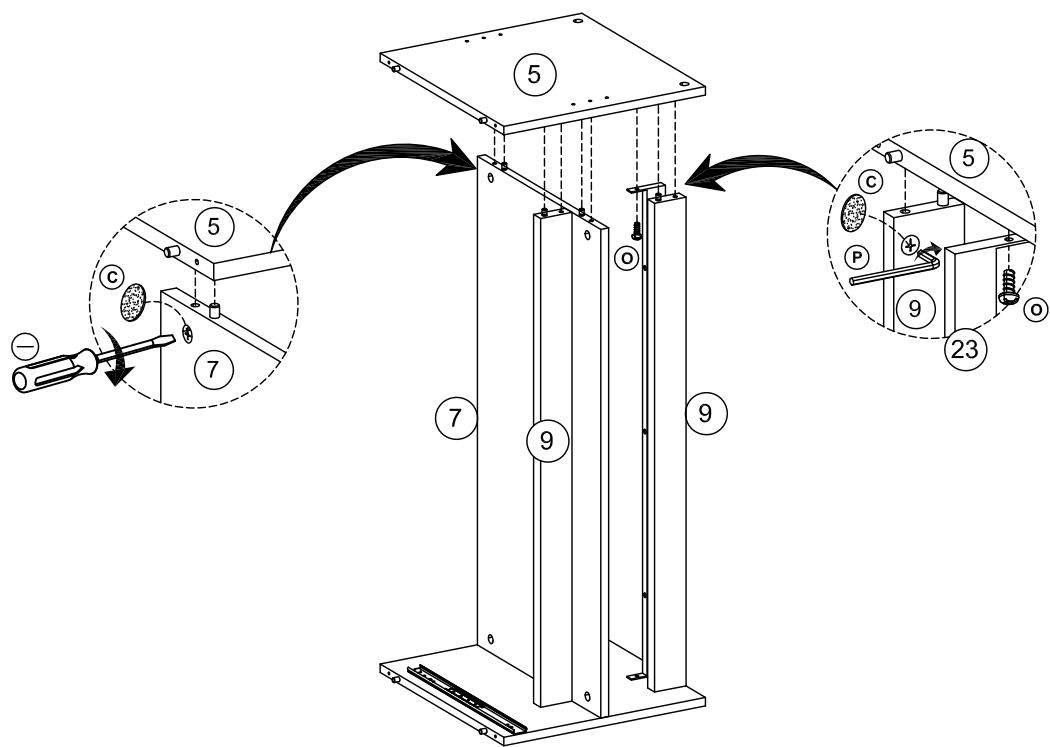

12

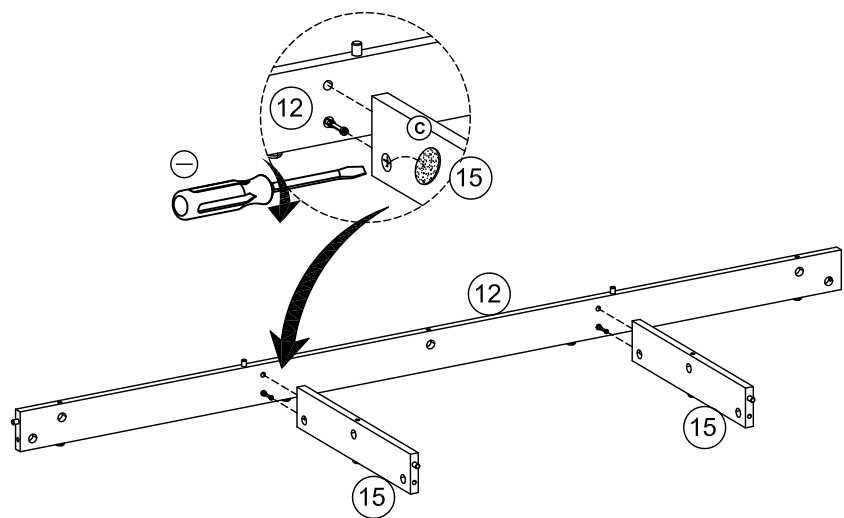 


13

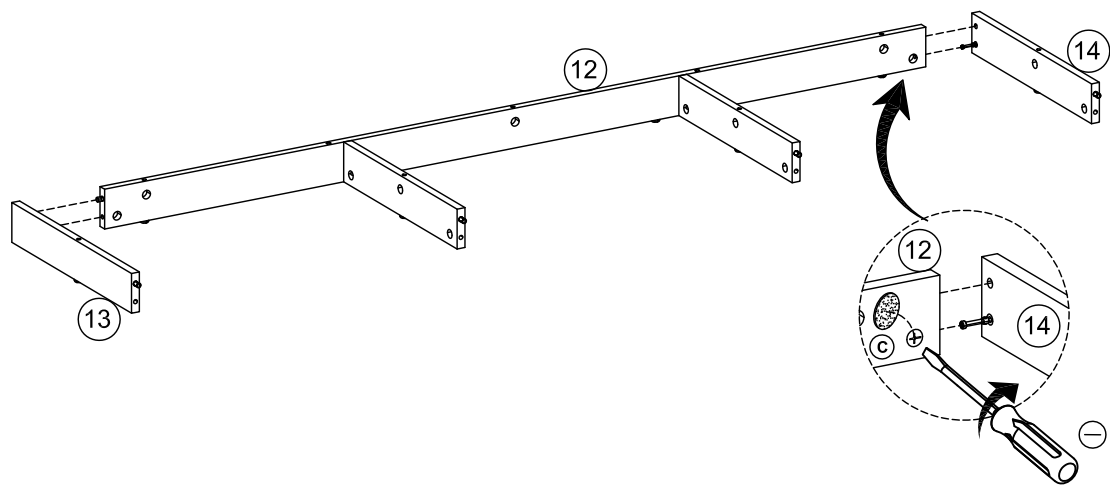 


CABO1800

 
14

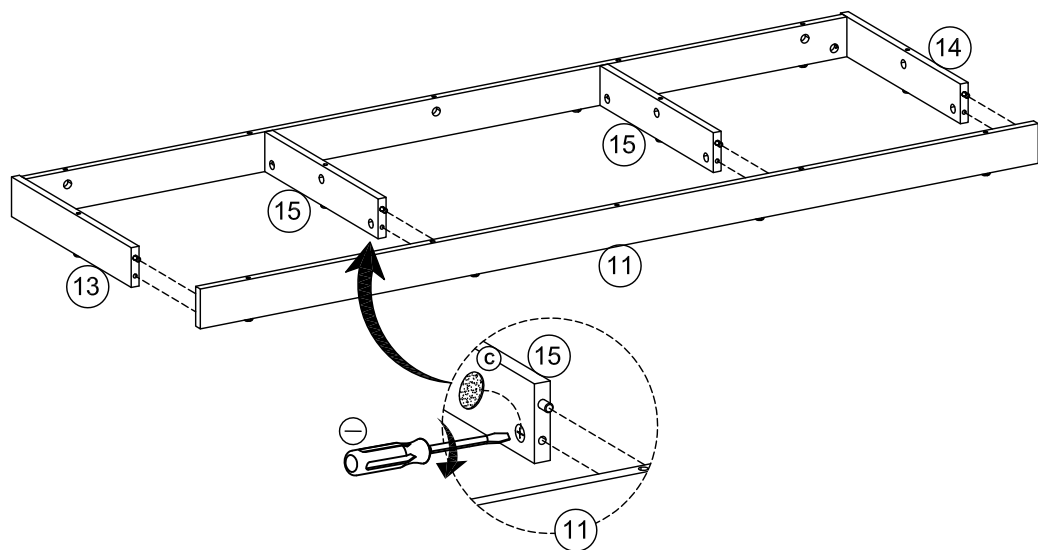

15

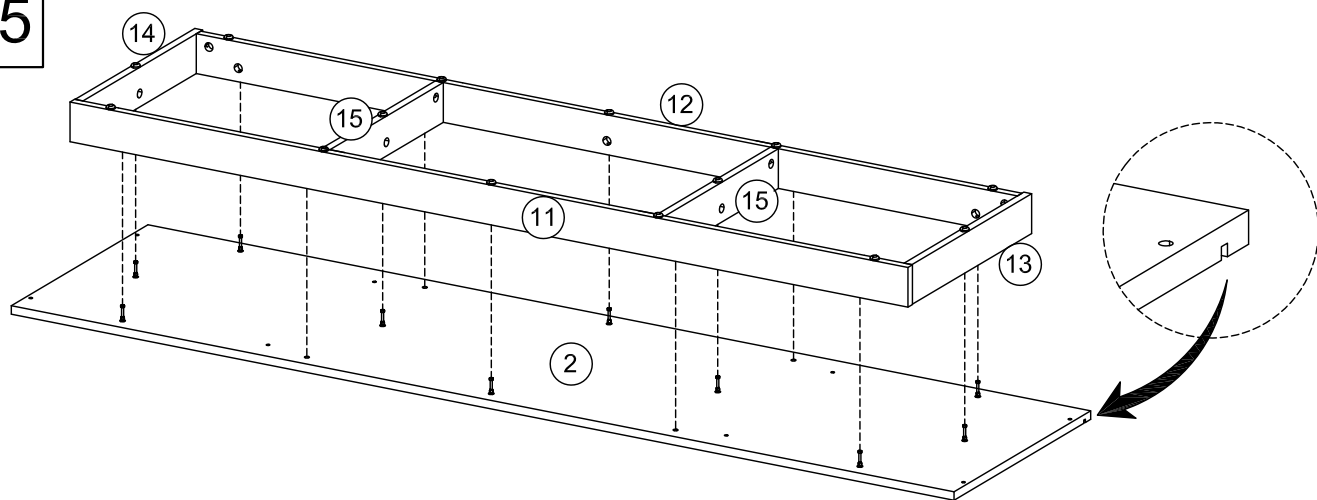 


16

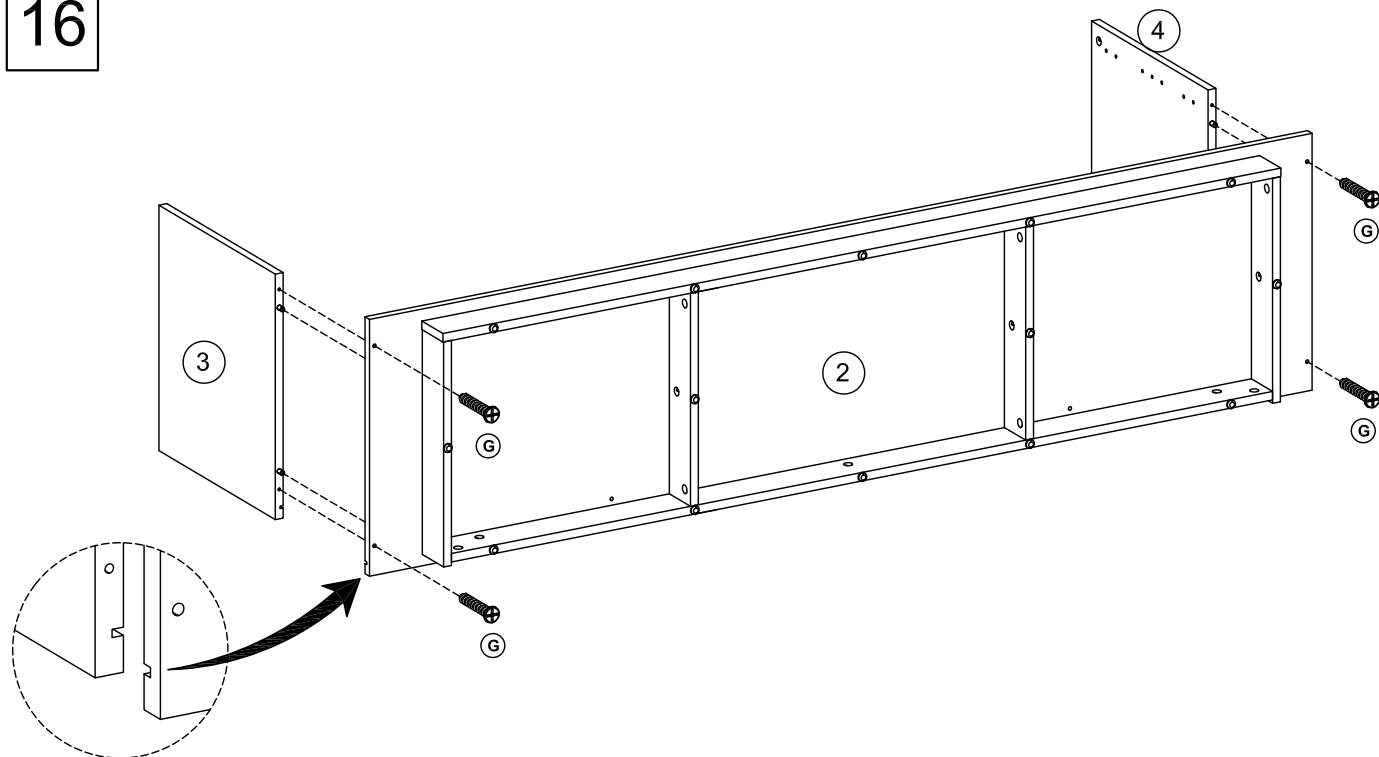 


CABO1800

 17

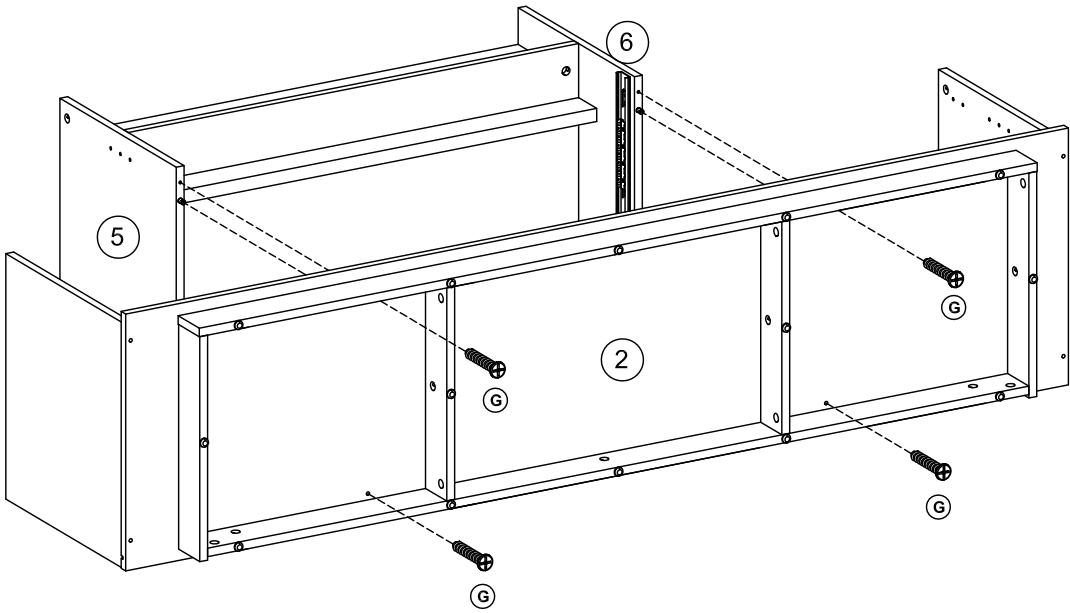


18

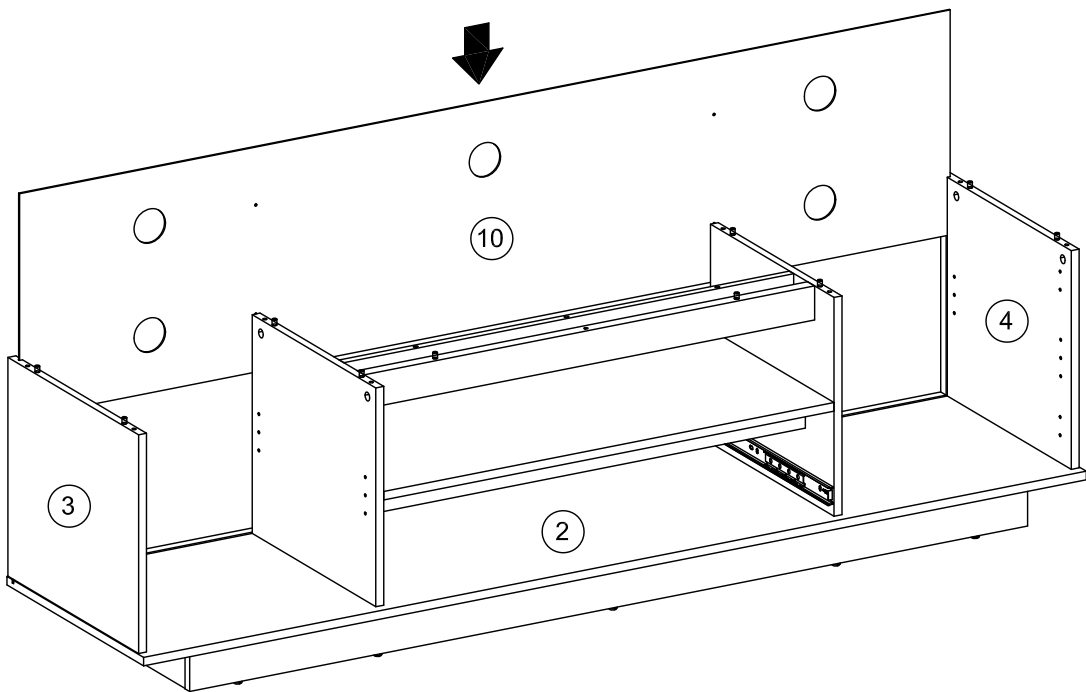 


CABO1800

 19

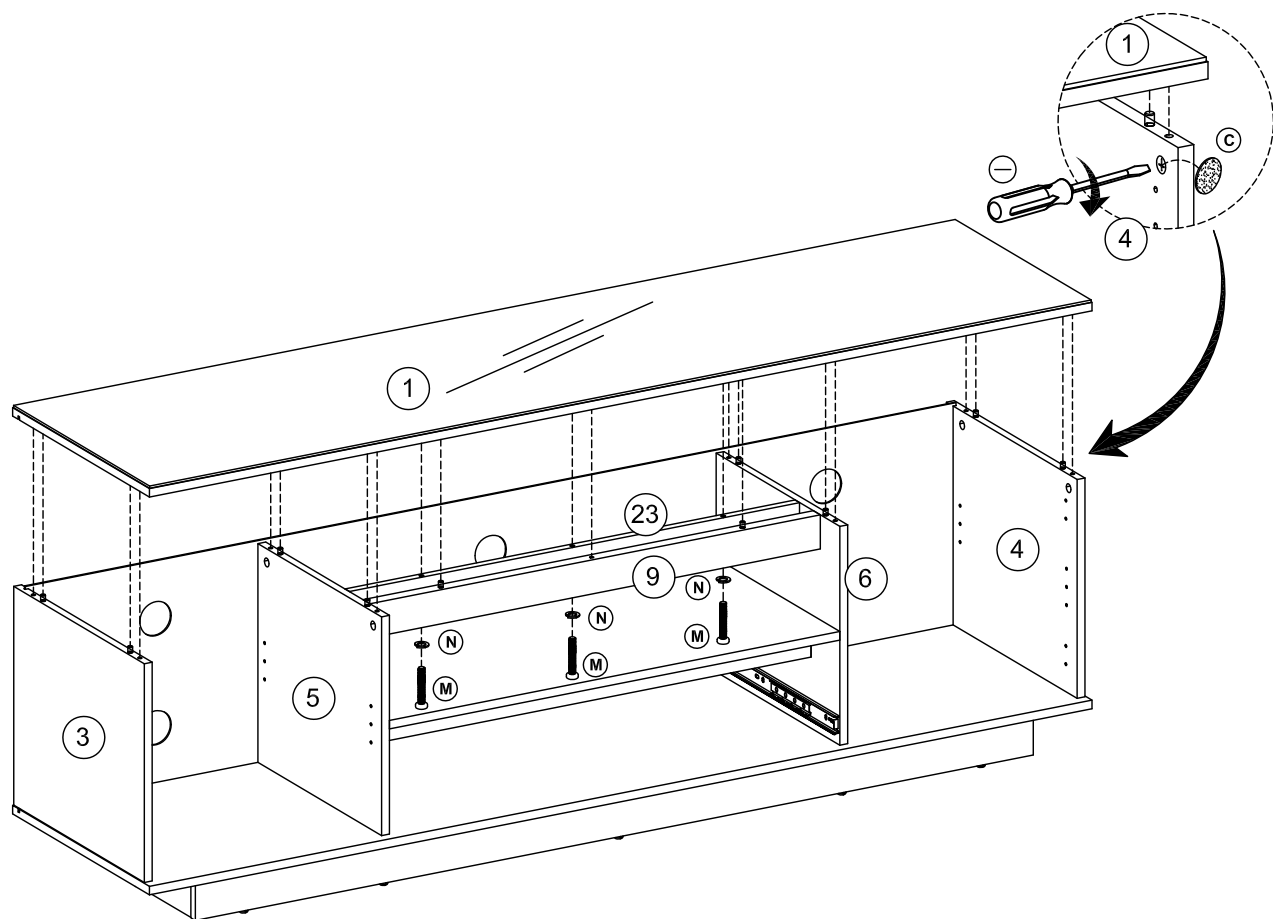


20

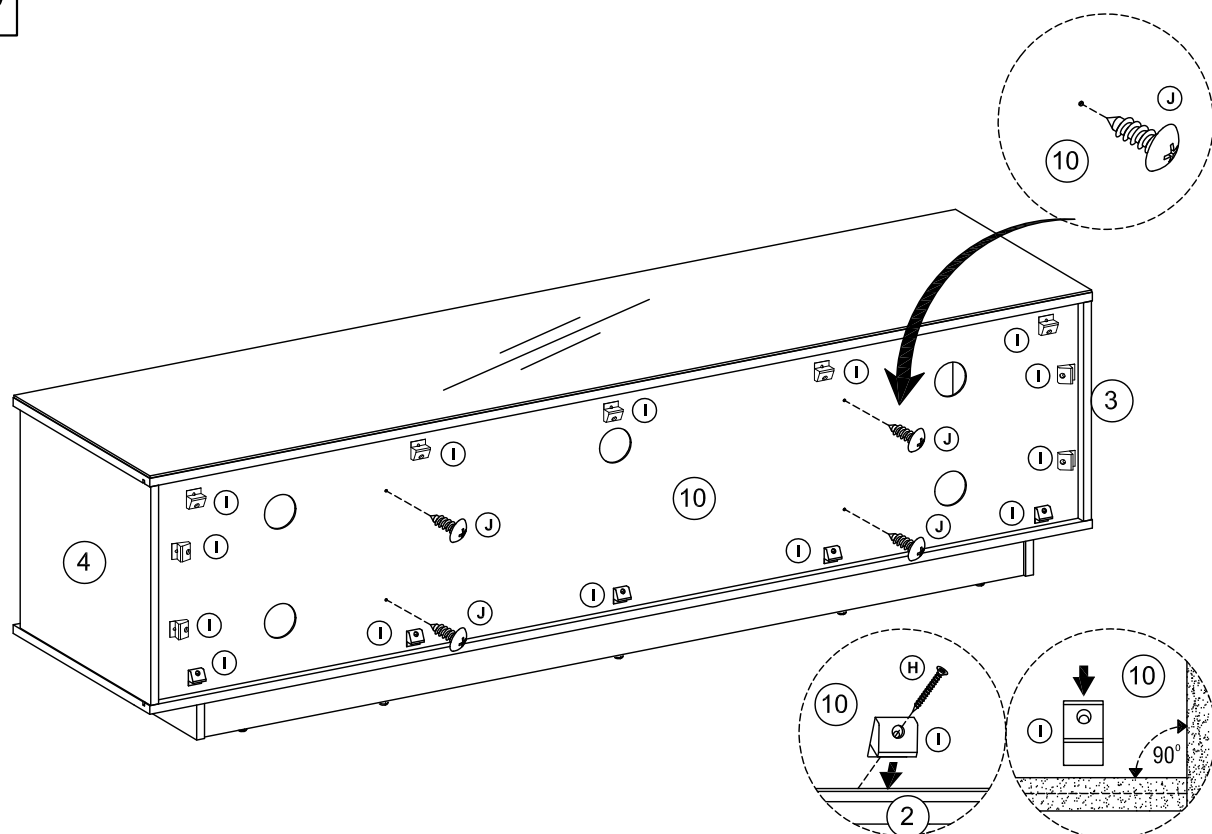 


CABO1800

 
21

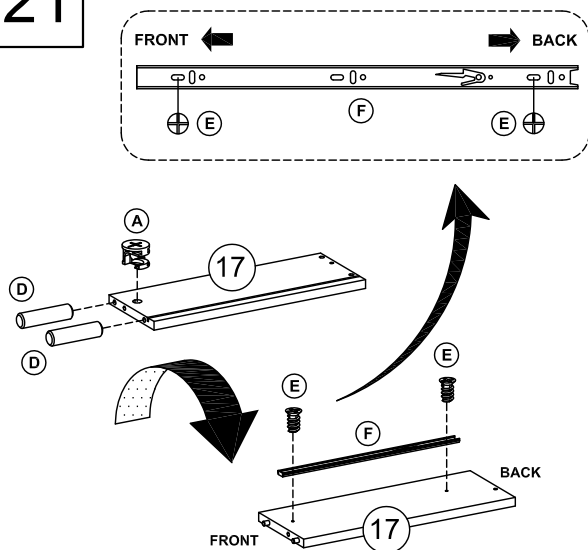


22

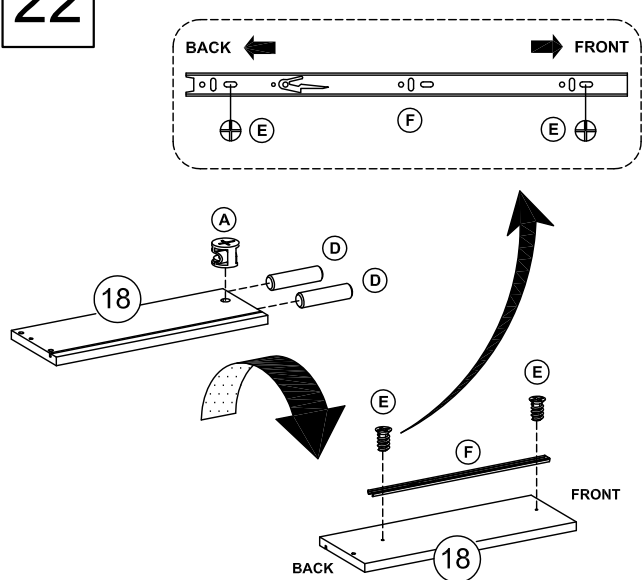 

23

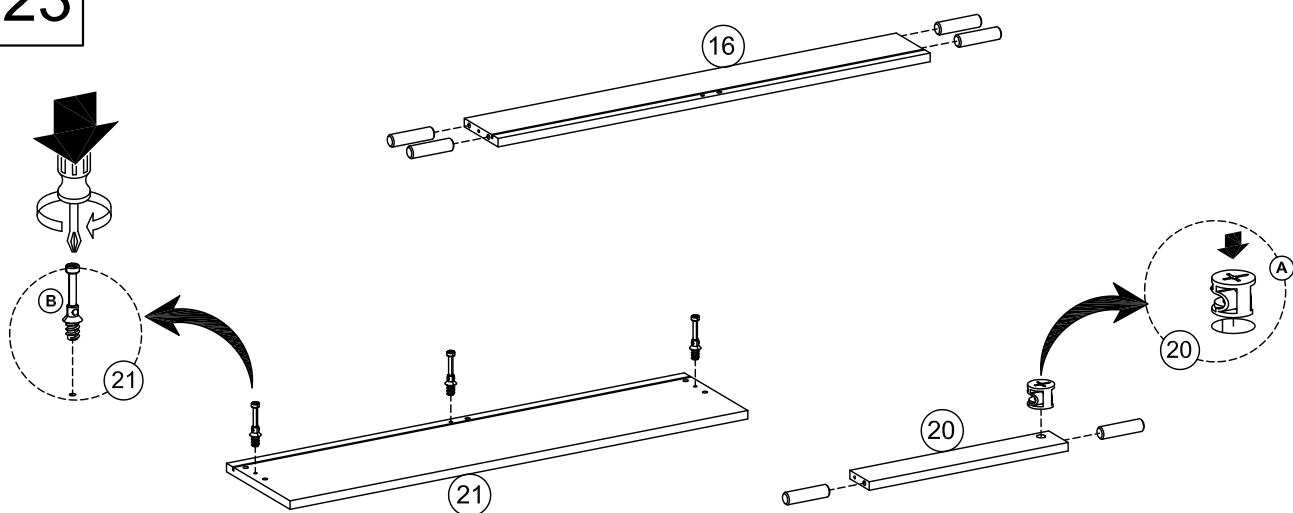 


24

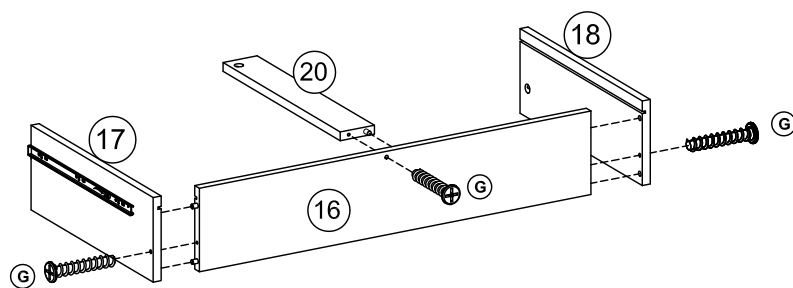 


CABO1800

 
25

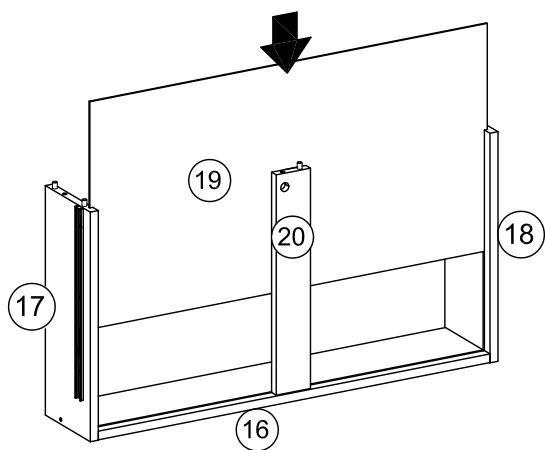

26

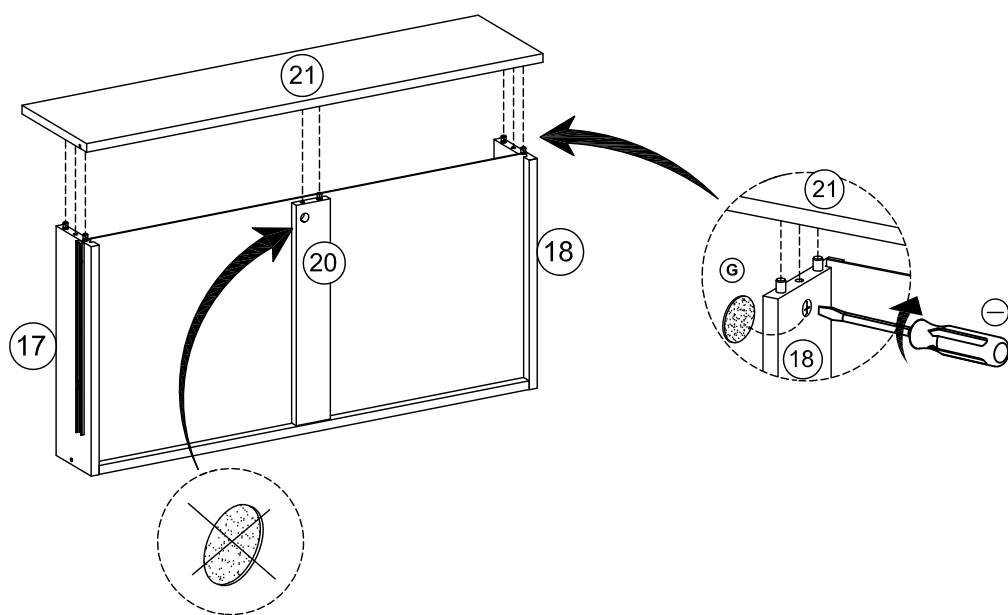 


27

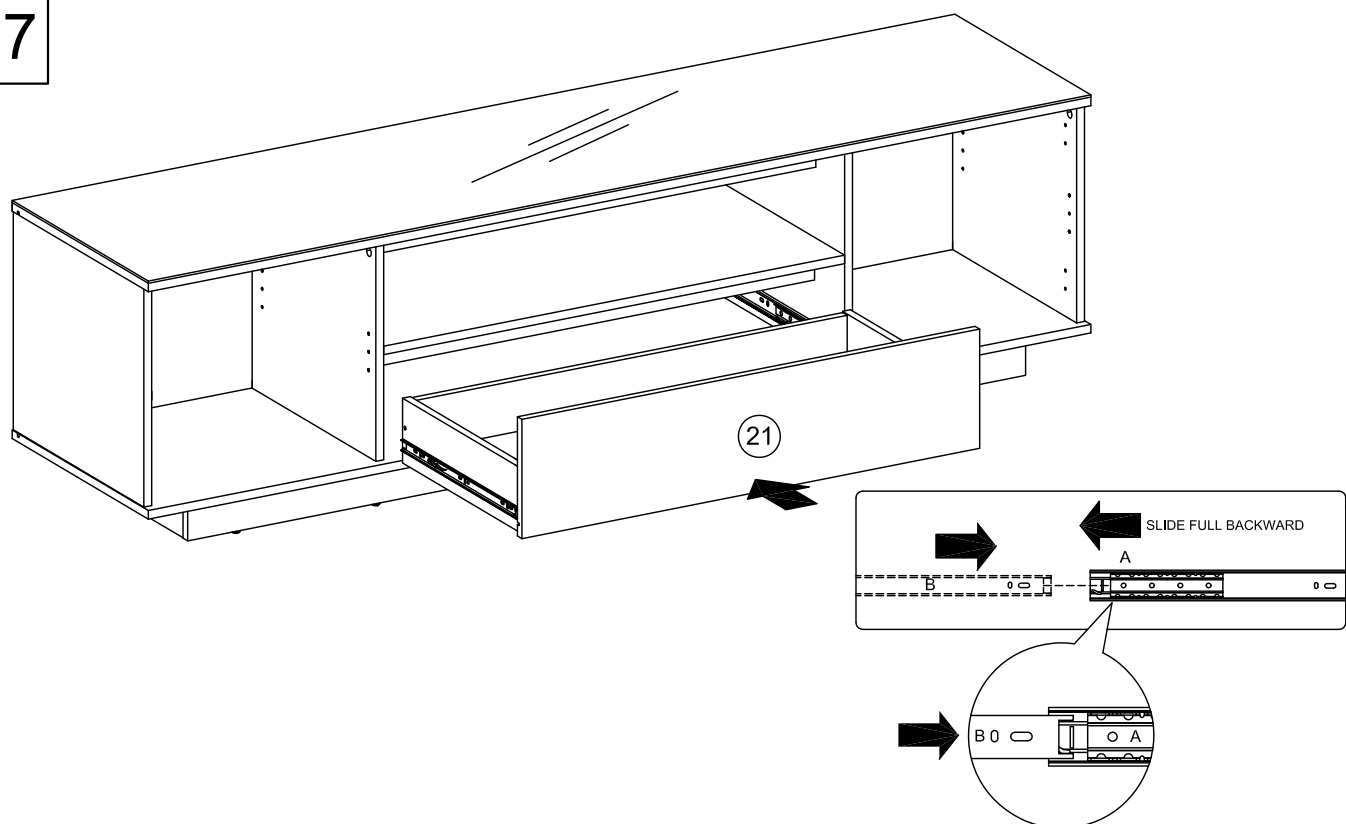 


CABO1800

 28

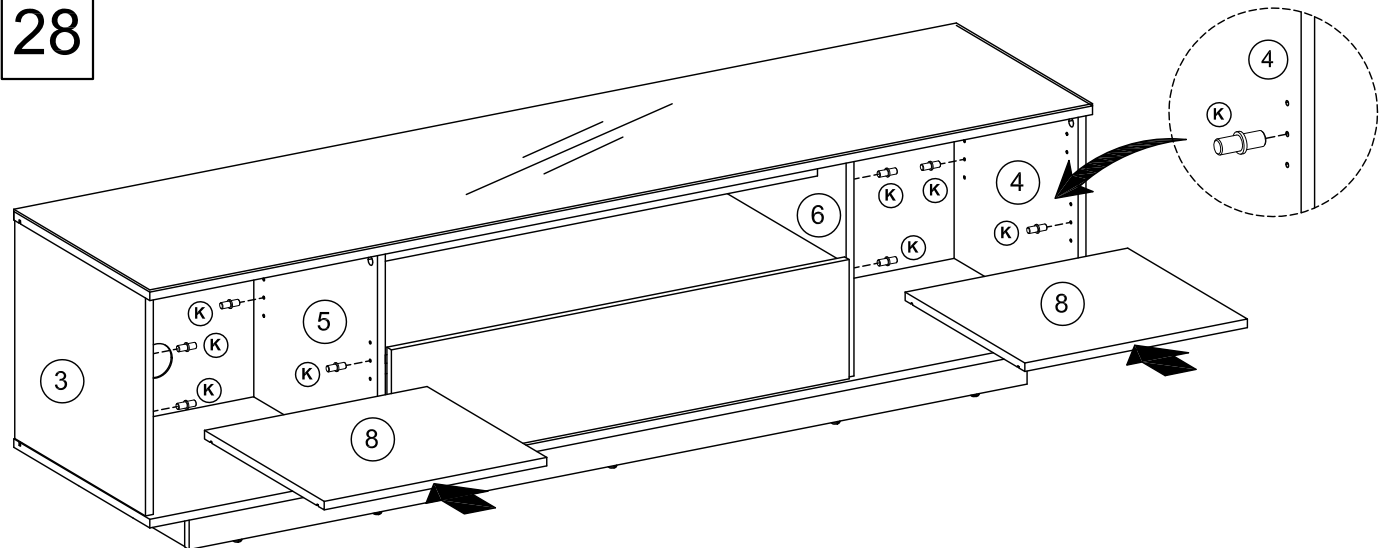

29

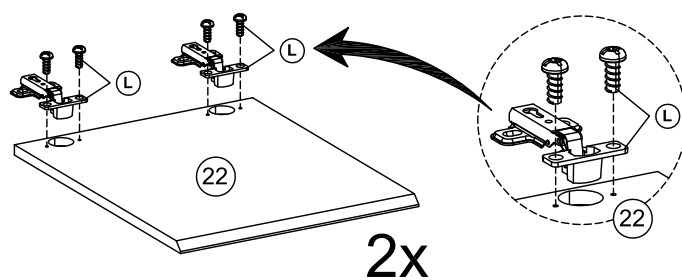 

30

