

DXB-8 Button Cap Selection Sheet

| | A | B | C | D | E | F | G | H | J | K |
|---|-------|------|------|------|-------|-------|---------|---------|-------|------|
| 0 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| 1 | TV | TV1 | TV2 | HDMI | HDMI1 | HDMI2 | DVD | VIDEO | SAT | CBL |
| 2 | AUX | AUX1 | AUX2 | PROJ | PROJ1 | PROJ2 | DOC | PC | PC1 | PC2 |
| 3 | YPbPr | VCR | VTC | VGA | VGA1 | VGA2 | SCRN UP | SCRN DN | * | # |
| 4 | ■ | ▶ | ⏸ | ⏩ | ⏪ | ▲ | ENTER | MENU | INPUT | EXIT |
| 5 | ⏻ | ON | OFF | 🔊 | 🔊 | 🔇 | 🔇 | . | ● | ● |

Notes:

A blank (non-etched) button is also available. Please order DXB-CB-W for white, DXB-CB-B for black.

Buttons can be reversed 180°.

- Button 4B is used for Play, Left, and Right
- Button 4D is used for Fast Forward and Rewind
- Button 4E is used for Next and Previous
- Button 4F is used for Up and Down

Part Number Formula:

DXB-C[row][column]-[color]

[row] - Row number, **0-5**

[column] - Column letter, **A-K***

[color] - Button color, **B** (black) or **W** (white)

Example: White PROJ Button PN# = DXB-C2D-W

*Column "I" has been intentionally omitted