


INSTALLATION INSTRUCTIONS

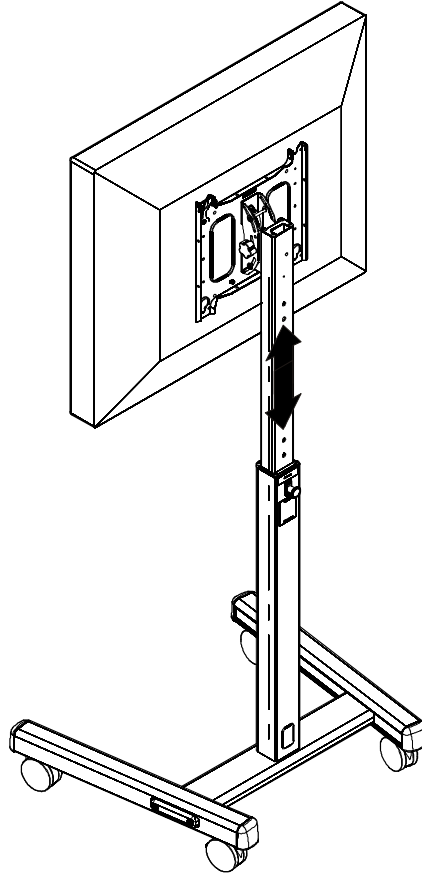

Height Assist Accessory

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

! IMPORTANT WARNINGS AND CAUTIONS!

! WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

! CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.


! WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

! WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all equipment mounted to cart/stand does not exceed 200 lbs (90.72 kg) or the specific weight limit of the cart/stand.








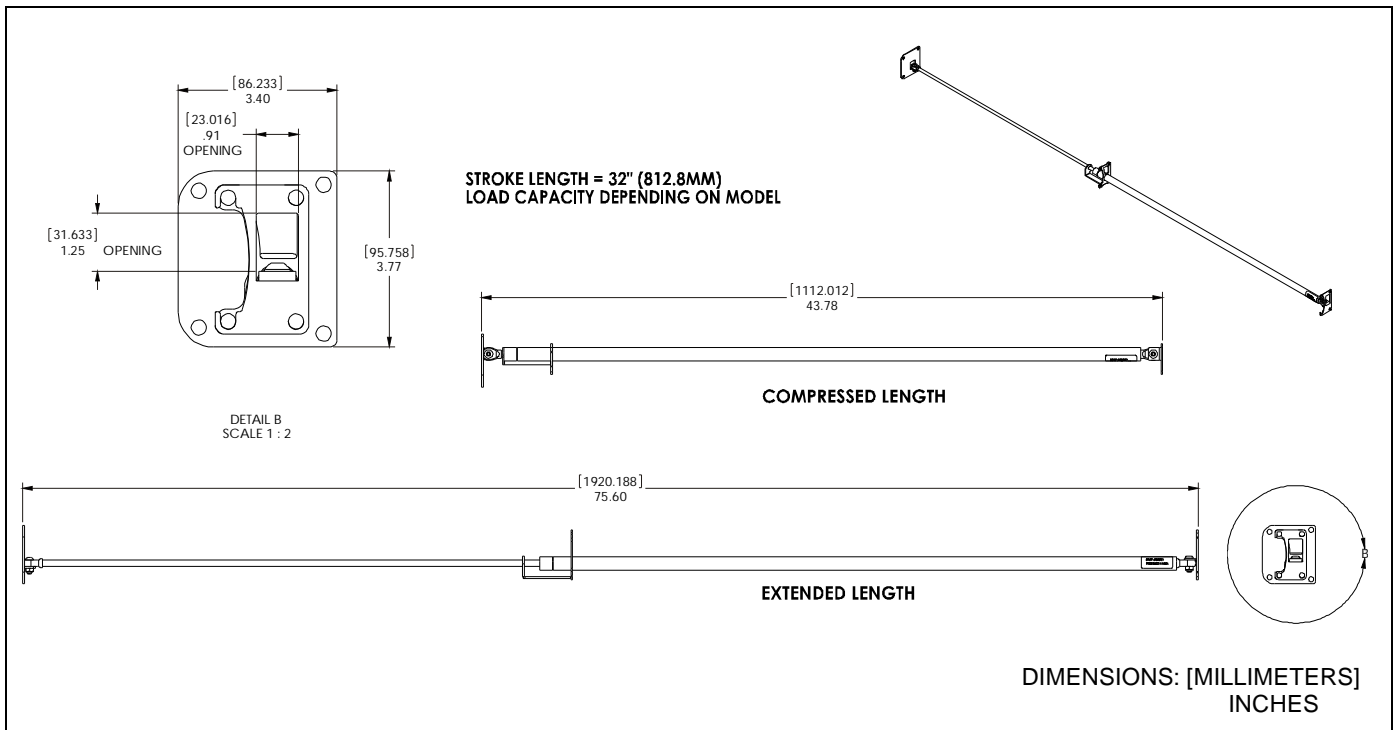




NOTE: Each Gas spring is rated to hold a display at its upper limit and lift a display at its lower limit. (See table below) The gas spring will support a higher weight than its rating, however it will only assist in decreasing the amount of weight that needs to be lifted. The gas spring that is used should be as close to the display weight as possible.

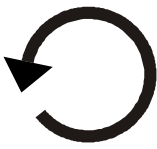Model	Weight Rating	Range
PAC780	65 lbs (29.48 kg)	50-75 lbs (22.68-34.02 kg)
PAC782	90 lbs (40.82 kg)	75-100 lbs (34.02-45.36 kg)
PAC784	115 lbs (52.16 kg)	100-125 lbs (45.36-56.70 kg)


DIMENSIONS




LEGEND

	<p>Tighten Fastener Apretar elemento de fijación Befestigungsteil festziehen Apertar fixador Serrare il fissaggio Bevestiging vastdraaien Serrez les fixations</p>		<p>Pencil Mark Marcar con lápiz Stiftmarkierung Marcar com lápis Segno a matita Potloodmerkteken Marquage au crayon</p>
	<p>Loosen Fastener Aflojar elemento de fijación Befestigungsteil lösen Desapertar fixador Allentare il fissaggio Bevestiging losdraaien Desserrez les fixations</p>		<p>Drill Hole Perforar Bohrloch Fazer furo Praticare un foro Gat boren Percez un trou</p>
	<p>Phillips Screwdriver Destornillador Phillips Kreuzschlitzschraubendreher Chave de fendas Phillips Cacciavite a stella Kruiskopschroevendraaier Tournevis à pointe cruciforme</p>		<p>Adjust Ajustar Einstellen Ajustar Regolare Afstellen Ajuster</p>
	<p>Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche</p>		<p>Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez</p>
	<p>By Hand A mano Von Hand Com a mão A mano Met de hand À la main</p>		<p>Optional Opcional Optional Opcional Opzionale Optie En option</p>
	<p>Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale Zeskantsleutel Clé à tête hexagonale</p>		<p>Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza Veiligheidssleutel Clé de sécurité</p>

TOOLS REQUIRED FOR INSTALLATION

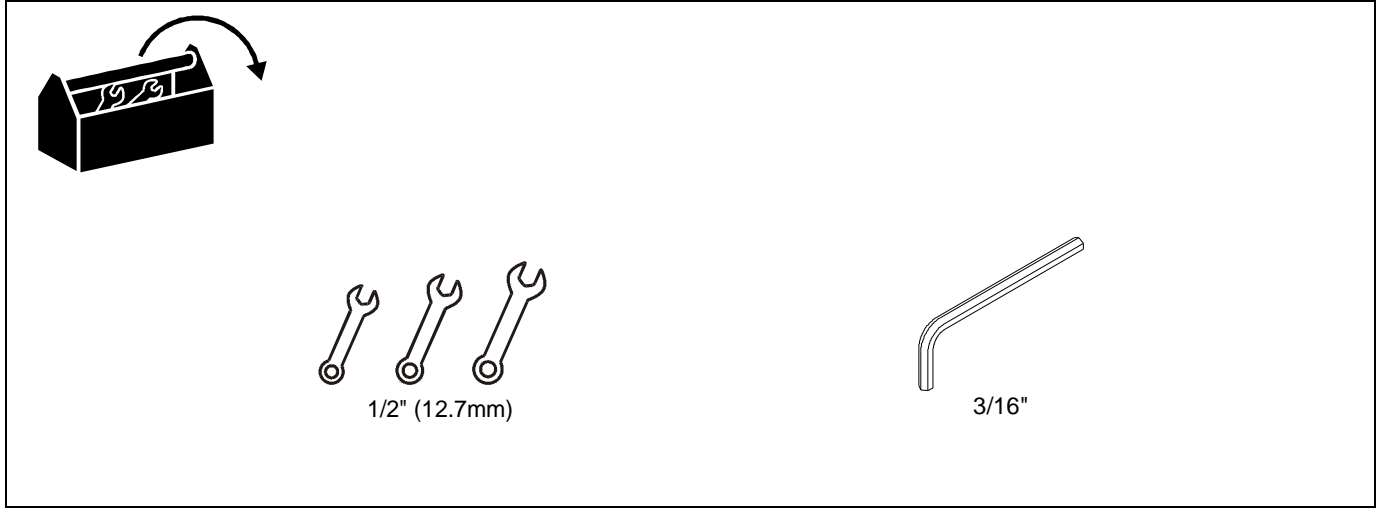

PARTS

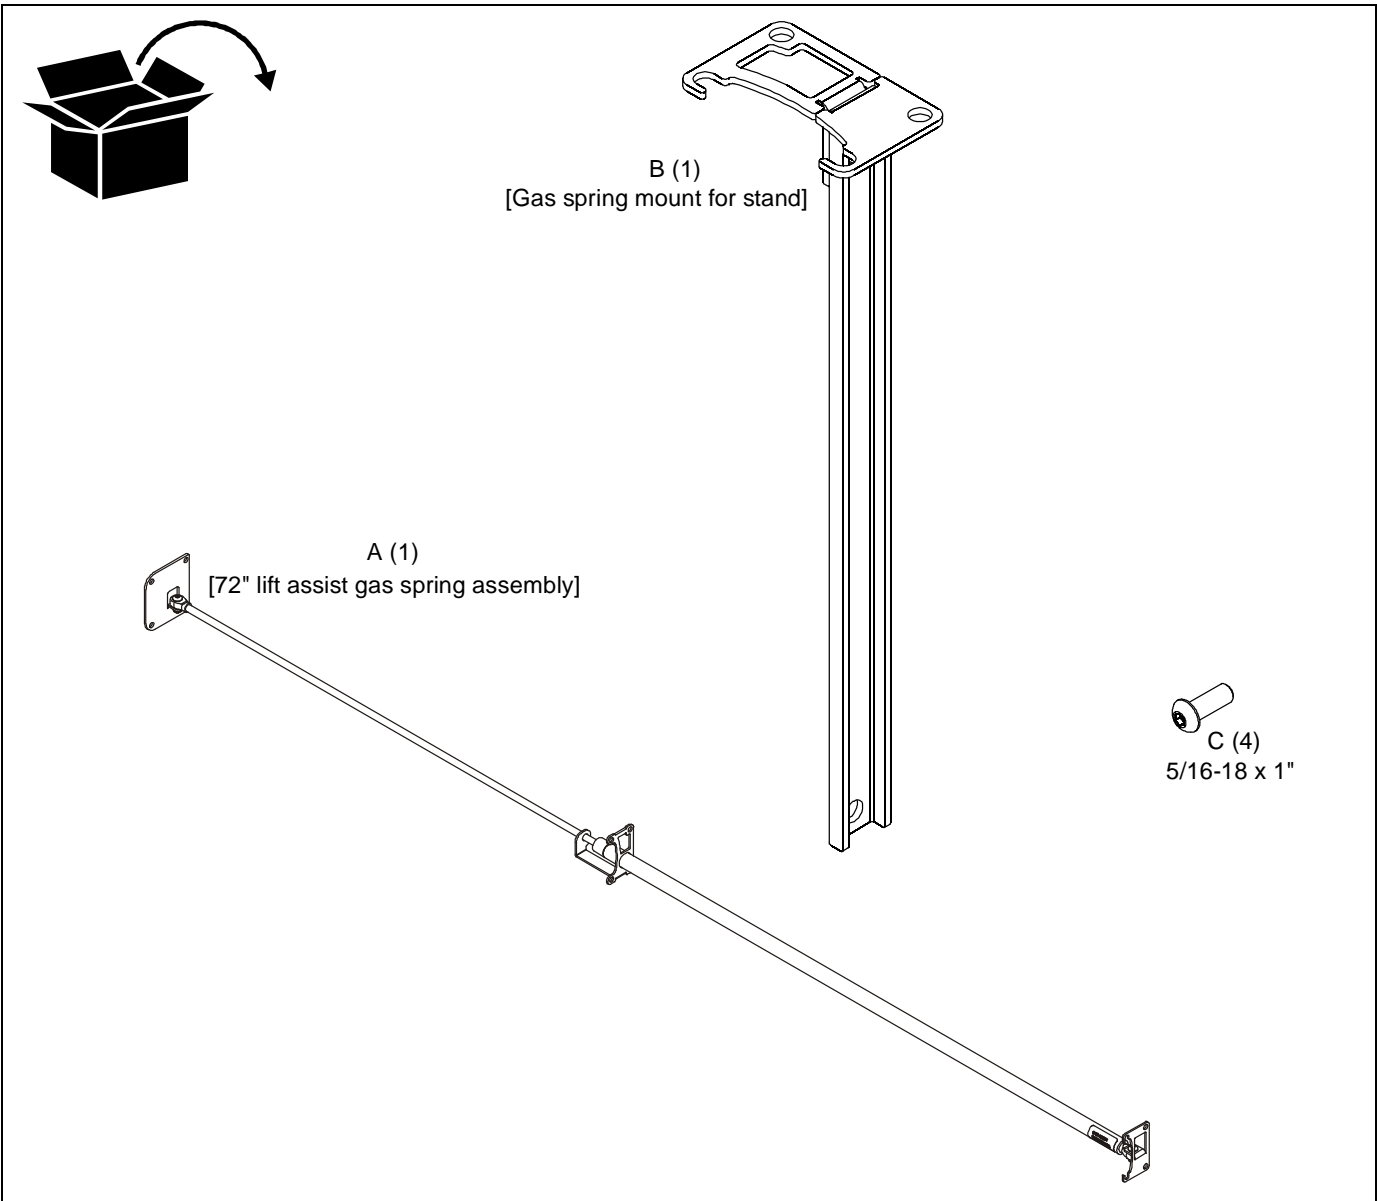

ASSEMBLY AND INSTALLATION

Install Gas Spring Assembly to Cart/Stand

1. Remove any mounted displays and mounting devices from cart/stand.
2. Remove four button head screws from faceplate. (See Figure 1)
3. Remove faceplate from column assembly. (See Figure 1)

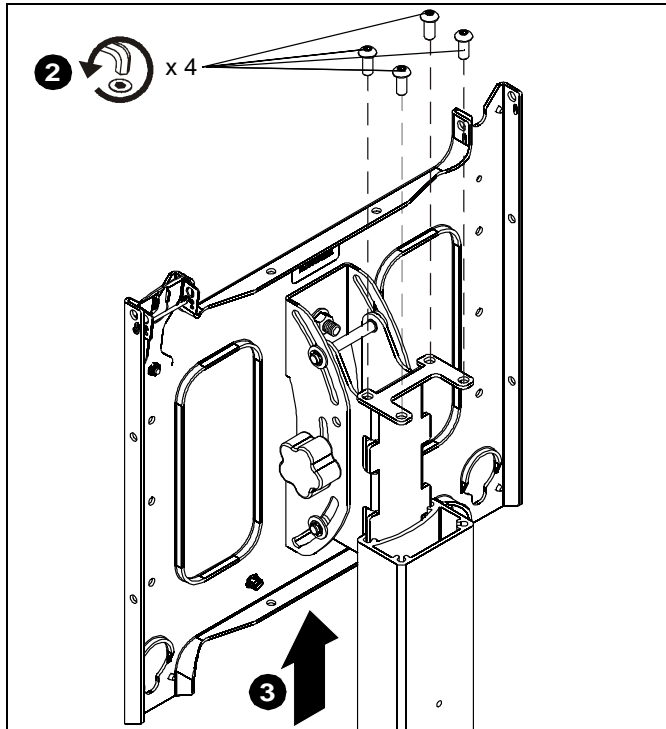


Figure 1

4. Carefully tip cart/stand in order to expose screws on bottom of cart/stand.
5. Remove and save four screws and washers from bottom of cart/stand. (See Figure 2)
6. Remove mounting column from base of cart/stand. (See Figure 2)

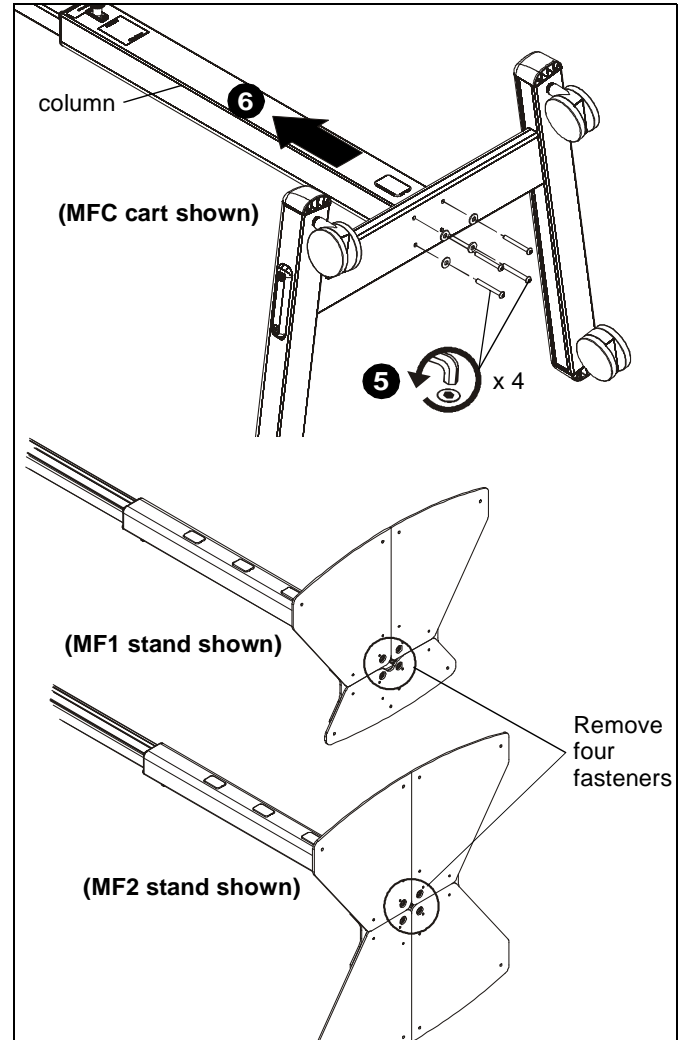


Figure 2

7. Turn knob on back of column to release inner column from outer column. (See Figure 3)
8. Pull inner column down through outer column until lower end of inner column is exposed. (See Figure 3)

NOTE: If installing on a cart, proceed to **Installing on Cart** section. If installing on a stand, proceed to **Installing on Stand** section.

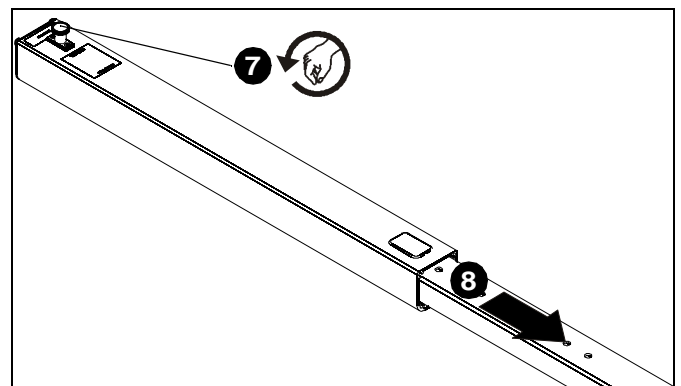


Figure 3

Installing to Cart

1. Remove and save end plate from end of gas spring assembly (A) by turning plate counterclockwise. (See Figure 4)

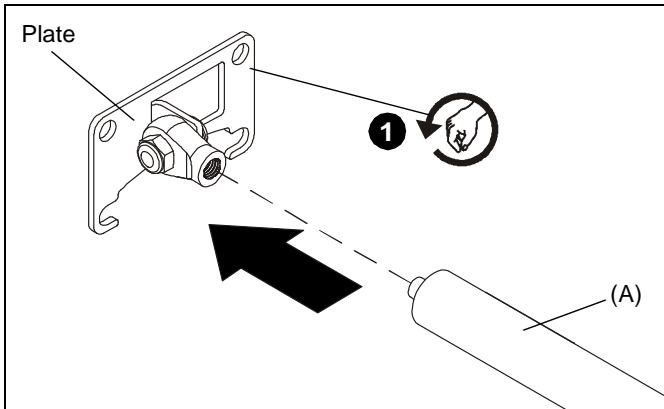


Figure 4

2. Remove four button head screws from bracket at end of inner column. (See Figure 5)
3. With gas spring assembly (A) inside the inner column, slide spring assembly up until the center plate rests against the bracket at bottom of inner column. (See Figure 5)

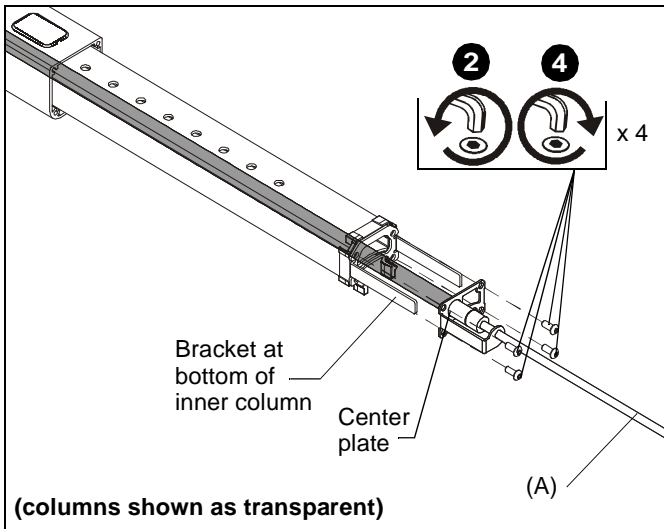


Figure 5

4. Fasten gas spring assembly (A) through bracket at bottom of inner column to inner column, using four button head screws removed in Step 2. (See Figure 5)
5. With gas spring assembly (A) fastened to the inner column, slide inner column of cart up through outer column, and out the top of the outer column. (See Figure 6)

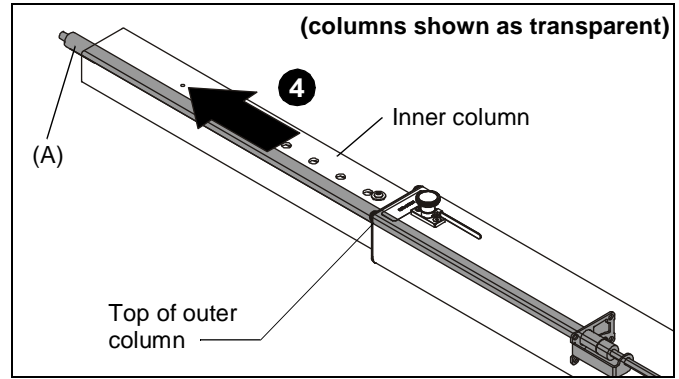


Figure 6

6. Replace plate removed in Step 1 to the end of gas spring assembly (A). (See Figure 7)

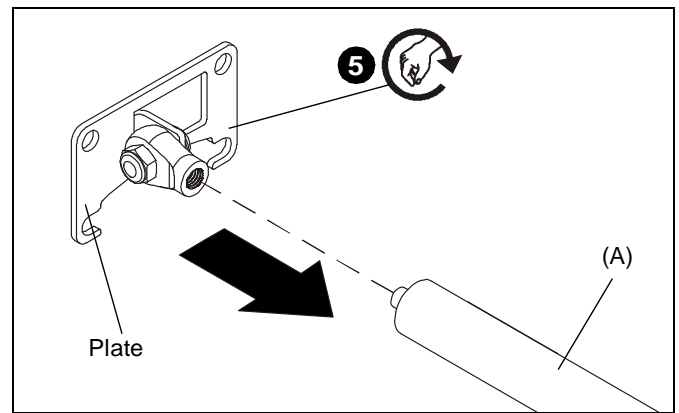


Figure 7

NOTE: Proceed to **Completing Installation to Cart/Stand** section.

Installing to Stand

1. Remove and save one button head cap screw and nut from plate at end of gas spring assembly (A). (See Figure 8)
2. Remove plate from end of gas spring assembly (A). (See Figure 8)

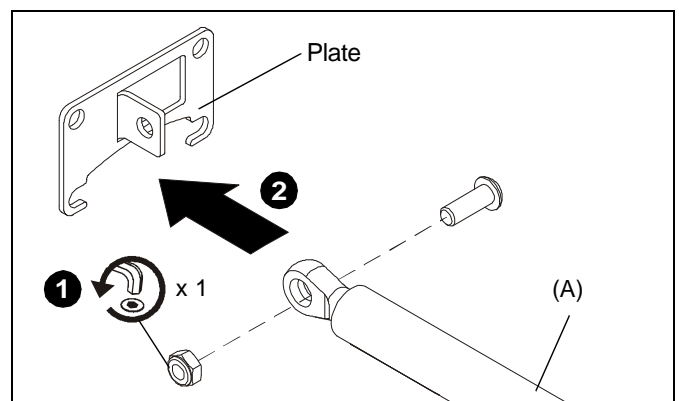


Figure 8

- Remove four button head screws from bracket at end of inner column. (See Figure 9)

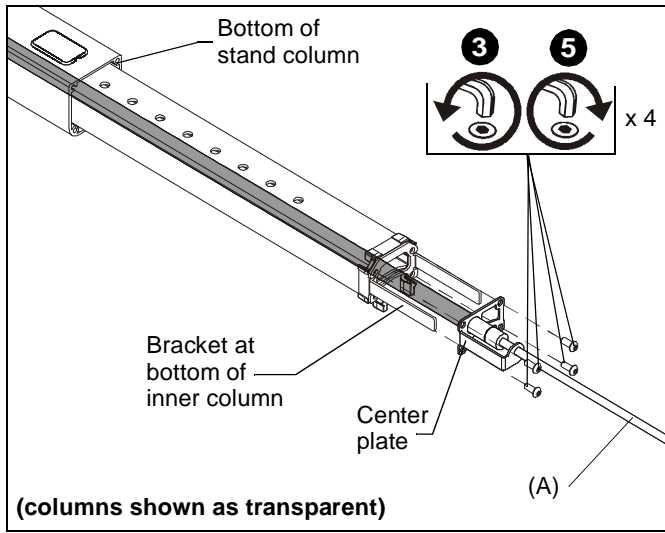


Figure 9

- With gas spring assembly (A) inside the inner column, slide spring assembly up until the center plate rests against the bracket at bottom of inner column. (See Figure 9)
- Fasten gas spring assembly (A) through bracket at bottom of inner column to inner column, using four button head screws removed in Step 3. (See Figure 9)
- With gas spring assembly (A) fastened to the inner column, slide inner column of cart/stand up through outer column, and out the top of the outer column. (See Figure 10)

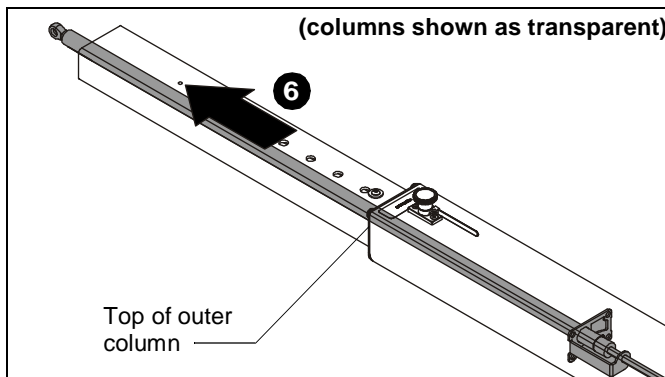


Figure 10

- Fasten gas spring mount for stand (B) to gas spring assembly (A) using the button head screw and nut removed in Step 1. (See Figure 11)

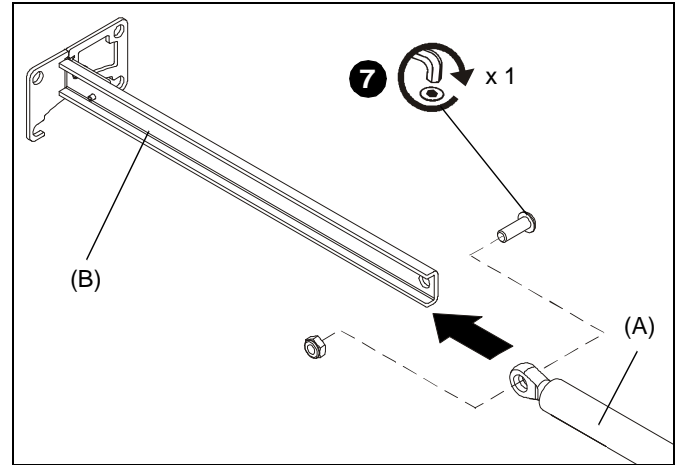


Figure 11

Completing Installation to Cart/Stand

- Place plate on gas spring mount for stand (B) [or plate on gas spring assembly (A) for cart] at top of upper cart/stand column. (See Figure 1)

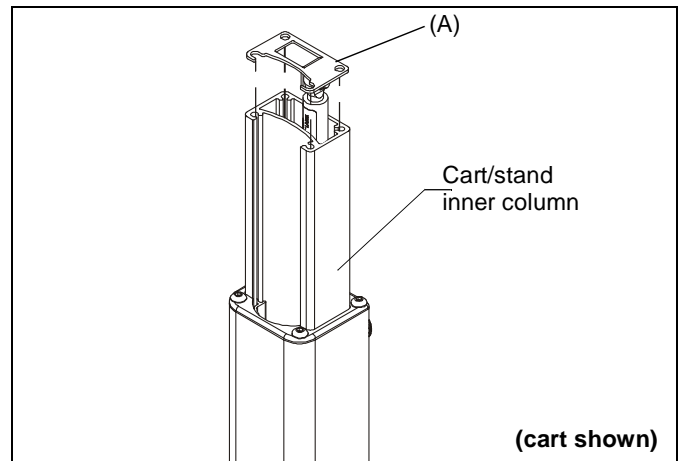


Figure 12

2. Reattach faceplate on top of gas spring assembly plate.

IMPORTANT ! : When attaching faceplate ensure that the ClickConnect lock is at TOP of head assembly, and bracket tabs slide into the cart/stand assembly. (See Figure 13)

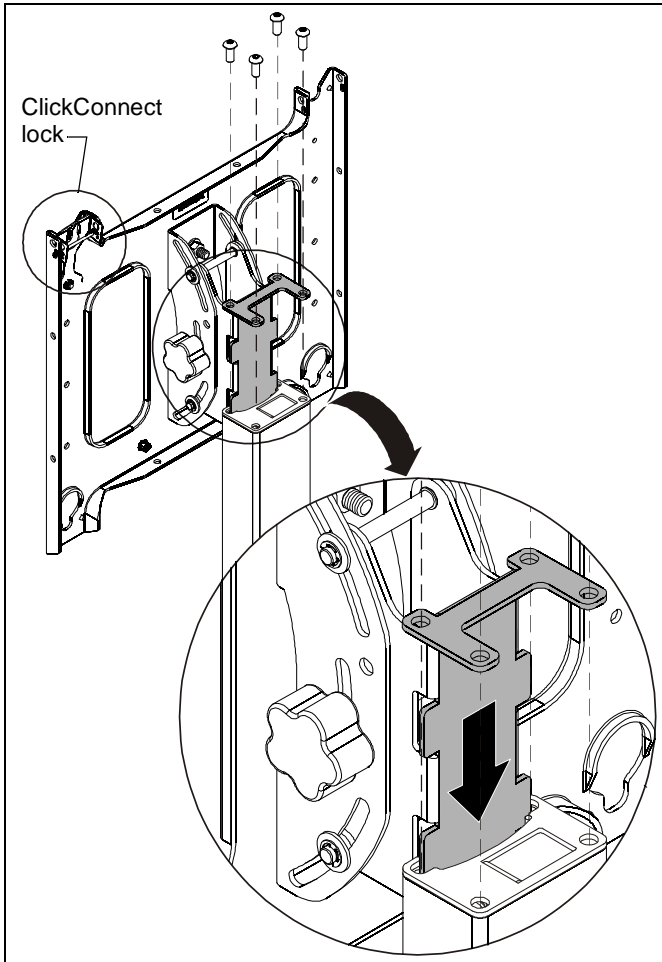


Figure 13

3. Fasten through faceplate and gas spring assembly plate using four 5/16-18 x 1" button head cap screws (C). (See Figure 14)

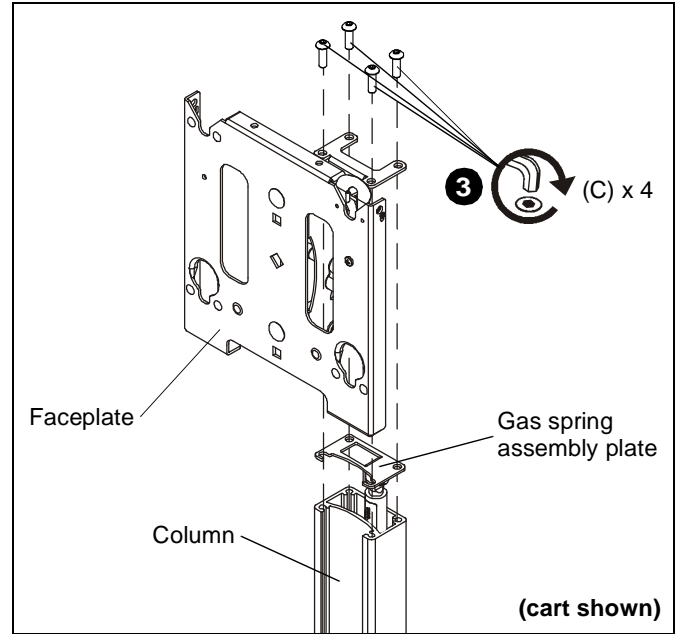


Figure 14

4. Position removed base of cart/stand to reattach to column.
5. Install four button head cap screws and washers (removed at beginning of assembly/installation) through holes in cart/stand, gas spring assembly base (A) and into outer column of cart/stand. (See Figure 15)

IMPORTANT ! : Partially install each screw until gas spring is compressed before tightening screws.

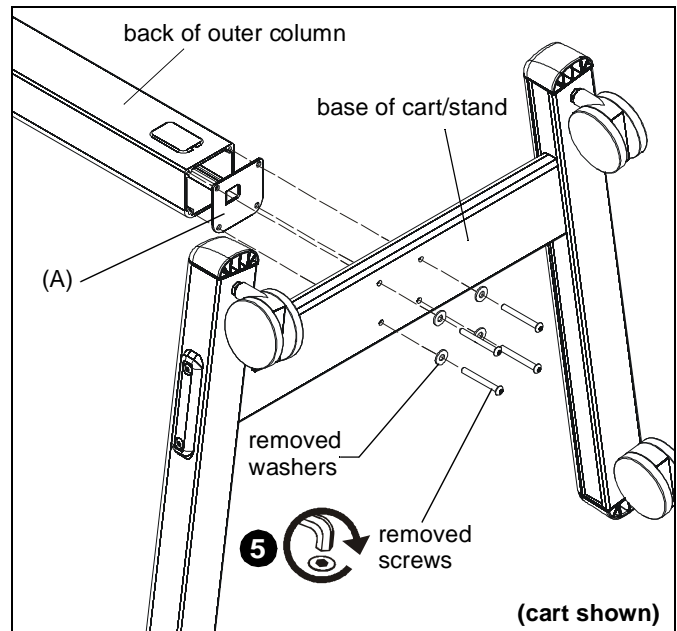


Figure 15

6. Stand cart/stand in upright position. Inner column should be fully extended.
7. Pull down inner column to desired height.

8. Tighten knob on back of column to secure pin into corresponding notch at desired height.
9. Mount display onto cart/stand according to cart/stand installation instructions.

Height Adjustment

NOTE: Height should be adjusted with the weight of the display or equipment mounted on the cart/stand.

1. Loosen knob on back of column. (See Figure 16)
2. Adjust height to desired level. (See Figure 16)
3. Tighten knob on back of column at corresponding pin hole. (See Figure 16)

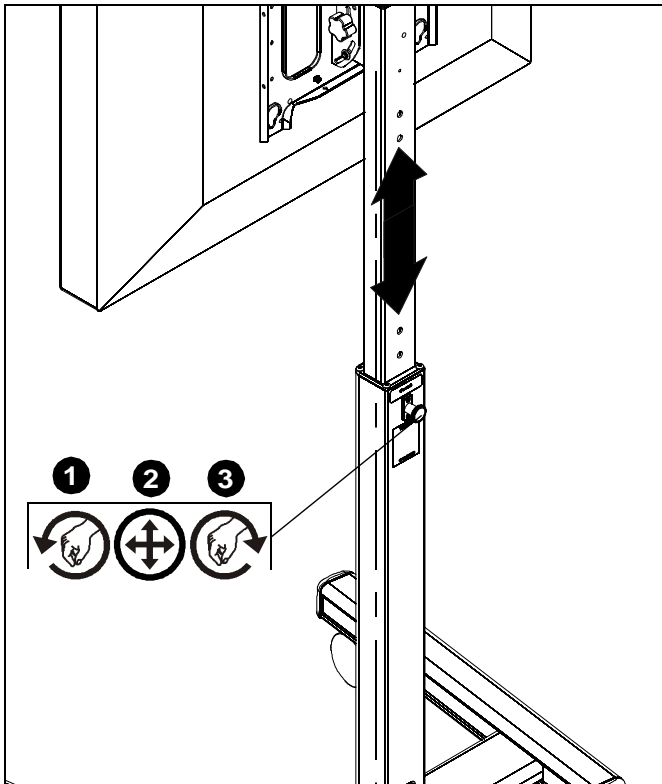


Figure 16



Our Mounts. **Your Vision.**

Chief Manufacturing, a products division
of Milestone AV Technologies

8807-002018 Rev00
©2010 Milestone AV Technologies, a
Duchossois Group Company
www.chiefmfg.com
07/10

USA/International

A 8401 Eagle Creek Parkway, Savage, MN 55378
P 800.582.6480 / 952.894.6280
F 877.894.6918 / 952.894.6918

Europe

A Fellenoord 130 5611 ZB EINDHOVEN, The Netherlands
P +31 (0)40 2668620
F +31 (0)40 2668615

Asia Pacific

A Office No. 1 on 12/F, Shatin Galleria
18-24 Shan Mei Street
Fotan, Shatin, Hong Kong
P 852 2145 4099
F 852 2145 4477

