

SAFR15, SAFR27, SAFR36 **Instruction Manual**



We are here to help!

Thank you for choosing AVS. Before beginning installation, please check all parts are included and undamaged. AV Supply Group (AVS) intends to make this manual accurate and complete. However, AVS makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency on connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. AVS makes no representation of warranty, expressed or implied, regarding the information contained herein, AVS Assumes no responsibility for accuracy, comleteness or sufficiency of the information contained in this document.

For any parts enquiries, please contact AV Supply Group as below:

New Zealand

P 6492749172 E info@avsupply.co.nz Australia

- P 61 3 9071 4585
- E info@avsupplygroup.com.au

IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS – PLEASE READ ENTIRE MANUAL PRIOR TO USE

Thank you for choosing a AVS Componet Series Rack. The SAFR series is designed to support audio/video equipment. The total weight capacity for the SAFR series:

SAFR15 226.8 kg (500 lb) SAFR27 340.2 kg (750 lb) SAFR36 385.5 kg (850 lb)

Each 3U shelf supports up to 36.3 kg (80 lb), each 2U shelf supports up to 22.7 kg (50 lb), and each 1U shelf supports up to 13.6 kg (30 lb).

A CAUTION: Avoid potential personal injuries and property damage!

- Do not exceed the stated weight capacities.
- ▼ Do not shake, tilt, rock, sit, stand, or climb on your Component Series Rack. Tipping may cause injury or death.
- Do not move large racks by yourself; due to weight and height, assistance is required.
- Use extreme caution when moving a loaded rack! Push, DO NOT pull, loaded rack slowly over a short, smooth, level distance. Avoid sudden starts and stops to minimize the strain placed on casters.
- Do not use this product for any purpose not explicitly specified by manufacturer.
- If you do not understand these instructions, or have doubts about the safety of the installation, assembly or use of this product, contact manufacturer Customer Service or call a qualified contractor.
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.

NOTE: Due to continuous product improvement, images shown in this manual may vary from actual product.

Tools



Supplied Parts and Hardware

Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

Supplied parts are located inside of the rack. To access the parts:

- 1. Remove side panel to access key.
- 2. Insert key into door lock and turn clockwise; pull door handle out and turn counter clockwise.
- 3. Open door and remove supplied parts.



Supplied Parts and Hardware







Level Feet



3 Remove Cable Access Panels for Cable Management





OP⁻

4 Verify the Grounding Strap has been Installed



5 Install Fan for Additional Ventilation



A CAUTION: Avoid damage to your components due to overheating. Make sure that there is adequate space between each unit for proper airflow. Operating temperature inside the rack must not exceed 104°F (40°C). **To install fan:**

Remove the vented panel. Remove any metal burrs that remain in the panel frame. Mount the cooling fan using the screws preinstalled in the top. For a second fan, remove the adjacent solid panel and add fan.





















10 Reverse the Front Door - continued A A OP Flip the door handle Remove screws and bracket. Flip the door handle. 10 9 • Reattach screws and bracket. Loosen the locking cam screw. 12 11 TE 0.-00 Flip the locking cam tab to the Tighten the locking cam screw. 13 Δ side nearest the edge of the door.



