## THOR TECHNOLOGIES HARD WIRE PRODUCT DRM95-20A CONNECTION GUIDE



## **DISCLAIMER:**

THIS GUIDE HAS BEEN COMPILED AS A CONNECTION GUIDE **ONLY** FOR 'THOR TECHNOLOGIES' HARDWIRE PRODUCT DRM95-20A

IT IS NOT A GUIDE OR INSTRUCTION FOR THE CONFIGURATION / ORIENTATION OF A SWITCHBOARD OR ANY OF THE FITTINGS USED THEREIN. DUE TO THE VARIETY OF FITTINGS USED SOME FITTINGS MAY BE DRAWN BASED ON A REVERSED CONFIGURATION AS SUPPLIED BY A MANUFACTURER. AS TO THE ORIENTATION OF THE ... SW... CCB... RCD... RCBO...ETC... WHICH MAY VARY BETWEEN STATES AND TERRITORIES. THE IMPORTANT PARTS ARE THE HIGHLIGHTED IN THE WIRING DIAGRAMS FOR THE THOR TECHNOLOGIES DRM95-20A

ALL WIRING MUST BE CARRIED OUT BY A LICENCED ELECTRICIAN AND ALL WORK IS SUBJECT TO REGULATIONS IN EACH STATE AND TERRITORY

ALL DRAWINGS SUBJECT TO CHANGE WITHOUT NOTICE.



THE FOLLOWING DRAWINGS COVER VARIOUS WAYS TO WIRE IN 'THOR TECHNOLOGIES HARDWIRE PRODUCT' DRM95-20A

DUE TO THE VARIOUS WAYS THAT MANY PREMISES ARE WIRED THERE IS NO ABSOLUTE GUARANTEE THAT THE PRODUCT WILL FIX ALL PROBLEMS EVEN IF IT IS WIRED AS PER INSTRUCTIONS.

EACH PRODUCT HAS SOME VARIATIONS AS TO WIRING, PLEASE READ THE INSTRUCTIONS BEFORE INSTALLING

SPECIAL INSTRUCTIONS FOR ALL 'THOR TECHNOLOGIES HARDWIRE PRODUCTS'

THE <u>NEUTRAL</u> CONNECTION OUTPUT FROM THE **THOR TECHNOLOGIES HARDWIRE PRODUCT DRM95-20A** MUST BE USED AS A <u>FULLY ISOLATED NEUTRAL OUT</u> FOR THE CIRCUIT OUTPUT BEING PROTECTED / FILTERED ....

DO NOT RETURN THE NEUTRAL OUT FROM THE DRM95-20A TO THE COMMON NEUTRAL BAR...OR CROSS WIRE INTO EXISTING CIRCUITS WHERE THAT CIRCUITS' NEUTRAL IS RETURNED TO THE COMMON NEUTRAL BAR AT THE SWITCHBOARD ... DOING SO WILL CAUSE THE PRODUCT TO OVERHEAT AND SUBSEQUENTLY FAIL.

INSTALLER CREATED OR EXISTING PROBLEMS ARE NOT COVERED BY THOR TECHNOLOGIES PRODUCT

WARRANTIES WRITTEN, IMPLIED OR OTHERWISE.

THE DRM95-20A CIRCUIT SHOULD BE TOTALLY INDEPENDENT AND ISOLATED

## DRM95-20A

- EARTH MUST BE FITTED <u>ONLY</u> TO THE INPUT SIDE FOR THE PROTECTION AND FILTRATION CIRCUITS TO OPERATE CORRECTLY
- THE OUTPUT EARTH CONNECTION IS NOT AVAILABLE IN ORDER TO MAXIMISE THE EFFICIENCY OF THE DYNAMIC ACTIVE TRACKING FILTER. ON THE OUTPUT ONLY THE ACTIVE AND NEUTRAL OUTPUT SHOULD BE USED AND EARTH SHOULD BE CONNECTED TO THE STANDARD SWITCHBOARD EARTH BAR


Model DAM IS
20 ANYS


Whole DAM IS
20 ANYS

Why Capachy scime broking
(DN Rail Meastable) A
SURGE PROTECTION
ISOLATION MODULE


ACTOR STORM

DRM95-20A

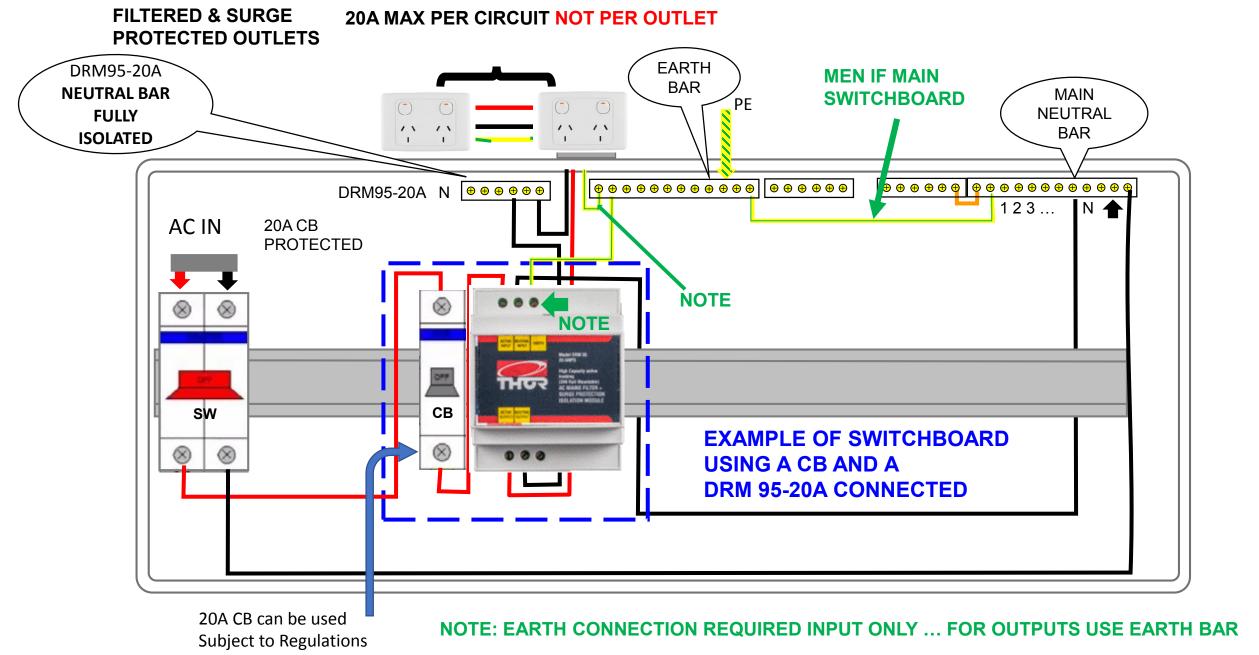

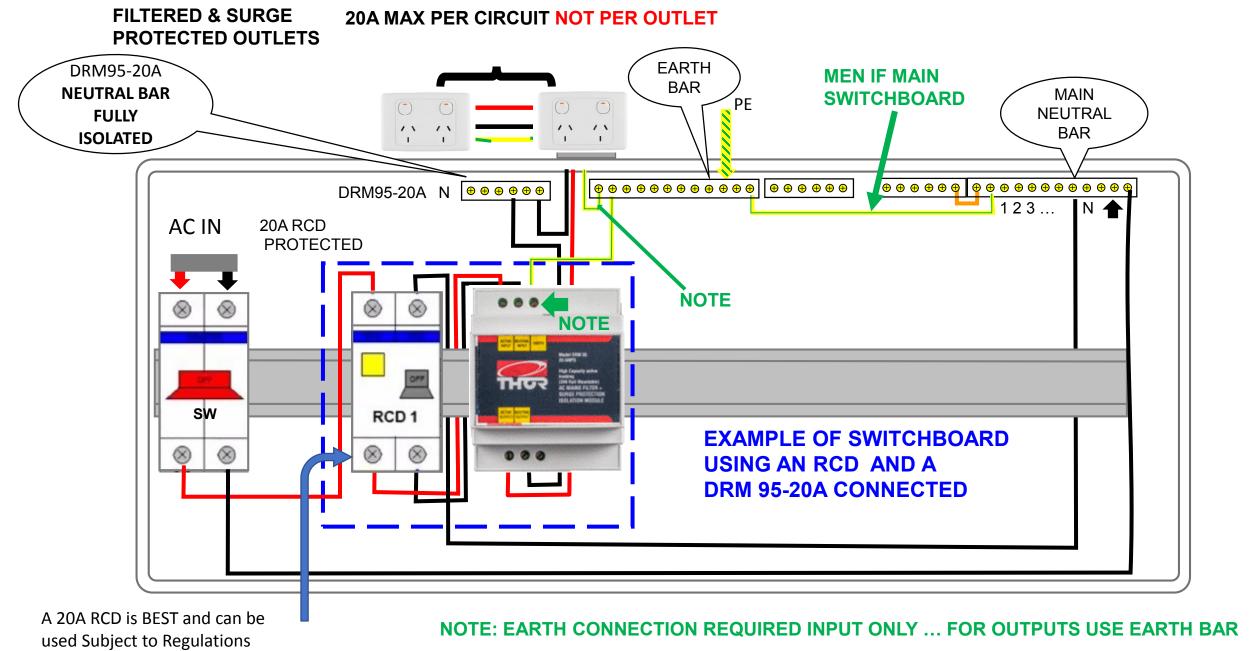

GUIDE ONLY FOR THOR DRM95-20A ... ALL WIRING SUBJECT TO REGULATIONS IN EACH STATE AND TERRITORY

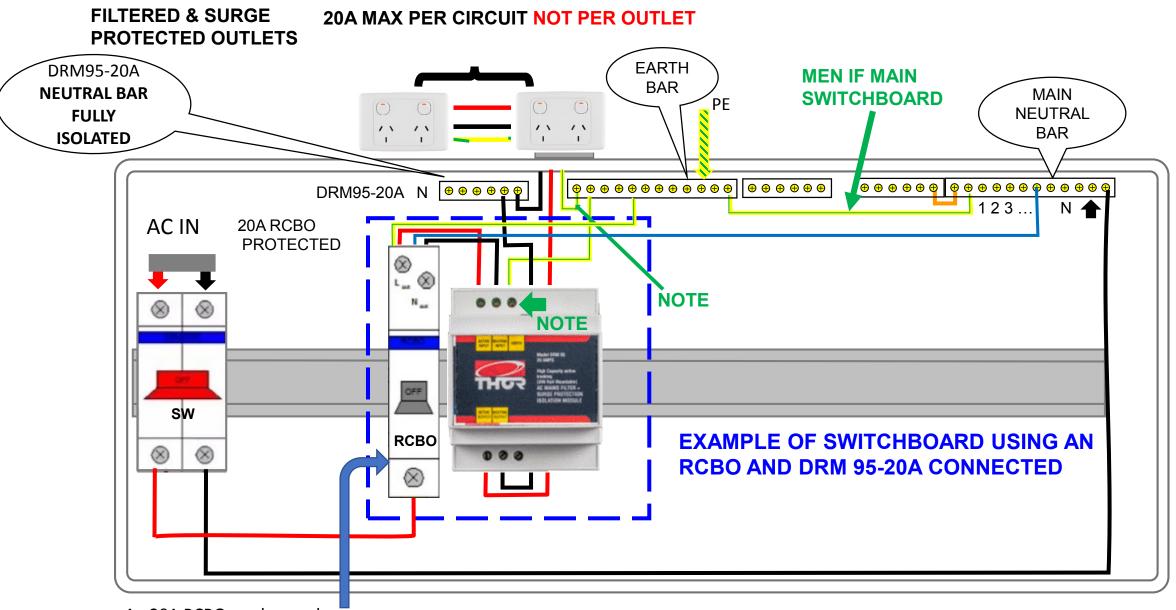

An 20A RCBO can be used Subject to Regulations

NOTE: EARTH CONNECTION REQUIRED INPUT ONLY ... FOR OUTPUTS USE EARTH BAR