


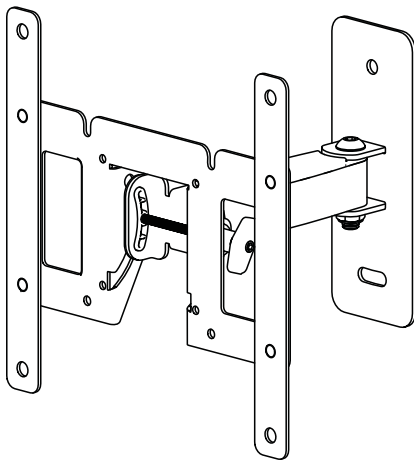

F107c INSTRUCTION MANUAL

We'll Make It Stress-Free

If you have any questions along the way, just give us a call.
1-888-333-9952. We're ready to help!

Scan for easy install video

san.us/247



Before You Begin

Please check the following items:

- ☐ Your TV and any accessories you plan to use do not exceed the specified weight limit.
- ☐ The hole pattern on the back of your TV is compatible with the hole pattern of the TV bracket(s).
- ☐ The wall you chose to mount your TV is a wood stud wall.
- ☐ You read and understand these directions.
- ☐ You refer to the documentation that came with your TV for additional guidance.
- ☐ You have the tools needed for installation.

If you do not understand these instructions, or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service or call a qualified contractor.

▲ CAUTION: Avoid potential personal injuries and property damage!

- This product is designed for use in wood studs - DO NOT install into drywall alone
- The wall must be capable of supporting five times the weight of the TV and mount combined
- Do not use this product for any purpose not explicitly specified by manufacturer
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use






NOTE: Para instrucciones en Español, ver páginas 20-23.

Weight Limit

35 lb (15.8 kg)



DO NOT EXCEED!
(includes TV and any
accessories)

Tools Needed

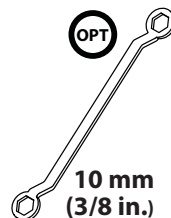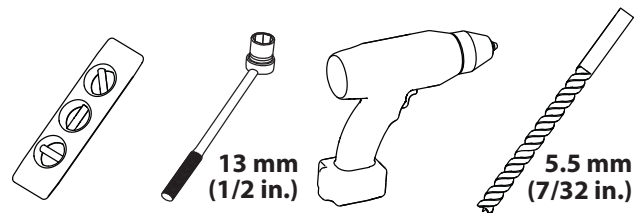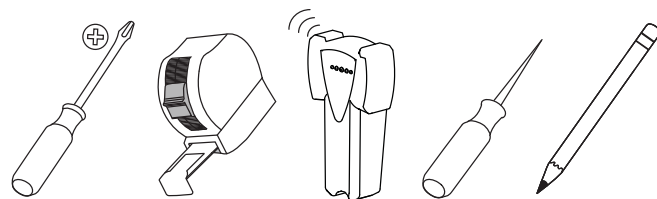

Dimensions

in.
[mm]

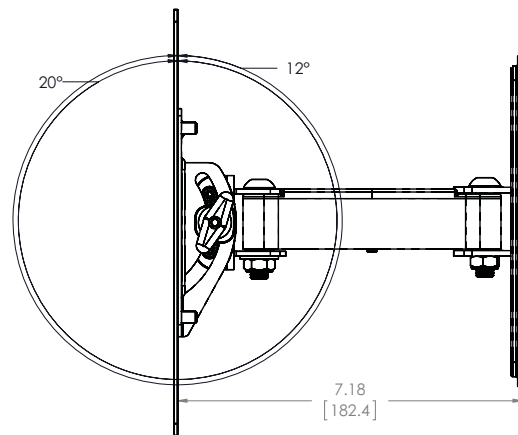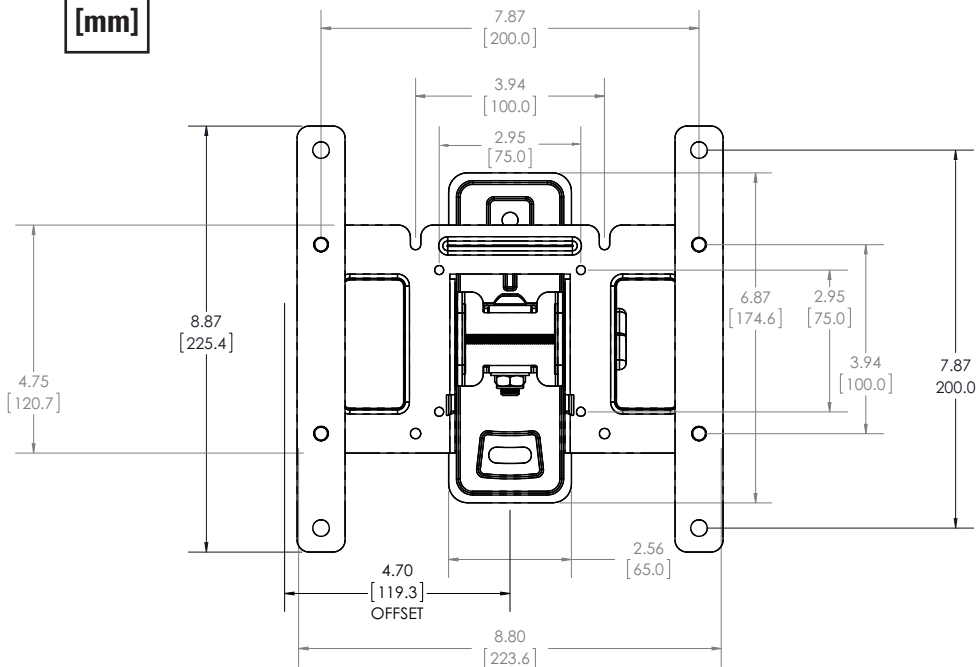

Supplied Parts and Hardware

⚠ WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!



NOTE: Not all hardware included will be used.


Parts and Hardware for STEP 1

Wall Plate Template




01

TV Interface Bracket/Wall Plate Assembly

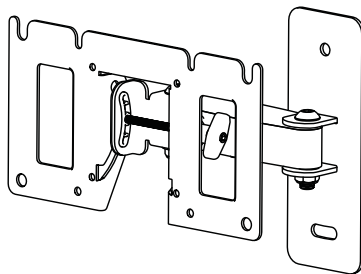

02

Lag Bolts




5/16 x 2 1/2 in.

03 (2)

Parts and Hardware for STEP 2

TV Screws




M4 x 12mm

04 (4)



M5 x 12mm

05 (4)



M6 x 12mm

06 (4)



M4 x 35mm

07 (4)



M5 x 35mm


08 (4)



M6 x 35mm


09 (4)

Washers

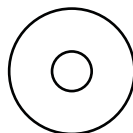

M4/M5


10 (4)

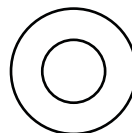

M6

11 (4)

Spacers

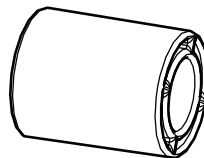

12 (4)

Extender Brackets*



13 (2)

Extender Bracket Nuts*




14 (4)


*Only needed for TVs with
200x200 mm (7 7/8 x 7 7/8 in.)
hole patterns

Additional Hardware

Allen Key


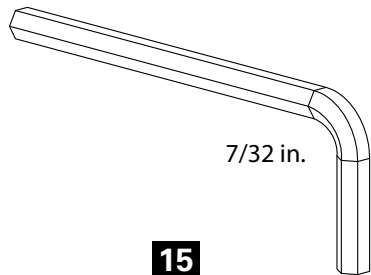


IMPORTANT: When choosing a location for your TV on the wall, please keep in mind that the TV will shift 199.3 mm (4.7 in.) from the EXTENDED to the HOME positions.

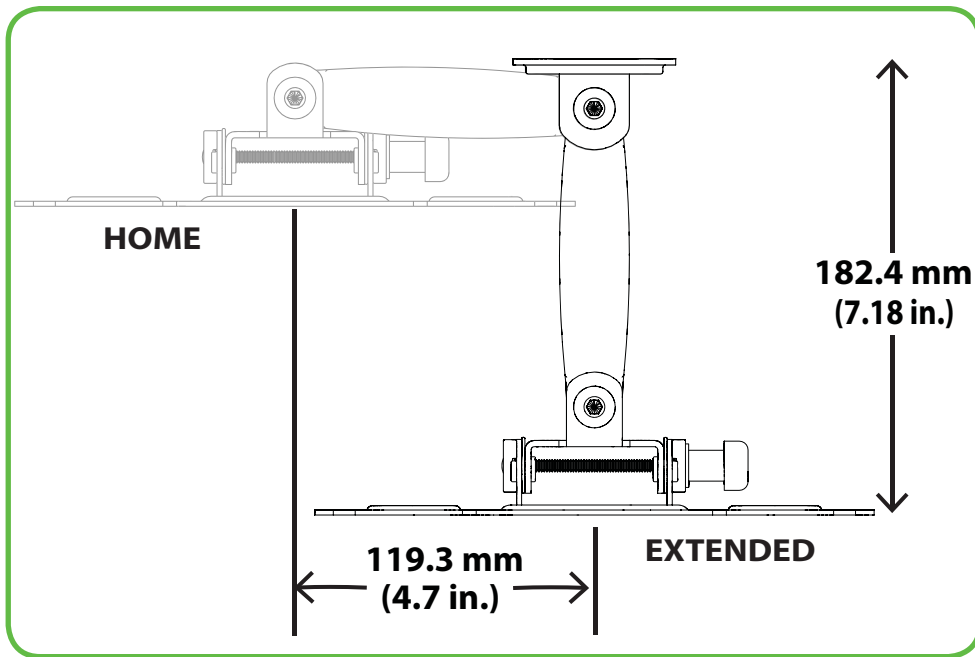

Attach Wall Plate to Wall (Wood Stud ONLY!)

1. Locate your stud(s). Verify the center of the stud using an awl, a thin nail, or an edge to edge stud finder.
⚠ CAUTION: Avoid potential personal injuries and property damage!
 - Drywall covering the wall must not exceed 16 mm (5/8 in.).
 - Minimum wood stud size: common 51 x 102 mm (2 x 4 in.) nominal 38 x 89 mm (1½ x 3½ in.).
2. Level the wall plate template **01** and mark the hole locations.

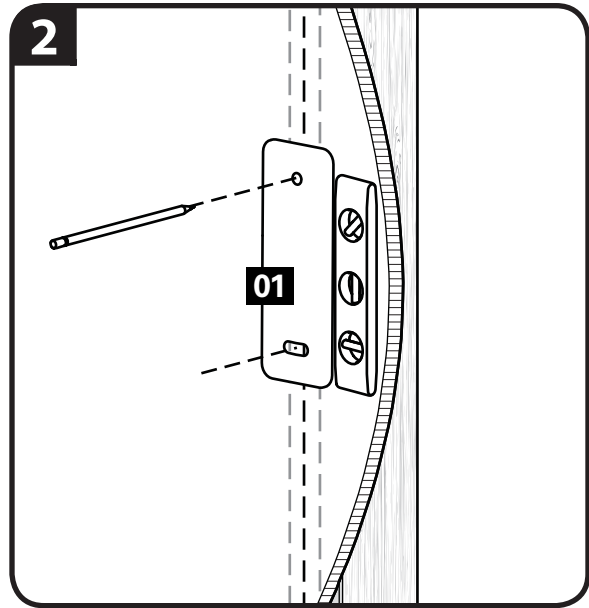
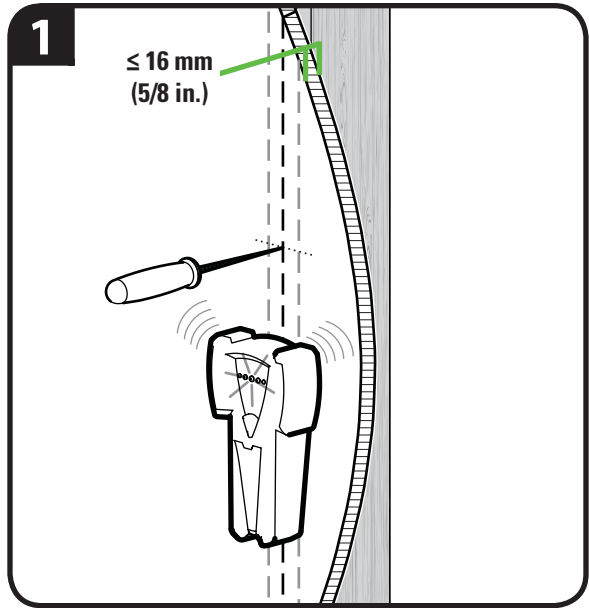


3. Drill pilot holes.

! IMPORTANT: Pilot holes must be drilled to a depth of 63.5 mm (2½ in.), using a 5.5 mm (7/32 in.) diameter drill bit.

4. Tighten the lag bolts **03** only until they are pulled firmly against the wall plate **02**.



⚠ CAUTION: Improper use could reduce the holding power of the lag bolt. DO NOT over-tighten the lag bolts.

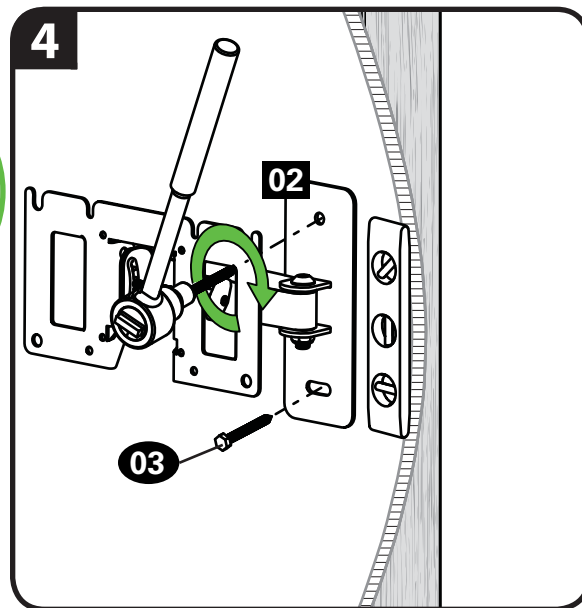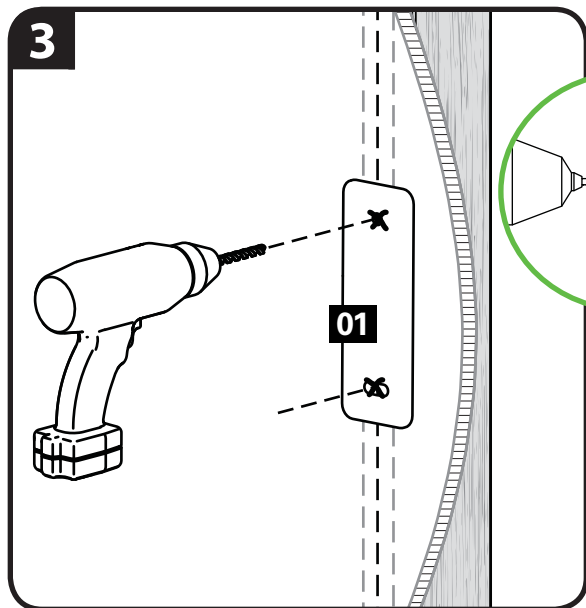

STEP 2

Select TV Hardware and Attach Interface Bracket(s) to TV

1. Hand thread screws into the threaded inserts on the back of your TV to determine the correct screw diameter (M4, M5, or M6).
2. Determine what kind of TV you have and if you require extra space between the wall and the TV to accommodate cables.
 - If you have a flat back TV and do not require extra space for cables, see STEP 2-A
 - If you have an irregular back TV or need extra space to accommodate cables, see STEP 2-B

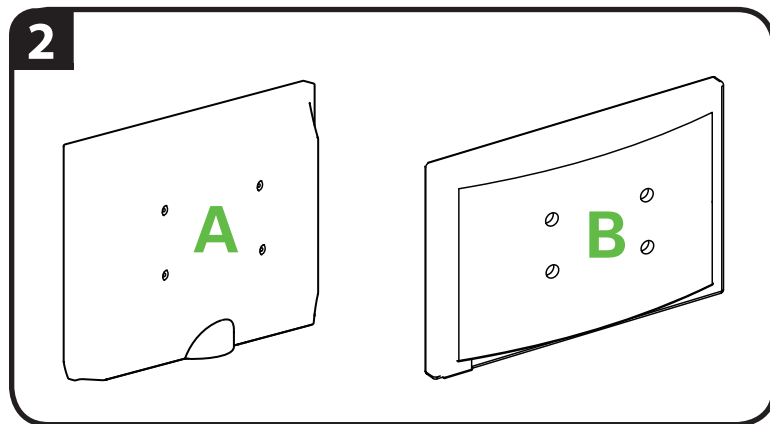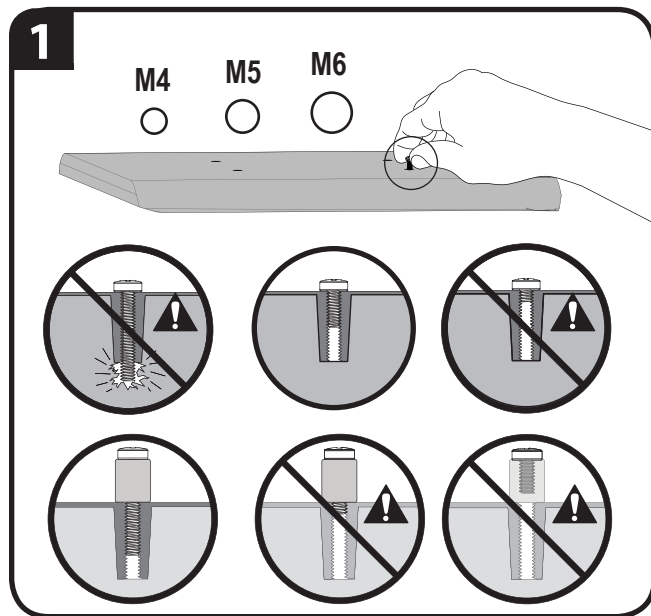


⚠ CAUTION: Avoid potential personal injuries and property damage! Verify that there are adequate threads to secure the brackets to the monitor. If you encounter resistance, stop immediately and contact customer service. Use the shortest screw and spacer combination to accommodate your needs. Using hardware that is too long may damage your TV.



IMPORTANT: If the hole pattern on your TV is 200x200 mm (7 7/8 x 7 7/8 in.) install the extender brackets **13** using the nuts **14** provided.

If your TV hole pattern is less than 200x200 mm do not install the extender brackets. Skip ahead to STEP 2-A or 2-B.


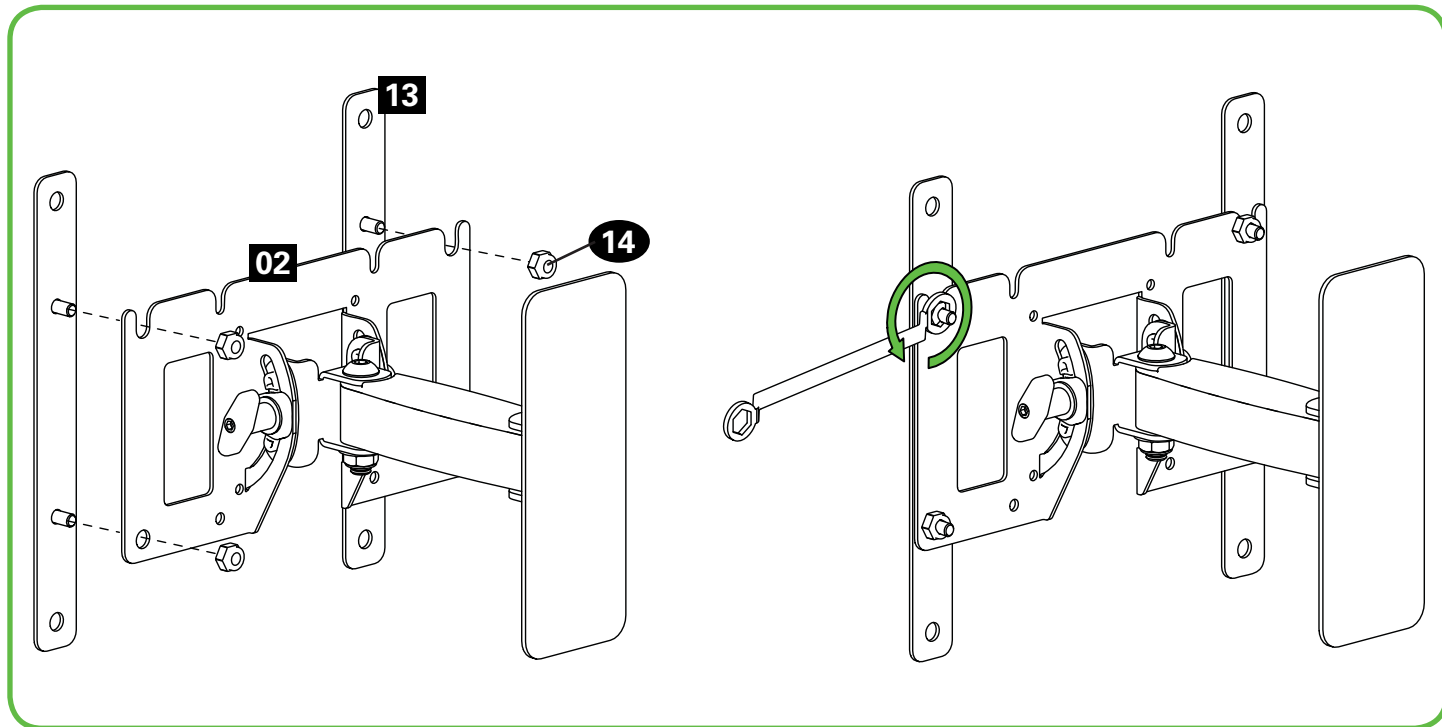


STEP 2-A

Install the top two screws but do not fully tighten. Leave a small gap so you can slide the TV bracket into place and then install the bottom two screws. Ensure that your bracket is level on the back of the TV. If you need extra space to accommodate cables, recesses, or protrusions; use spacers (see the irregular back option in STEP 2-B).




HEAVY! You may need assistance with this step.

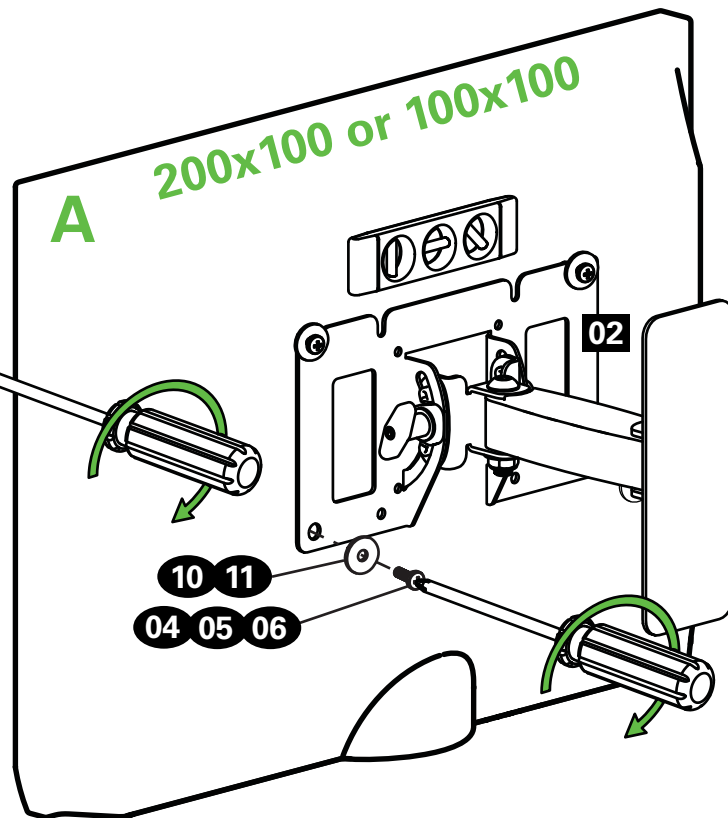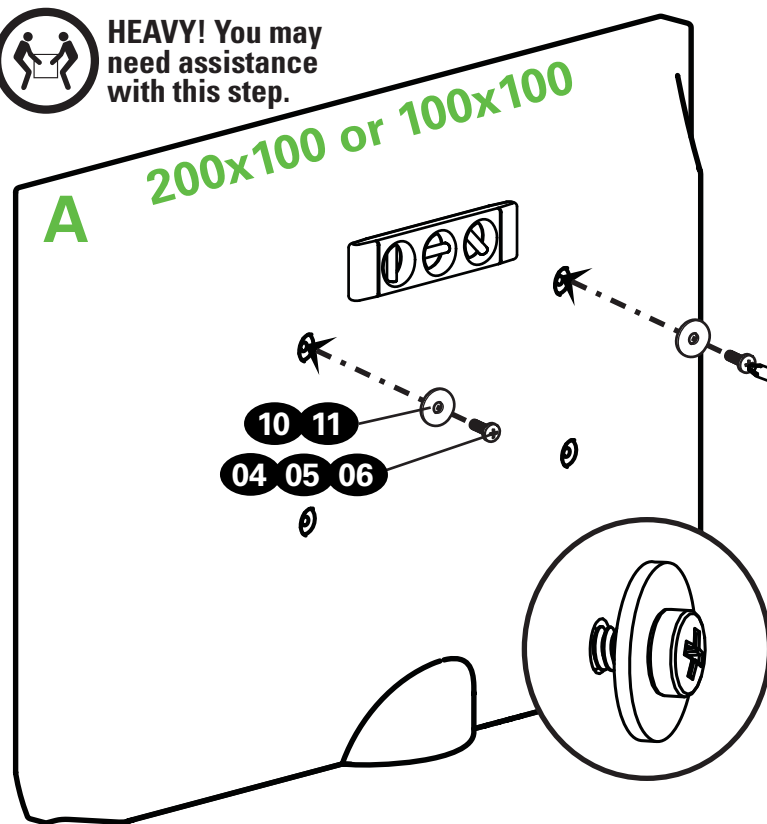




NOTE: If the hole pattern on your TV is 75x75mm the washers are not used. Install all four screws at the same time.

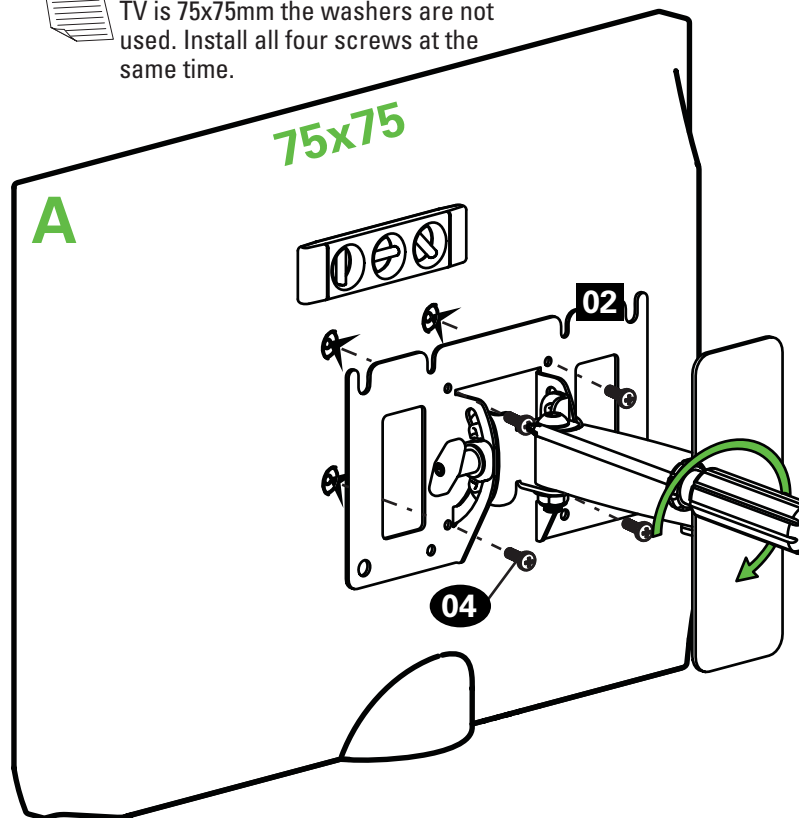

NOTE: If the hole pattern on your TV is 200x200 mm, install all four screws at the same time.


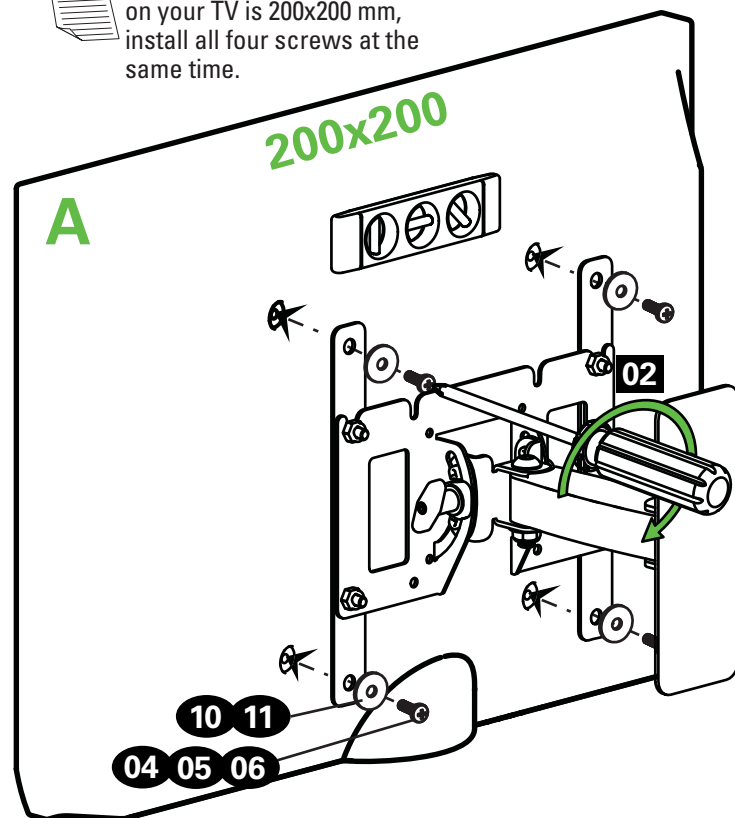


STEP 2-B

Install the top two screws but do not fully tighten. Leave a small gap so you can slide the TV bracket into place and then install the bottom two screws. Ensure that your bracket is level on the back of the TV. Standard configurations are shown. For special applications, or if you are unsure about your hardware selection, contact Customer Service.




HEAVY! You may need assistance with this step.

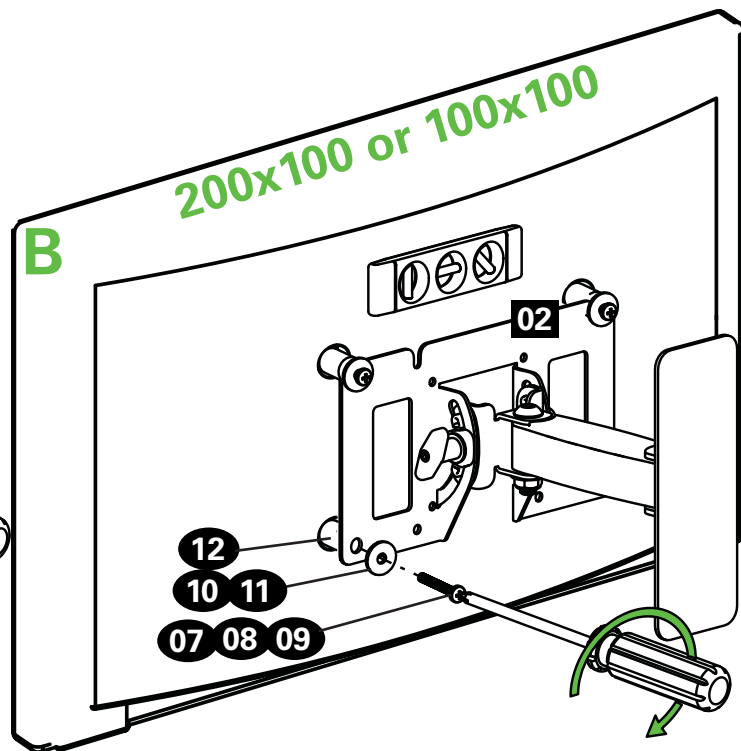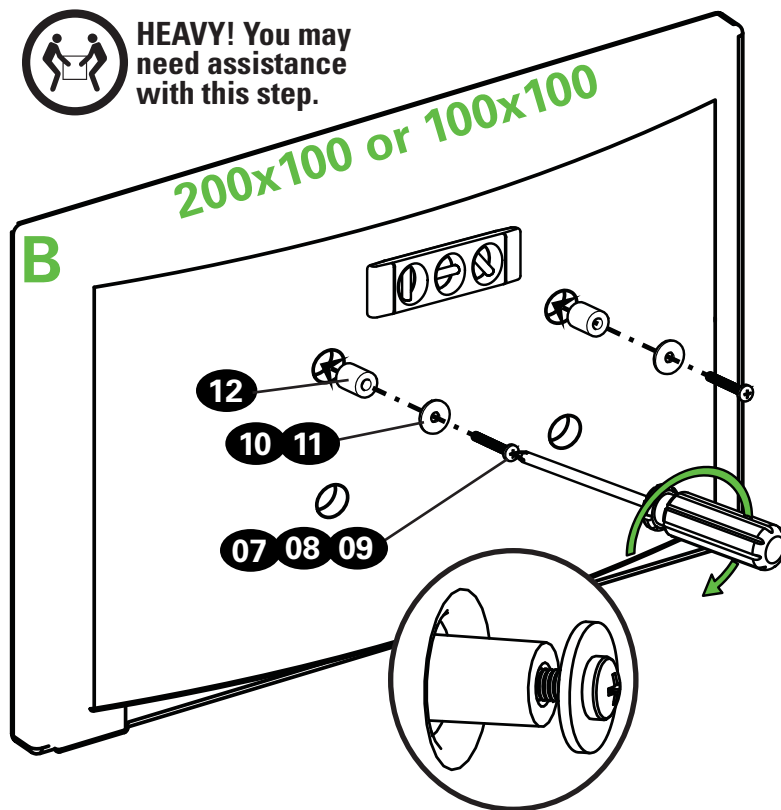






NOTE: If the hole pattern on your TV is 75x75mm the washers are not used. Install all four screws at the same time.

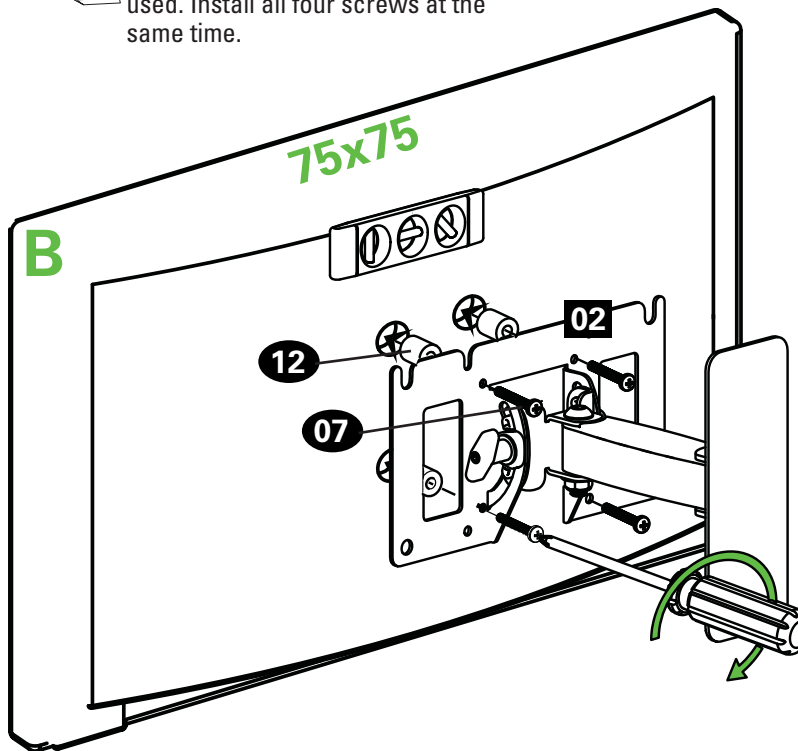

NOTE: If the hole pattern on your TV is 200x200mm, install all four screws at the same time.


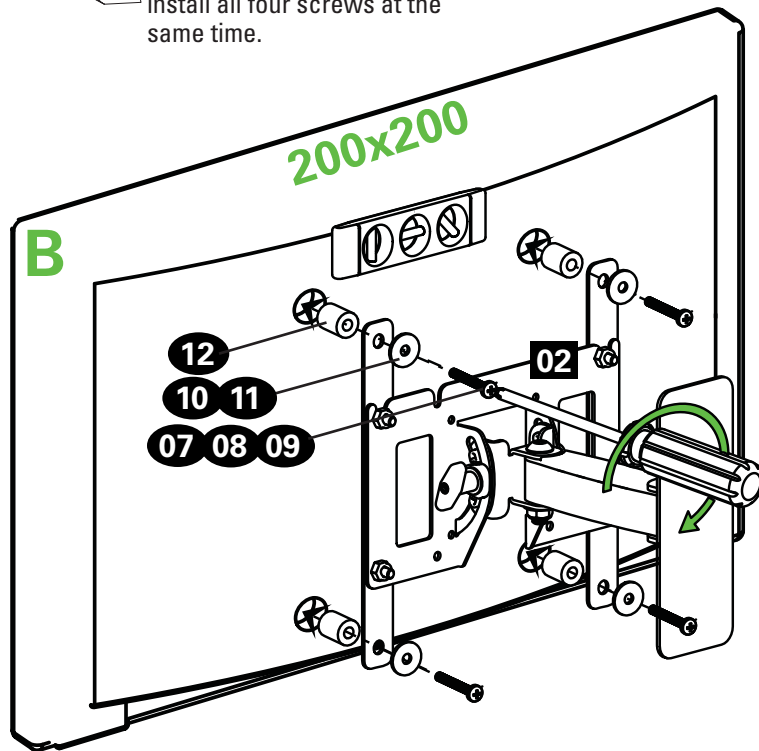


Manage Cables

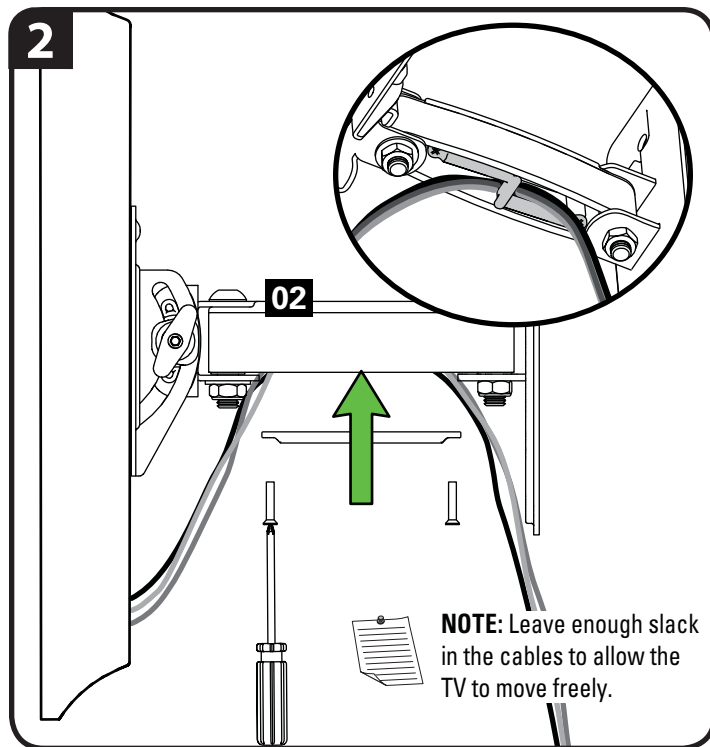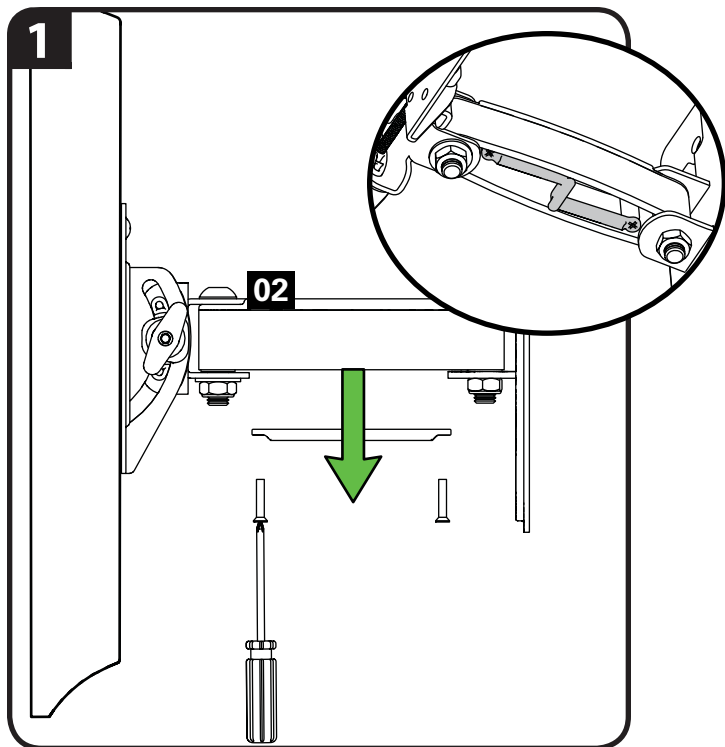


Troubleshooting

ADJUSTING TENSIONS

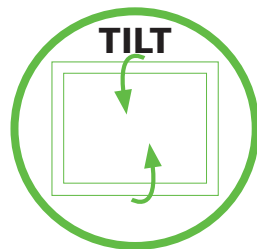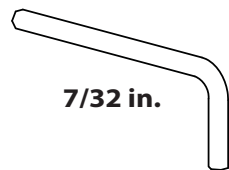

Loosen the knob on the TV bracket to adjust the tilt of your TV. Tighten the knob when your TV is set to the desired tilt.

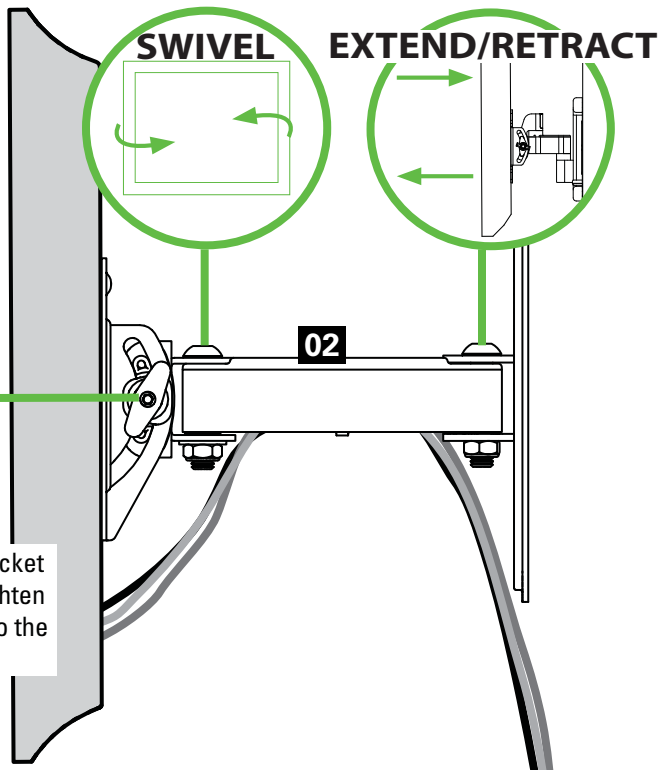

REMOVING THE TV

If you need to remove your TV, disconnect all cables and then reverse the procedures in STEP 2A /2B.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES. CONSÉRVELAS. LEA TODO EL MANUAL ANTES DE UTILIZAR ESTE PRODUCTO.

Antes de comenzar

Cerchiórese de:

- ☐ que su televisor y los accesorios que planifica usar no excedan el límite de peso especificado;
- ☐ que el patrón de orificios de la parte trasera de su televisor sea compatible con el patrón de orificios de la(s) placa(s) de sujeción para el televisor;
- ☐ que la pared escogida para el montaje de su televisor sea una pared de montantes de madera;
- ☐ haber leído y comprendido estas instrucciones;
- ☐ consultar la documentación incluida con su televisor para una mayor orientación;
- ☐ tener todas las herramientas necesarias para la instalación.

Si no entiende las instrucciones o si tiene dudas acerca de la seguridad de la instalación, del ensamblado o del uso del producto, contáctese con el servicio de atención al cliente o llame a un técnico calificado.

▲ PRECAUCIÓN: Evite posibles lesiones personales y daños materiales.

- Este producto fue diseñado para su uso en montantes de madera - NO instalar en yeso solo
- La pared debe soportar cinco veces el peso del televisor y del soporte juntos
- No utilice este producto para ningún otro propósito que no sea el explícitamente especificado por el fabricante
- El fabricante no se responsabiliza por ningún daño o lesión resultante del montaje incorrecto o del uso indebido

Peso límite

Herramientas necesarias

Dimensiones

Piezas y elementos de sujeción suministrados

⚠ ADVERTENCIA: Este producto contiene piezas pequeñas que, si fuesen tragadas, podrían producir asfixia. Antes de iniciar el ensamblaje, compruebe que todas las piezas estén incluidas y en buenas condiciones. Si faltan piezas o alguna está dañada, no devuelva el artículo al distribuidor; póngase en contacto con el servicio de atención al cliente. Nunca utilice piezas deterioradas.



NOTA: No todos los elementos de sujeción incluidos deberán utilizarse.

***Las placas de sujeción de expansión** sólo son necesarias para televisores con patrones de orificios de 200 x 200 mm (7 7/8 x 7 7/8 pulgadas).



IMPORTANTE: Cuando elija la ubicación para su televisor en la pared, tenga en cuenta que el televisor deberá girar 199,3 mm (4,7 pulgadas) de la posición EXTENDIDA a la posición INICIAL.

PASO 1

Fijar la placa mural a la pared (¡SÓLO montantes de madera!)

1. Localice el o los montantes. Verifique el centro del montante con un punzón o un clavo delgado, o bien utilice un detector de bordes de montantes.

⚠ PRECAUCIÓN: Evite posibles lesiones personales y daños materiales.

- El yeso que recubre la pared no debe exceder los 16 mm (5/8 pulgada).
- Tamaño mínimo del montante de madera: común 51 mm x 102 mm (2 x 4 pulgadas) (nominal 38 mm x 89 mm [1½ x 3½ pulgadas]).

2. Nivele la placa mural **01** y marque la ubicación de los orificios.

3. Realice los orificios guía.

! IMPORTANTE: Los orificios guía deben realizarse con una mecha de 5,5 mm (7/32 pulgada) de diámetro, hasta una profundidad de 63,5 mm (2,5 pulgadas).

4. Ajuste los tornillos tirafondo **03** solamente hasta que queden firmes contra la placa mural **02**.

⚠ PRECAUCIÓN: El uso indebido podría reducir la capacidad de retención de los tornillos tirafondo. NO ajuste en exceso los tornillos tirafondo.

PASO 2

Seleccionar los elementos de sujeción y colocar el soporte de acoplamiento al televisor

1. Enrosque manualmente los tornillos en los encastres roscados de la parte posterior del televisor a fin de determinar el diámetro correcto de los tornillos (M4, M5 o M6).
2. Determine qué tipo de televisor tiene y si necesita espacio adicional entre la pared y el televisor para colocar cables.
 - Si tiene un televisor de dorso plano y no necesita más espacio para cables, consulte el PASO 2-A
 - Si tiene un televisor de dorso irregular o si necesita espacio adicional para colocar cables, consulte el PASO 2-B

⚠ PRECAUCIÓN: Evite posibles lesiones personales y daños materiales. Verifique que las roscas sean adecuadas para fijar las placas de sujeción al televisor. Si encuentra resistencia, deténgase de inmediato y contáctese con el servicio de atención al cliente. Utilice la combinación de tornillo y espaciador más corta que se ajuste a sus necesidades. Si usa elementos de sujeción demasiado largos puede dañar el televisor.



IMPORTANTE: Si el patrón de orificios de su televisor es de 200 x 200 mm (7 7/8 x 7 7/8 pulgadas) instale las placas de sujeción de expansión **13** usando las tuercas **14** provistas.

Si el patrón de orificios de su televisor es de menos de 200 x 200 mm, no instale las placas de sujeción de expansión. Continúe con el PASO 2-A o 2-B.

PASO 2-A

Instale los dos tornillos superiores pero no los ajuste completamente. Deje un espacio pequeño para poder deslizar la placa de sujeción del televisor en su lugar y luego instalar los dos tornillos inferiores. Asegúrese de que la placa de sujeción quede nivelada en la parte posterior del televisor. Si necesita más espacio para cables, concavidades o protuberancias, use los espaciadores (consulte la opción para dorso irregular en el PASO 2-B).



¡ELEMENTO PESADO!
Es posible que necesite ayuda en este paso.



NOTA: Si el patrón de orificios de su televisor es de 75 x 75 mm, no se usan las arandelas. Instale los cuatro tornillos al mismo tiempo.



NOTA: Si el patrón de orificios de su televisor es de 200 x 200 mm, instale los cuatro tornillos al mismo tiempo.

PASO 2-B

Instale los dos tornillos superiores pero no los ajuste completamente. Deje un espacio pequeño para poder deslizar la placa de sujeción del televisor en su lugar y luego instalar los dos tornillos inferiores. Asegúrese de que la placa de sujeción quede nivelada en la parte posterior del televisor. Se ilustran las configuraciones estándar. Si desea información sobre aplicaciones especiales o si tiene dudas sobre la selección de piezas, contáctese con el servicio de atención al cliente.



¡ELEMENTO PESADO!
Es posible que necesite ayuda en este paso.



NOTA: Si el patrón de orificios de su televisor es de 75 x 75 mm, no se usan las arandelas. Instale los cuatro tornillos al mismo tiempo.



NOTA: Si el patrón de orificios de su televisor es de 200 x 200 mm, instale los cuatro tornillos al mismo tiempo.

PASO 3

Organización de cables

Resolución de problemas

AJUSTE DE LA TENSIÓN

Afloje la perilla que se encuentra en la placa de sujeción del televisor a fin de ajustar la inclinación de su televisor. Ajuste la perilla cuando su televisor tenga la inclinación deseada.

RETIRAR EL TELEVISOR

Si necesita retirar su televisor, desconecte todos los cables y revierta los procedimientos realizados en el PASO 2A /2B.



Thank you for choosing Sanus VuePoint!

Please take a moment to let us know how we did:

 **Call us: 888-333-9952**
UK: 0800 056 2853

 **Email us: info@sanus.com**

 **Leave a review: vuepoint.sanus.com**

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

©2013 Milestone AV Technologies, a Duchossois Group Company. All rights reserved. Sanus is a division of Milestone.
All other brand names or marks are used for identification purposes and are trademarks of their respective owners.