
# INSTALLATION INSTRUCTIONS

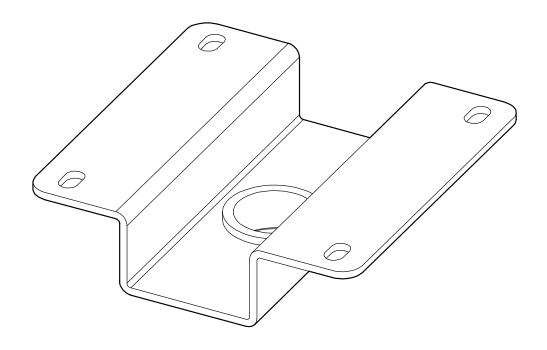

8" Off-Set Ceiling Plate



**CMA330** 

CMA330 Installation Instructions

#### **DISCLAIMER**

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



## **IMPORTANT SAFETY INSTRUCTIONS**

**WARNING:** A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.




**CAUTION:** A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



**WARNING:** Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.





**WARNING:** Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

WARNING: Never operate this mounting system if it is damaged. Return the mounting system to a service center for examination and repair.

WARNING: Do not use this product outdoors.

**IMPORTANT!:** These CMA mounts are designed to be:

- mounted to a 2" x 6" wood framework ceiling;
- mounted to a 8" concrete ceiling with a drywall covering of a maximum of 5/8";
- mounted to a suspended metal framing channel ceiling.




**WARNING:** Do NOT attach to vertical mounting surfaces such as walls or angled ceilings!


-- SAVE THESE INSTRUCTIONS--

Installation Instructions CMA330


## **DIMENSIONS**

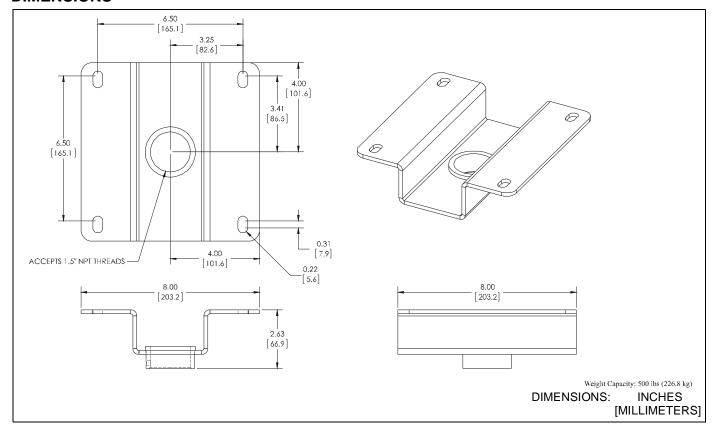


# **TOOLS REQUIRED FOR INSTALLATION**

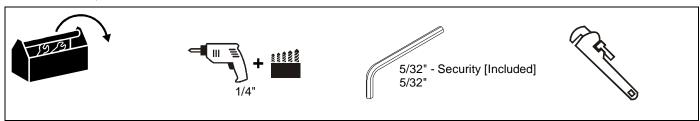

## **PARTS**

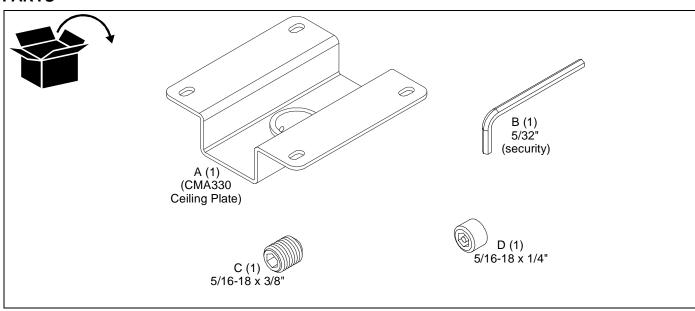

#### **LEGEND**

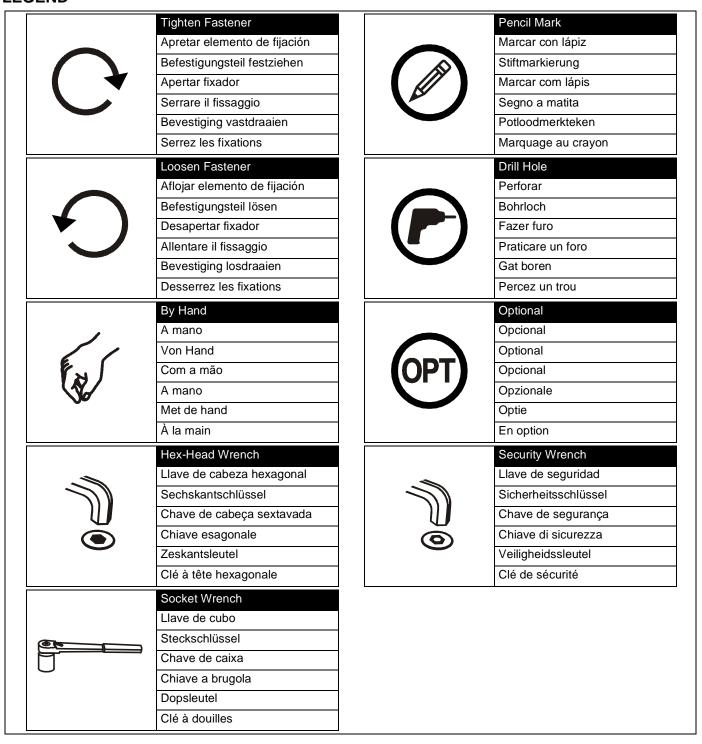

4

Installation Instructions CMA330

#### INSTALLATION AND INSTALLATION

These CMA mounts are designed for attachment to a 2" x 6" wood framework ceiling, a concrete ceiling or a suspended metal framing channel ceiling, and provides vertical adjustments in 3/4" increments.

WARNING: Do NOT attach to vertical mounting surfaces such as walls or angled ceilings!

WARNING: IMPROPER INSTALLATION CAN LEAD TO LIFT FALLING CAUSING SEVERE PERSONAL INJURY OR DAMAGE TO EQUIPMENT! It is the installer's responsibility to make certain the structure to which the mount is being attached is capable of supporting five times the weight of the CMA mount and all attached equipment. Reinforce the structure as required before installing the mount.

**NOTE:** The following instructions assume a suitable mounting structure and surface exists prior to installation.

### Installing to a Wood Framework (Joists)

 Using ceiling plate (A) as a template, mark locations of four pilot holes (See Figure 1). Ensure the marks are in the center of wood joists.

NOTE: Drywall not shown for clarity.

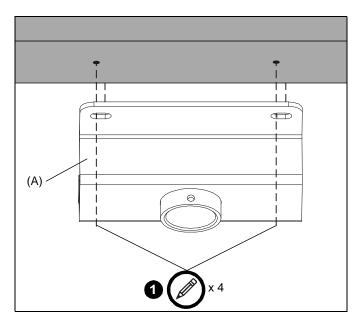


Figure 1

- Drill 1/4" diameter pilot holes into wood joists (See Figure 2). Ensure pilot holes are straight.
- Install and tighten four 3/8" x 2-1/2" (minimum) Grade 2 lag screws (not included) through CMA330 (A), into wood joist (See Figure 2). See Figure 3 for dimensions details.

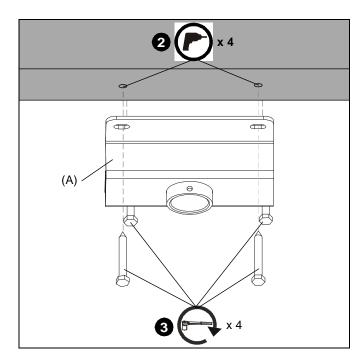


Figure 2

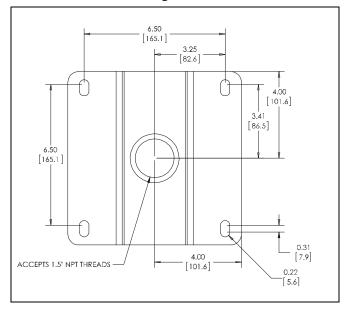


Figure 3

#### Installing to a Suspended Ceiling

NOTE: The CMA mount may be suspended from four 3/8 in. diameter ASTM A307 or better threaded rods (not provided) which are secured to a 1-5/8" x 1-5/8" 12ga metal framing strut channel (spanning a maximum of 4 feet--not provided) by ASTM A307 or better 3/8" channel nuts (not provided). Threaded rods must have 16 threads per square inch.

- 1. Insert the rods into the four bolt holes in the CMA mount.
- Secure the threaded rods to the CMA mount with ASTM A307 or better 3/8" jam nuts (not provided) and washers (one of each on inside and one of each on outside-not provided). See Figure 3 for dimensions details.

## Installing to a Solid Concrete Ceiling Structure

 $\Lambda$ 

WARNING: The CMA330 is designed to be mounted to a concrete ceiling with a minimum thickness of 8" and a maximum drywall covering of 5/8".



**WARNING:** Fischer Ux10 anchors (not provided) must be installed into structurally sound solid concrete. Installation into hollow concrete block, mortar, or concrete that exhibits cracking, spalling, or other defects may result in failure of anchor and serious personal injury or damage to equipment.

- Use four Ux10 anchors (not provided) to secure CMA mount into solid concrete ceiling. See Figure 3 for dimensions details.
- Place CMA mount over anchors, aligning bolt holes in CMA mount with installed anchors.
- Secure CMA mount to ceiling using four 3/8" Grade 2 flat washers (not provided) and four 3/8" x 2 1/2" Grade 2 bolts (not provided) tightened over anchors.

#### Installing Extension Column



**WARNING:** Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the CMA330 does not exceed 500 lbs (227 kg).

- 1. Route cables through extension column (not included).
- Install 1-1/2" NPT following ANSI/ASME B1.20.1 (Schedule 40, 0.154" minimum thickness aluminum - ASTM B221) threaded extension column (not included) into CMA330 until tight, with a minimum of four threads engaged.
- Secure extension column by one of the following methods (See Figure 4):
  - Install one 5/16" x 3/8" set screw (C) into threaded hole, tightening firmly against column.
  - OPTIONAL: Install one 5/16" x 1/4" security set screw
    (D) into threaded hole, tightening firmly against column.

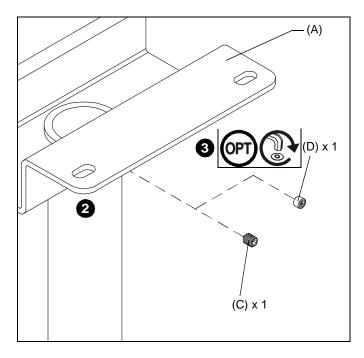


Figure 4

Complete installation following mount installation instructions.

Installation Instructions CMA330

CMA330 Installation Instructions



Our Mounts. Your Vision.

Chief Manufacturing, a products division of Milestone AV Technologies

8800-002140 Rev03 ©2012 Milestone AV Technologies, a Duchossois Group Company www.chiefmfg.com 11/12 **USA/International** 

**Europe** 

A 6436 City West Parkway, Eden Prairie, MN 55344

**P** 800.582.6480 / 952.225.6000

**F** 877.894.6918 / 952.894.6918

A Franklinstraat 14, 6003 DK Weert, Netherlands

P +31 (0) 495 580 852

**F** +31 (0) 495 580 845

Asia Pacific A Office

A Office No. 1 on 12/F, Shatin Galleria 18-24 Shan Mei Street

Fotan, Shatin, Hong Kong

**P** 852 2145 4099

F 852 2145 4477

